


REVISED 2021-04-26

PACKAGE CONTENTS


PART	DESCRIPTION	QUANTITY	Stock Part#
A	Ceiling Canopy	1 pc	N/A
B	Center Column	1 pc	
C	Socket Assembly	1 pc	
AA	Crossbar Assembly (Pre-assembled to Ceiling Canopy)	1 pc	
BB	Wire Connector	3 pcs	
CC	Outlet Box Screw	2 pcs	

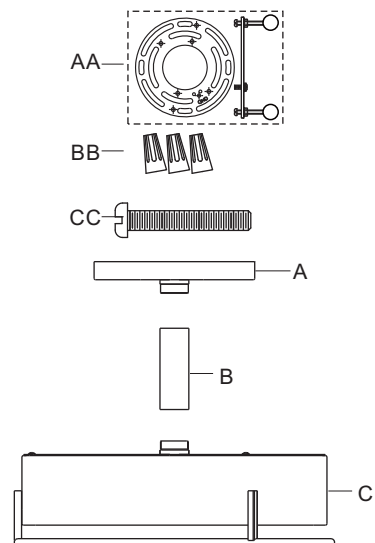

Questions, problems, missing parts?

Before returning to your retailer, call our customer service at 1-800-645-3184, Monday - Friday, 7:00 a.m. - 4:00 p.m., CST.

HARDWARE CONTENTS **Note: Hardware is not shown to actual size.**

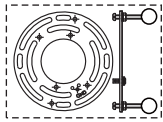

AA Crossbar Assembly
x 1



BB Wire Connector
x 3



CC Outlet Box Screw
x 2

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING:

- Turn off electricity at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- Be careful not to damage or cut the wire insulation (covering) during fixture installation. Do not permit wires to contact any surface having a sharp edge. To do so may damage or cut the wire insulation, which could cause serious injury or death from electric shock

CAUTION:

- All electrical connections must be in agreement with local codes, ordinances or the national electric code (NEC). Contact your municipal building department to learn about your local codes, permits and/or inspections.
- Risk of fire – most dwellings built before 1985 have supply wire rated for 140°F/60°C. Consult a qualified electrician before installation.
- Do not connect this fixture to an electrical system that does not provide a means for equipment grounding. Never use a fixture in a two-wire system that is not grounded. If you are not sure your lighting system has a grounding means, do not attempt to install this fixture. Contact a qualified, licensed electrician for information with regards to proper grounding methods as required by the local electrical code in your area.
- If a dimmer control switch is used with this fixture, obtain professional advice to determine the correct type and electrical rating required.

PREPARATION

Before beginning assembly, installation or operation of product, make sure all parts are present. Compare parts with package contents list and diagram on previous page. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts


Bulb Recommended: LED-30W

Tools required for assembly (not included): Screwdriver, Phillips Screwdriver, Pliers, Electrical Tape, Safety Glasses, Ladder.

ASSEMBLY INSTRUCTIONS

STEP 1:

- Remove the mounting balls and the crossbar assembly (AA) from the ceiling canopy (A). Refer to the diagram in **Step 3**.
- Pass the supply wires and the ground wires through the ceiling canopy (A) and the center column (B).
- Thread the ceiling canopy (A), the center column (B) and the socket assembly (C) together as shown. Hand-tighten until snug.

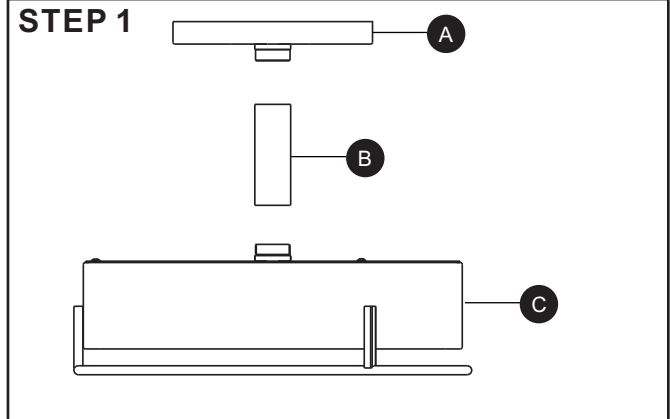


STEP 2:

- Secure the crossbar assembly (AA) to the outlet box (not included) with the outlet box screws (CC).
- Tighten until snug.

Note:

The preassembled mounting screws on the crossbar assembly (AA) should protrude outward.

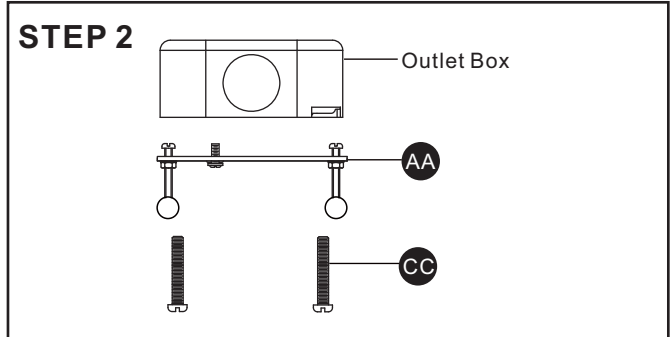


STEP 3:

- Fit the ceiling canopy (A) to the crossbar assembly (AA) and secure with the mounting balls.

Note: The ceiling canopy should be snug against the ceiling and the mounting balls.

- If this does not work, adjust the length of the mounting screws on the crossbar assembly (AA) by unscrewing the preassembled hex nuts.
- Then, screw the mounting screws in or out of the crossbar until the desired length is achieved.
- Once the ceiling canopy (A) is secure, remove the mounting balls and ceiling canopy (A) and proceed to Step 4.

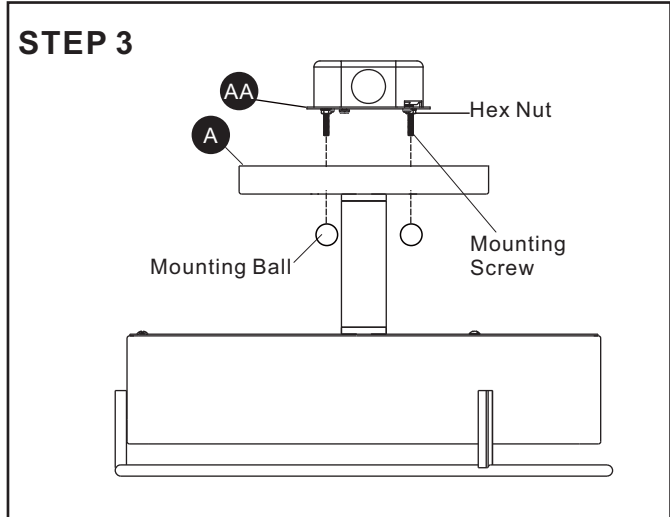

ASSEMBLY INSTRUCTIONS

STEP 4:

* Use the wire connectors (BB) to connect the wires.


a) Ground Wire:

1. Wrap the supply **ground wire** around the **green ground screw** on the mounting bracket, no less than 2 inches from the end of the wire. Tighten the **ground screw**.
2. Connect the fixture **ground wire** to the **supply ground wire** with a wire connector (BB).

b) Supply Wire:

1. Connect the **supply white wire** to the **white fixture supply wire** with a wire connector (BB).
2. Connect the **supply black (or red) wire** to the **black fixture supply wire** with a wire connector (BB).
3. Wrap each connection with approved electrical tape and carefully insert all of the connected wires into the outlet box.


STEP 4

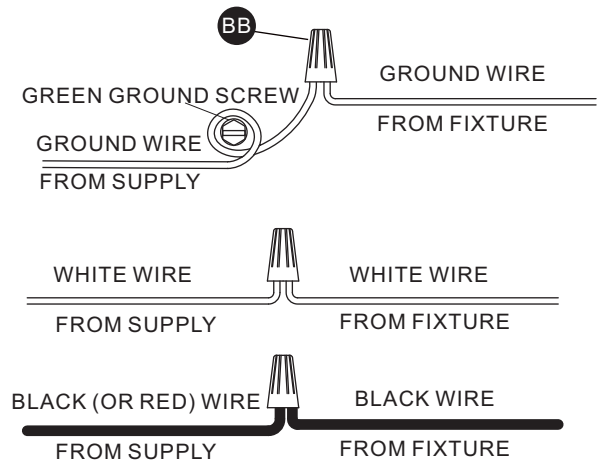

STEP 5:

- a. Re-attach the ceiling canopy (A) to the crossbar assembly (AA).
- b. Secure with the previously removed mounting balls.

STEP 5

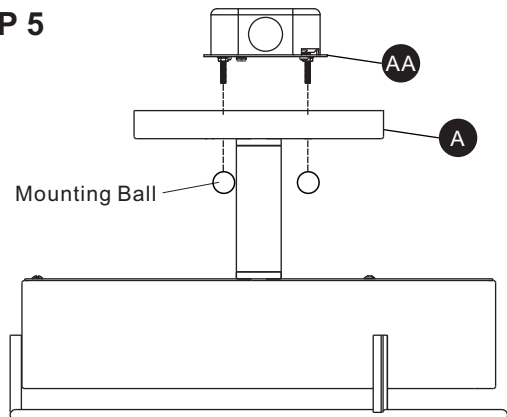

Your installation is now complete! Restore electricity and save this sheet for future reference.

CARE AND MAINTENANCE

- To clean, turn off and wipe with a damp, non-abrasive cloth.

TROUBLESHOOTING

1) The lights will not turn on:

- a) Make sure the wall switch and circuit breaker are on.
- b) Make sure the wiring is correct.

2) Fuse blows or circuit trips when light is turned on.

- a) Check for crossed wires, ensure wiring is correct.

If unable to fix any of the above issues, please consult a certified electrician.

FIVE-YEAR LIMITED WARRANTY: If, during normal use, this PATRIOT LIGHTING® light breaks or fails due to a defect in material or workmanship within five (5) years from the date of original purchase, simply bring this light with the original sales receipt back to your nearest MENARDS® retail store. At its discretion, PATRIOT LIGHTING® agrees to have the light or any defective part(s) repaired or replaced with the same or similar PATRIOT LIGHTING® product or part, free of charge, within the stated warranty period, when returned by the original purchaser with the original sales receipt. This warranty; (1) excludes expendable parts; (2) shall be void if this tool is used for commercial and/or retail purposes; and (3) does not cover any losses, injuries to persons/property or costs. This warranty does give you specific legal rights and you may have other rights, which vary from state to state.



Questions, problems, missing parts?

Before returning to your retailer, call our customer service at 1-800-645-3184, Monday - Friday, 7:00 a.m. - 4:00 p.m., CST.