

SENCOR®

Let's live!

**BLUETOOTH SPEAKER
SSS 6600N**

**USER'S MANUAL
EN**



Table of Contents

1. Supply content.....	4
2. Description of the BT speaker	4
3. Putting into operation.....	7
4. Connecting to another device.....	7
5. Bluetooth connection	7
6. NFC feature	8
7. Connection using the USB connector.....	8
8. Audio AUX-IN	9
9. Remote control	9
10. Technical specifications	10

Safety Instructions

This product has been designed with the utmost safety in mind.

However, incorrect use may lead to electric shock or fire. This is why users should observe the following instructions when using this device.

This device uses a semiconductor unit and contains no user serviceable parts. Do not disassemble this device, otherwise you are exposed to the risk of electric shock. If any damage to this product occurs, please have this product repaired by a qualified service technician.

Power source

Power supply of this unit must be match the serial plate data.

Heat source

Keep this unit out of heat sources like stove or direct sunlight.

Cleaning

Prior to cleaning, please disconnect power first. For cleaning, don't use liquid detergents or caustic liquids - just clean the unit with a soft cloth.

Heavy objects

Do not place heavy objects on the unit, otherwise damage might occur.

Connecting other devices

Before connecting other devices to this unit, please make sure to disconnect power. Otherwise damage to the unit or personal injury might occur.

Faults to be repaired

If any of the following problems occurs, please disconnect power to the unit and contact a qualified service technician.

- A. Power cord or plug is damaged.
- B. Liquids or other foreign objects have penetrated inside the product.
- C. If the unit does not work even if it's being operated according to the instructions, don't press any buttons other than those described in these instructions. Otherwise, damage to this unit may occur along with a more demanding repair.
- D. This unit has fallen on the ground from a big height.
- E. Burns can be smelled from the product inside.

Maintenance

If you don't have enough technical knowledge necessary to maintain this unit, don't attempt to repair it by yourself. By removing cover, you are exposed to a risk of electric shock. If needed, please contact a qualified service technician.

Replacement of parts

If you need to replace any part of this unit, ask your service technician to make a replacement for equal spare part models. If other spare part models are used for replacement, serious damage, electric shock or shortening the unit's lifetime may occur.

Safety check

When done with the maintenance, ask your service technician to perform an on-site safety check to make sure that the unit's operation is safe.

Note:

 
Before using this product, read these instructions carefully and keep it well for future use.

1. Supply content


BT speaker
Remote control
3.5 mm Audio jack cable
User's manual

2. Description of the BT speaker


a) Top View

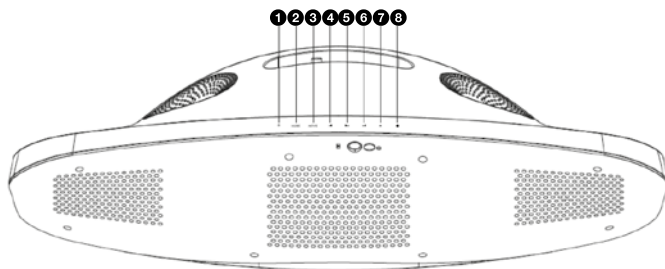

 b) Front View

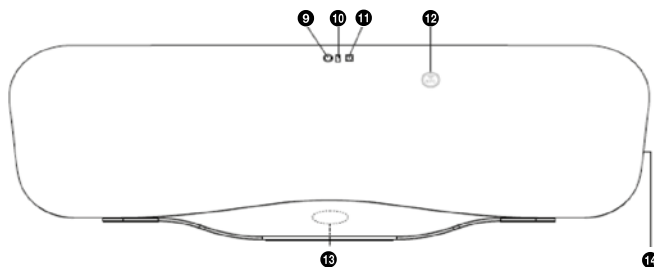


 c) Back View

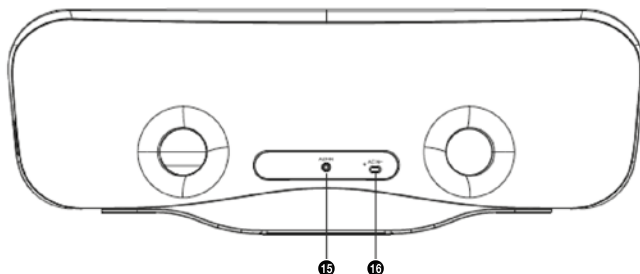

- ❶ **Power On/Standby Button**
Press to turn on/off the unit
- ❷ **MODE Button**
Press repeatedly to select playing input (Bluetooth, USB, AUX-IN)
- ❸ **MOVIE Button**
Press to choose movie surround mode
- ❹ **Play/Pause ►|| button**
Press to play or pause the current track
When there is a phone call, press to answer or end call.
- ❺ **◀◀ Button**
Press once to return to the beginning of current track or previous track.
- ❻ **▶▶ Button**
Press once to advance to the next track.
- ❼ **- Button**
Press to adjust volume level down.
- ❽ **+ Button**
Press to adjust volume level up.
- ❾ Microphone
- ❿ Mode indication light
- ⓫ Remote Sensor
- ⓬ NFC Tab Area
- ⓭ Pilot Lamp(light in blue)
- ⓮ USB Port
- ⓯ AUX-IN input (3,5 mm)
- ⓰ AC Power Cord

 d) Remote control

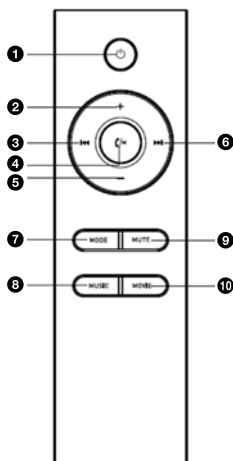**1 Power On button**

Press to turn the appliance on/off

2 Volume increase "+"

Press to increase volume.

3 Previous ◀◀

Press to return to the beginning of the track or previous track.

4 Play/Pause

Press to play / stop actual track. Press to accept / terminate incoming call.

5 Lower Volume "-"

Press to lower volume.

6 Next ▶▶

Press to go to the next track

7 MODE

Press repeatedly to select playing input (Bluetooth, USB, AUX-IN)

8 MUSIC Button

Press to select the initial setting for playing music.

9 Mute

Press to switch mute function on/off.

10 MOVIE

Press to select the 3D sound function.

3. Putting into operation

Before first use, be sure to read the safety instructions contained in this user's manual carefully. Before the first use, please connect the BT speaker to your power outlet. Press the power On button on the BT speaker to turn the speaker on. Hold down the power On button on the BT speaker's top panel to turn the BT speaker off.

4. Connecting to another device

To select the connection mode, press the MODE button. Press to switch among Bluetooth, USB and AUX-IN modes. LED on the BT speaker's front panel indicates the active connection mode:

- a) Blue LED: active Bluetooth connection mode (flashing blue LED indicates searching for a device to pair); searching for a device to pair is indicated by acoustic signal.
- b) Blue + green LED: active connection mode via USB.
- c) Green LED: active connection mode via AUX-IN

5. Bluetooth connection

5.1. Pairing devices via Bluetooth

Turn the BT speaker on, select the Bluetooth connection mode and find the BT speaker's name "SSS6600N" on the device you wish to pair. Start pairing on your device. If you are requested to enter a pairing code while your device and the BT speaker are pairing, use the code: "0000".

Note:

The time required to pair may vary subject to a specific device. When pairing to a new device for the first time, it's always necessary to pair devices according to the above procedure. The device will then be paired automatically when connected next time (if the BT connection on your paired device is enabled). The BT speaker remembers several of the last paired devices. The BT speaker cannot be connected to more than one device at a time. During active Bluetooth connection and successful pairing to a nearby device, the BT speaker is not visible to other devices and cannot be paired to another device.

5.2. Playback using the BT connection

To ensure a stable Bluetooth connection, make sure that the distance between the BT speaker and your connected device is kept within 10m. If there is an incoming call to a paired device, the BT speaker playback will be interrupted during the call. When the call on your device has finished, the BT speaker playback will be restored (with slow volume increase).

**Attention:**

Some connected devices support common volume setting. If some of the connected devices do not support this feature, the volume setting will operate separately on each device. To ensure stable playback, we recommend to use a fully charged device. Due to a wide range of manufacturers, models and software versions, full compatibility with all devices cannot be guaranteed.

6. NFC feature

Enable your device's NFC feature, if equipped, and place your device near the NFC chip on the BT speaker. Follow the instructions on your device. If the connection is established successfully, your device and the BT speaker will be connected automatically.

Note:

Successful pairing using the NFC feature requires that the BT speaker should be switched to the Bluetooth connection mode.

7. Connection using the USB connector

Insert the flash disc in the BT speaker's USB socket and select the USB playback mode. If the unit finds MP3 tracks that can be played, the playback will start. Before disconnecting the USB source from the BT speaker, always make sure that the USB connection mode is disabled with the MODE button (select another connection mode).

Note:

The USB socket allows an external device to be charged while in Bluetooth or AUX-IN connection mode (this feature is not available during USB connection playback). Charging an external device may take longer compared to using a common AC power source.

**Attention:**

With respect to the variety of devices on the market, the compatibility and playability of all media is not guaranteed. Memory devices that you wish to connect should be tested in advance or formatted to the FAT32 file format. It may not be possible to playback protected media, files or content contained on them. Playback tested and unprotected media and content.

8. Audio AUX-IN

The BT speaker is equipped with a 3.5 mm Audio jack to connect your external devices (such as a mobile phone, personal computer, MP3 player) to the BT speaker using an audio cable. When the audio cable is connected to the BT speaker, the BT speaker will automatically switch to the AUX-IN mode (green LED).

Note:

If the BT speaker is paired and a device is connected via a 3.5mm audio jack simultaneously, only the AUX- IN connection will remain active.

**Attention:**

Before connecting your external device to the BT speaker, ensure that the output signal from your device is at its minimum level (minimum output volume). This will prevent the BT speaker from possible damaging.

9. Remote control

The remote control is equipped with a CR2032 type battery. Should there be any problems with the remote control, make sure that the battery is correctly positioned and its contact with remote is not interrupted by a protective tape/cover.

10. Technical specifications

SSS 6600N

Easy connection through NFC technology
DSP digital sound processor

Sound:

Output power: 70 W (Impedance: 4 Ω central, 6 Ω subwoofer)
Frequency response: 50 Hz - 20 kHz
Total harmonic distortion: $\leq 1\%$
3 speakers (2 central + 1 subwoofer)

Inputs:

Bluetooth Audio 4.0
CSR Bluetooth chip (for clearer, stable and high-quality sound transmission)
Bluetooth range: within 15m
Audio line input (3.5mm stereo Jack)
USB input for playback

Other:

LED status indicator
Supports Hands-free telephoning
USB charging for mobile devices (1 A)
Accessories: remote control (battery CR2032 included), 3.5mm AUX cable, manual
Power source: AC 100-240V~50/60 Hz
Power consumption in stand-by mode: ≤ 0.5 W
Dimensions: 539 x 170 x 219 mm
Weight: 3,800 g

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



The product meets EU requirements.

Hereby, FAST ČR, a.s. declares that the radio equipment type SSS 6600N is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: www.sencor.eu

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.

The original version is in the Czech language.

Address of the manufacturer: FAST ČR, a.s., Černokostelecká 1621, Řiřany CZ-251 01

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.eu for detailed information about authorized service centers.