


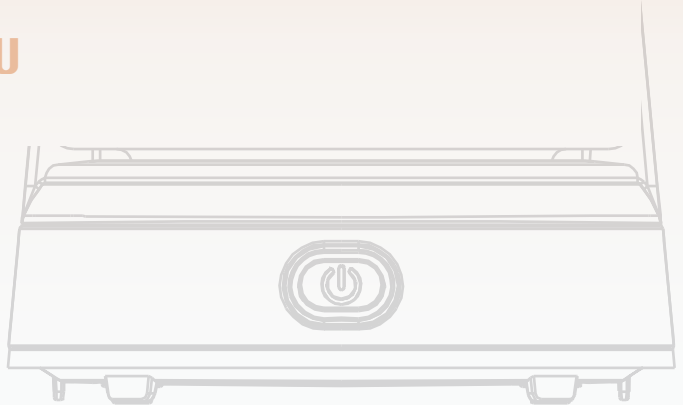

# COFFEE MAKER INSTRUCTION MANUAL

GECMA409-U



Dear Gevi customer

Thanks for purchasing our Gevi products.

Gevi has focused on creating perfect home appliances for our customers. In the past few years, it took us time to do lots of researches and many prototypes to achieve our goal. We would like to give you a different user experience.

If you want FAQs and more information, please feel free to contact us.

## IMPORTANT SAFEGUARDS

Read these instructions carefully and keep it for future use. If this appliance is passed to a third party, then these instructions must be included.

Before using the electrical appliance, some basic precautions should always be followed including the following:

- 1. Read all instructions.
- 2. Do not touch hot surfaces. Use handles or knobs.
- 3. To protect against fire, electric shock and injury to persons do not immerse cord, plugs, base or kettle in water or other liquid.
- 4. Close supervision is necessary when any appliance is used by or near children.
- 5. Unplug from outlet when either the appliance or display clock is not in use, and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- 6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- 7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- 8. Do not use outdoors (this item may be omitted if the

product is specifically designed for outdoor use).

—9. Do not let cord hang over edge of table or counter, or touch hot surfaces.

—10. Do not place on or near a hot gas or electric burner, or in a heated oven.

—11. To disconnect, turn any control to off position, then remove plug from wall outlet.

—12. Do not use appliance for other than intended use.

—13. Special instructions covering lid placement and removal. Wording may vary.

—14. Do not clean container with cleansers, steel wool pads, or other abrasive material.

—15. Scalding may occur if the lid is removed during the brewing cycles.

—16. A. The container is designed for use with this appliance. It must never be used on a range top. (Unless specific instructions for use on a range top are provided and include the precautions to be observed.)

B. Do not set a hot container on a wet or cold surface.

C. Do not use a cracked container or a container having a loose or weakened handle.

D. Do not clean container with cleansers, steel wool pads, or other abrasive material.

E. Scalding may occur if the lid is removed during the brewing cycles.

- 17. The instructions for all appliances shall include:
- a statement that the heating element surface is subject to residual heat after use.

## SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY .

### SPECIAL NOTES ON PLUG


This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet in only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

### SHORT CORD INSTRUCTION

- a) A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk of entanglement or tripping over a long cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a longer detachable power-supply cord or extension cord is used:

- 1) The marked electrical rating of the cord set or extension cord should be at least as large as the electrical rating of the appliance;
- 2) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

## KNOW YOUR COFFEE MAKER

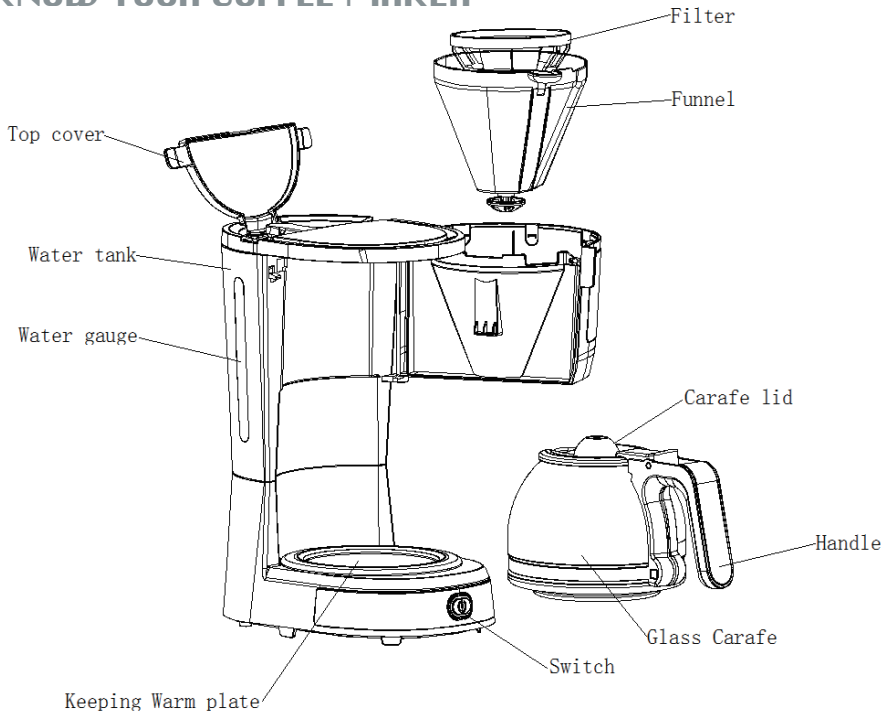

Electrical parameters: 120V~ 60Hz 700W

## BEFORE THE FIRST USE

Check all accessories are complete and the coffee maker is fine. Add water into water tank to the MAX level and brew water for several times without coffee powder, then pour out water. Clean all detachable parts thoroughly with water.

## USE YOUR COFFEE MAKER

1. Open the top cover and fill the water tank with fresh water. The water level should not exceed MAX level as indicated on the water level gauge.
2. Add coffee powder into filter. Usually a level spoon(7g coffee powder) can brew a cup of coffee(150ml) but you can adjust according to personal taste. 40g coffee powder is the maximum. Assemble the filter with coffee powder into the funnel, and make sure the funnel is fitted properly, otherwise the top cover can not be closed. Finally, close the top cover.
3. Insert the carafe on the warming plate horizontally and make sure the carafe lid is close.
4. Plug the power cord into the outlet.
5. Press Power button, the indicator will be illuminated. The coffee maker will begin working.
6. You can press Power button to stop brewing. The coffee maker will continue brewing by pressing the Power button again.

**Note:** You can take out carafe, pour and use at any time. After more than 30S, the coffee machine will automatically stop dripping.

**Caution:** DO NOT touch cover, warming plate when operating as they are very hot.

7. When finished, if you do not want to serve immediately, keep the switch on, the coffee can keep warm in the warming plate and the coffee maker will be cut off automatically after two hours. For an optimal coffee taste, we suggest to serve it just after brewing.

**Note:** Please make sure the carafe is not empty when keeping warm to avoid dry boiling.

8. Take out carafe to serve when finish brewing (about one minute later after the coffee stops dripping out.)

**Note:** The coffee you get will less than the water you have added, as some water is absorbed by coffee powder. DO NOT touch cover, warming plate when operating as they are very hot.

9. Always turn off the coffee maker and disconnect the power supply when not use.

**Note:** Pay attention to pour the coffee out, otherwise you may be hurt as the temperature of coffee just finished is high.

## CLEANING AND MAINTENANCE

**CAUTION:** CAUTION: Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or device in water or liquid. After each use, always make sure unplug from wall outlet firstly.

1. Clean all detachable parts in a hot descaling solution after each use.
2. Wipe the product's exterior surface with a soft, damp cloth to remove stains.
3. Water droplets may buildup in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use of the product.
4. Wipe the warming plate gently with a damp cloth. Never use abrasive cleaner to clean it.
5. Replace all parts and keep them for next use.
6. Any other repairs should be performed by an authorized service representative.

## REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, you should clean away the mineral deposits left by the water regularly according to the water quality in your area and the frequency of use. If the mineral deposit is excessive, the appliance will represent the following signs:

1. Fill the tank with water and descaler to the MAX level (the proportion of water and descaler is 4:1, details refers to the instruction of descaler. Please use “household descaler”, you can use the citric acid (obtainable from chemist’s or drug stores) instead of the descaler (one hundred parts of water and three parts of citric acid).
2. Make sure the filter is free of coffee powder.
3. Press Power button, the indicator will be illuminated. The appliance will begin working.
4. Make about two cups of coffee.
5. Press the power button again to immediately stop the coffee machine and allow the descaler to stay in it for at least 15 minutes.

6. Restart the coffee maker and repeat the steps of 4-6 at least 3 times.
7. Then brew coffee with tap water (no coffee powder), repeat steps 4-6 3 times (step 6 does not need to wait 15 minutes), and then brew until the water tank is empty.

## ENVIRONMENT FRIENDLY DISPOSAL

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal center.