



S M E G

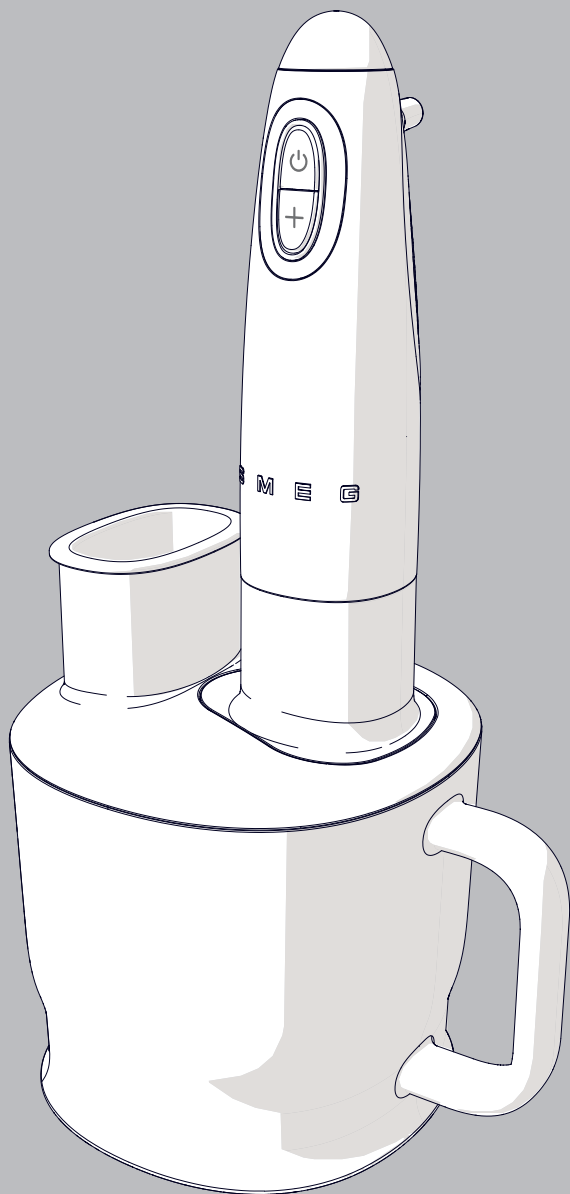

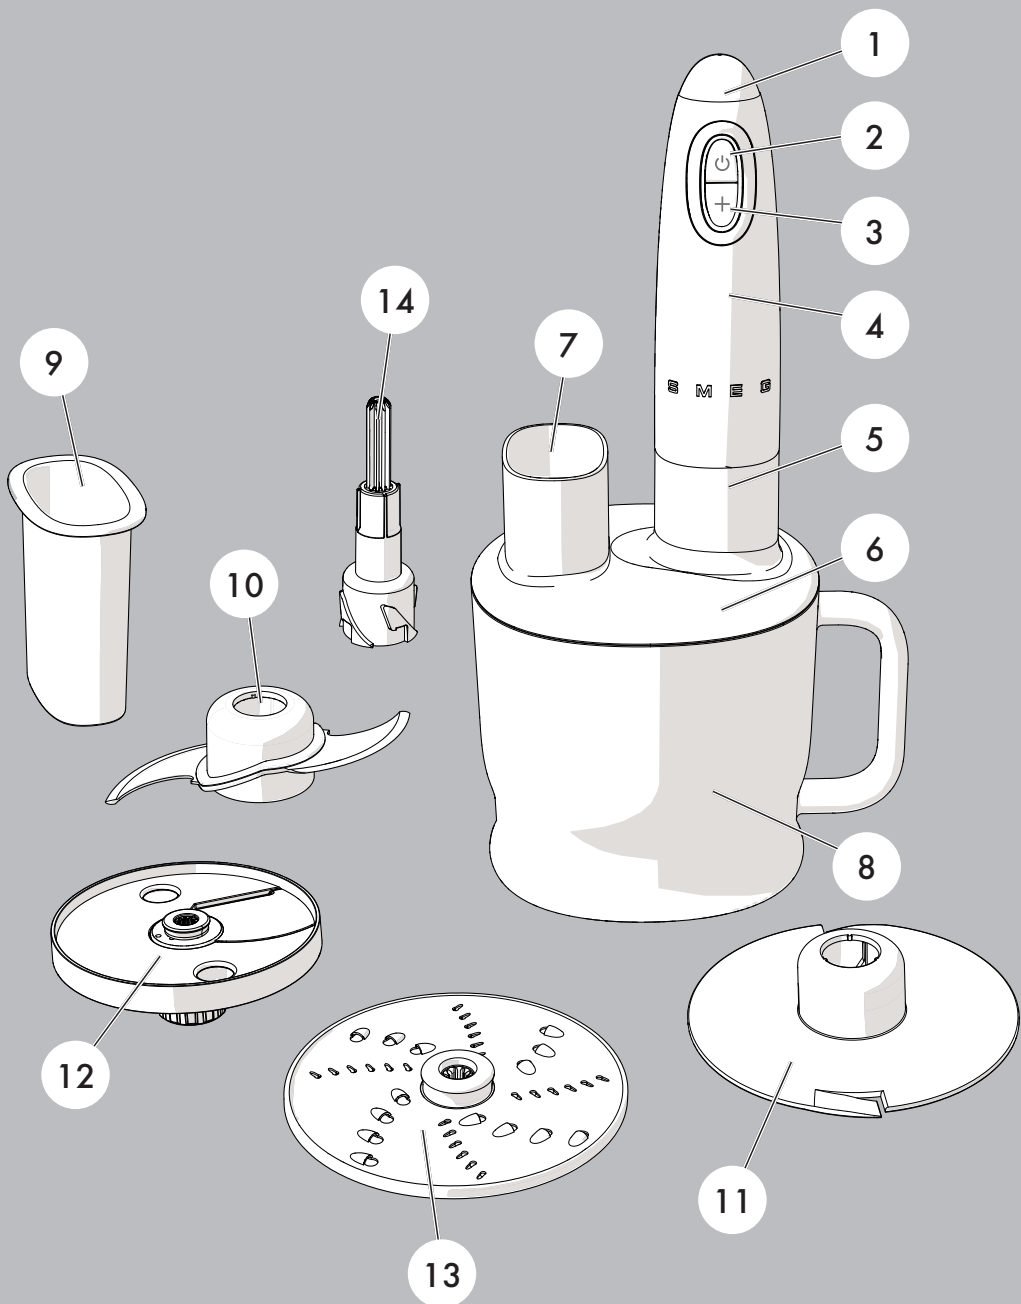

HBFP01

- 1) Speed selector\*
- 2) ON/OFF button\*
- 3) TURBO button\*
- 4) Motor body\*
- 5) Gearbox
- 6) Lid
- 7) Feed chute
- 8) Bowl
- 9) Food pusher
- 10) S-shaped blade
- 11) Emulsifier disc
- 12) Variable slicing disc
- 13) Reversible shredding disc
- 14) Accessory holder

\*The motor body is not included and may be purchased separately.

Dear Customer,

Thank you for purchasing this Smeg 50's Style food processor.

We hope you enjoy using your new appliance!

220-240V~ 50/60Hz 700W

Smeg S.p.A. Via Leonardo da Vinci, 4 - 42016 Guastalla (RE) - Italy

## IMPORTANT SAFEGUARDS

- **WARNING:** If the instructions contained in this manual are not followed precisely, fire or explosion may result causing property damage, personal injury or death.
- **READ AND SAVE THESE INSTRUCTIONS - Your safety and the safety of others are very important. We have provided many important safety messages throughout this manual and on the appliance. Read all the instructions before using the appliance and always obey all safety messages.**

- **RECOGNIZE SAFETY INFORMATION**

This is a safety alert symbol. This symbol alerts you to potential hazards that can result in severe personal injury or death.

- **UNDERSTAND SIGNAL WORDS**

A signal word - DANGER, WARNING or CAUTION - is used with the safety alert symbol. DANGER denotes the most serious hazards. It means you could be killed or seriously injured if you do not immediately follow the instructions.

WARNING means you could be killed or seriously injured if the instructions are not followed. CAUTION indicates a potentially hazardous situation, which, if not avoided, could result in minor to moderate injury.

- This appliance is intended for use in the home only.
- Use this appliance only for its intended purpose. The manufacturer cannot be held liable for damage caused by improper use of this appliance.
- This appliance complies with current safety regulations. Improper use of this appliance can result in personal injury and material damage.
- Read all the instructions before installing or using the appliance for the first time.
- Keep these operating instructions in a safe place and pass them on to any future user.
- The safety messages will inform you of potential hazards, on how to avoid the risk of injury and what can occur if the instructions are not followed.

**IMPORTANT: Observe all codes and ordinances in force.**

**WARNING: For your safety, the instructions contained in this manual must be followed to minimize the risk of fire or explosion and to prevent property damage, personal injury or death.**

- Do not store or use gasoline or other flammable vapors, liquids or materials near this or any other appliance.

**NOTE:** This appliance is NOT designed for installation in manufactured (mobile) homes or in recreational vehicles (RVs).

- **DO NOT install this appliance outdoors.**

**WARNING: To reduce the risk of fire, electrical shock, personal injury, or damage when using the appliance, follow basic safety precautions, including the following:**

Follow all safety instructions for using the appliance safely.

Read this user manual carefully before using the appliance.

- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way (for US models only).
- Unplug the appliance immediately after use.
- Do not leave the appliance unattended while it is operating.
- Unplug the appliance as soon as you have finished using it and before cleaning it.
- Do not immerse the appliance, the power cord or the plug in water or any other liquid.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- Keep the power cord away from sharp edges.
- To unplug, grasp the plug and pull from the outlet.
- Do not place the appliance above or near lit gas or electric burners, inside an oven or near other heat sources.
- Do not try to repair the appliance yourself or without the assistance of a qualified technician.
- In the event of a fault, repairs should only be carried out by a qualified technician.
- Do not modify the appliance.
- Never try to put out a fire or flames with water: turn off the appliance, remove the plug from the socket and smother the flames with a fire blanket or other appropriate cover.
- Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- This appliance should not be used by children and care should be taken when used near children.
- Children must never play with the appliance. Keep the appliance out of reach of children.
- Keep hands and utensils away from moving blades or discs while processing food to reduce the risk of severe injury to persons or damage to the food processor. A scraper may be used but must be used only when the food processor is not running.
- Blades are sharp. Handle carefully.
- Be certain cover is securely locked in place before operating appliance.
- Never feed food by hand. Always use food pusher.
- Do not attempt to defeat the cover interlock mechanism.
- Do not fill the bowl above the marked maximum fill line (or rated capacity) to avoid risk of injury due to damage to the cover or bowl.
- Moving Parts. Keep fingers out of discharge opening.
- Regarding the Cleaning and Care, please refer to the last page.

## GENERAL SAFETY WARNINGS

These instructions can also be download from Smeg website [www.smeg.com](http://www.smeg.com)

### THE FOOD PROCESSOR IS AN ACCESSORY OF THE HAND BLENDER

Follow all the safety warnings to ensure safe use of the appliance.

- Before using the food processor, carefully read this user manual and the user manual supplied with the hand blender.
- Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Do not allow children to use the blender without supervision
- Do not use the food processor if the power cord or plug of the hand blender is damaged or if the appliance has been dropped or damaged in any way. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard
- Make sure the power cord does not come in contact with sharp edges.
- Do not pull on the cord to remove the plug from the socket.
- Do not use adapters or extension cords.
- Do not make any changes to the appliance.
- Never try to extinguish a flame/fire with water: turn off the appliance, unplug it from the outlet and cover the flame with a lid or a fire blanket.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not allow children to play with the plastic packaging bags.
- The use of this appliance is not intended for persons with reduced physical, sensory or mental capabilities or who lack experience and knowledge in using electrical devices, unless they are supervised or instructed by adults responsible for their safety.
- During operation, avoid contact with the moving parts. Keep hands, hair, clothing and tools away from moving parts during operation to prevent personal injury and/or damage to the appliance.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Do not use to blend oils or greases at high temperatures.
- Do not use the hand blender in combination with the food processor continuously for more than 1 minute.
- Do not start the hand blender if the food processor bowl is empty.
- Do not push the ingredients into the feed chute of the food processor using your fingers or other tools. Use only the supplied food pusher.
- Do not exceed the maximum capacity level of the food processor bowl.
- Do not use the food processor in combination with parts or accessories from other manufacturers.
- Use only original spare parts from the manufacturer. The use of spare parts not recommended by the manufacturer may cause fire, electric shock or injury to persons.
- Avoid spraying liquids on the motor body and the cord of the hand blender or submerging it. Immediately unplug the hand blender from the power outlet if it comes into contact with liquids and dry it thoroughly: Risk of electric shock!
- Let the food processor cool down before cleaning.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.

# SAVE THESE INSTRUCTIONS

## INTENDED USE

- Use the food processor only in combination with the hand blender models of the manufacturer's HBF line. For complete information on using the hand blender, refer to the instruction manual provided with the appliance.
- Only use the food processor indoors.
- The food processor is intended solely for household-type use.
- The food processor, thanks to its provided accessories, may be used to blend, chop, mix and emulsify various ingredients.
- Do not use the food processor for purposes other than its intended use.
- The appliance is not designed to work with external timers or remote control systems. Monitor the appliance continuously during use.

**WARNING: This product contains a chemical known by the State of California to cause cancer, birth defects or other reproductive harm.**

**This appliance can cause low-level exposure to some of the substances listed, including benzene, formaldehyde, carbon monoxide, toluene, and soot.**

## MANUFACTURER'S LIABILITY

The manufacturer accepts no liability for damage to persons and property caused by:

- Using the appliance in ways other than those provided;
- Not reading the user's manual;
- Tampering with any part of the appliance;
- Using non-original parts;
- Ignoring safety warnings.

## DISPOSAL

This appliance should be disposed of separately from other waste (Directive 2012/19/EU).

This appliance does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives.

## WARNING

Power voltage

### Risk of electric shock

- Deactivate the main power supply.
- Unplug the unit from the wall socket.

**Old electrical equipment must not be disposed of with household waste!**

In accordance with the law in force, electrical appliances at the end of their life should be taken to separated collection facilities for electrical and electronic waste. This is so that valuable materials from old appliances can be recycled and the environment can be protected. For more information, please contact your local authorities or a separated collection recycling center.

Note that non-polluting and recyclable materials are used for packaging the appliance.

Dispose of the packaging materials at appropriate differentiated waste collection centers.

## WARNING

Plastic packaging

### Risk of suffocation

- Do not leave the packaging or any part of it unattended.
- Do not allow children to play with the plastic packaging bags.

## DESCRIPTION OF THE PARTS

### S-shaped blade

This steel blade allows you to grind, chop, blend and mix large quantities of ingredients.

### Emulsifier Disc

Particularly suitable for whipping cream and egg whites, or for emulsifying sauces of various types.

### Reversible shredding disc

The shredding disc can be used to grate vegetables, fruit, shelled nuts, chocolate and cheese. It has two different sizes for fine or coarse grating.

### Variable slicing disc

Can be used to slice most foods. The blade thickness can be adjusted from 1 to 6 mm.

To adjust the thickness, grasp the edge of the disc on the side opposite the blade with one hand and rotate the circular pin with the other hand until the desired thickness is selected.

### Food pusher

Facilitates the introduction of food into the food processor bowl

### 1.5 quarts (1.5 l) bowl BPA-free

Large bowl, for processing large quantities of ingredients

## USE

### Preparation for use

Thoroughly wash any parts that may come into contact with food before using the appliance for the first time.

## USING THE DEVICE

### INFO

The accessory holder must be used with the supplied discs. Improper use may damage the parts.

- Place the accessory holder (14) on the pin in the center of the bowl (8).
- Place the desired accessory (10, 11, 12, 13) on the provided holder.

## WARNING

### Danger of cutting

The blades are extremely sharp, place them into position by grasping the plastic parts and keep your fingers away from the blades.

- Place the lid (6) in position on the bowl (8). To close the lid, grasp the feed chute (7) and turn it counterclockwise.
- Place the gearbox in position (5) in the food processor and press down to attach it. Insert the motor body (4)\*, in the gearbox: when it is in the correct position, it will click into place.

- Insert the ingredients through the feed chute (7) pressing with the food pusher (9) in a careful and uniform way. Do not use any other tools to add or push food.
- Switch the appliance on by pressing the ON / OFF (2) or the TURBO (3) button.
- Adjust the speed by turning the speed selector (1)
- \*The motor body is not included and may be purchased separately.

## GUIDE FOR THE PROCESSING INGREDIENTS

Accessory type	Ingredients	Speed	Quantity	Time
S-shaped blade (input power test)	Taikoo sugar	Turbo	200g	Operate for 10s on followed by 2 min off, for 3 cycle
	egg		One(about 56g)	
	maltose		230g	
Reversible shredding disc	Carrots	Medium/High	1-2 carrots at a time depending on size	10 seconds
	Zucchini/ Courgettes	Medium/High	1-2 zucchini/courgettes at a time depending on size	10 seconds
	Cheese	Turbo	1-2 pieces at a time depending on size	10 seconds
Variable slicing disc	Carrots	Medium/High	1-2 carrots at a time depending on size	10 seconds
	Zucchini/ Courgettes	Medium/High	1-2 zucchini/courgettes at a time depending on size	10 seconds
	Onions	Medium/High	1 onion cut in half at a time	10 seconds
S-shaped blade	Meat	Turbo	1.5 lb (700 g) cut into 1-inch (2.5 cm) cubes	30 seconds
	Fish	Turbo	1.5 lb (700 g) cut into 1-inch (2.5 cm) cubes	30 seconds
	Nuts	Turbo	0.5 lb (250 g)	20 seconds
Emulsifier disc	Egg whites	Medium	3 eggs	40 seconds
	Whipped cream	Medium	1.5 cups (350 ml)	60 seconds

**NOTE: Egg whites capacity : min 1 max 7**

**Whipped cream liquid capacity: min. 100 ml/ max 600 ml**

**Other liquids capacity: max 1 liter**

**INFO: The results may vary depending on the quality of the ingredients and the consistency you wish to achieve.**

## CLEANING AND MAINTENANCE

For safety reasons, unplug the power cord from the wall outlet immediately after use.

### Cleaning the motor body of the blender\*

- Do not immerse the motor body in water or other liquids.
- Do not use cleaning products containing chlorine, ammonia or bleach on parts with metallic surface finishes (e.g. anodizing, nickel or chrome plating).

Clean the motor body with a damp cloth using a mild detergent.

\*The motor body is not included and may be purchased separately.

## CLEANING THE FOOD PROCESSOR AND ITS ACCESSORIES

- 1) Remove the gearbox from the lid before cleaning.
- 2) Do not immerse the gearbox in water or wash it in a dishwasher as this may cause damage. Clean the gearbox with a soft, damp cloth and dry thoroughly.
- 3) Carefully remove the S-shaped blade and discs from the food processor bowl before cleaning.
- 4) The S-shaped blade and discs should be cleaned with a soft, damp cloth using a mild detergent. Do not use abrasive sponges on plastic or metal parts that could be scratched.
- 5) The bowl and the lid of the food processor can only be washed on the top rack of the dishwasher. Do not place them on the bottom rack of the dishwasher.

S M E G

MADE IN ITALY

SMEG S.p.A.  
Via Leonardo Da Vinci, 4  
42016 San Girolamo di  
Guastalla (RE)  
ITALY



914778887/D