

TOWER®

T13001

Safety and Instruction Manual

PLEASE READ CAREFULLY



10 Cup Coffee Maker

TOWER®

over 100 years of quality

1912 Midland Metal Spinners was founded by George Cadman, who was then 65 years old, as a metal holloware manufacturing company, in St. Mark's Street, Wolverhampton. They later moved into the Tower and Fort Works in Pelham Street, which ultimately gave rise to the famous Tower brand name.

1937 Tower exhibited some of their latest holloware designs at the British Industries Fair. As you can see from the original poster, their stand No. A410 must have been a great sight as it promoted their "Beautiful, inexpensive, untarnishable Plate, at prices all can afford to pay".



Freshly Made Coffee Shop Taste

There is nothing like a steaming, fresh coffee to start your day right, or perk you up throughout the day and thanks to the Tower Coffee Maker, you can enjoy quick, tasty coffee with minimum fuss!

A warming plate keeps coffee at the perfect temperature while the washable filter preserves the flavour of your coffee. The anti-drip device allows the jug to be removed at any time. Great-tasting coffee, when you want it and how you like it!

1961 Tower became one of the largest manufacturers of aluminium holloware, electric kettles, tea pots and other household articles with over 1,000 employees.

1974 Russell Hobbs took ownership of the expanding Tower brand.



Towerbrand

CONTENTS:

Please read this Manual carefully **BEFORE** using the appliance for your own safety.

Thank you for purchasing this Coffee Maker from the Tower range. It has been designed to provide many years of trouble-free use. There are many benefits to using a Tower Coffee Maker:

- Easy to use – just fill with water and your favourite coffee blend
- Permanent washable mesh filter with integrated handle
- Makes 10 cups of fresh coffee at a time
- The warming plate keeps your coffee at the perfect temperature
- Anti-drip device allows the jug to be removed at any time
- 1.25 litre capacity tank

Contents:

1. Specifications

Components and structure

Technical information

2. Important Safety Information

3. Using your Tower Appliance

4. Trouble Shooting & Faq's

5. Cleaning & Care

6. Recycling

7. Wiring Safety

8. Warranty Information

9. Your Receipt

See back page for Customer Service Information

1 SPECIFICATIONS:

Components

This box contains:

Coffee Maker

Carafe

Filter Mesh Basket Housing

Filter Mesh

Instruction Manual



Structure of your appliance:

- | | |
|------------------|-------------------------------|
| 1. Top Cover | 6. Carafe |
| 2. Water Tank | 7. Filter Housing |
| 3. Water Gauge | 8. Filter Mesh Basket Housing |
| 4. Power Switch | 9. Filter Mesh Basket |
| 5. Heating Plate | |

Technical Data

Description:	10 Cup Coffee Maker
Model:	T13001
Rated Voltage:	220-240V ~ 50/60Hz
Power Consumption:	1000W

Documentation

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

2004/108/EC	Electromagnetic Compatibility Directive.
2006/95/EC	Low Voltage Directive.
2011/65/EU	Restriction of Hazardous Substances Directive.
1935/2004/EC	Materials & Articles in Contact With Food (LFGB section 30 & 31).

RKW Quality Assurance, United Kingdom.

Should you encounter problems or require a replacement part, contact The Tower Customer Service Department on:
+44 (0) 333 220 6066.

Any necessary spare parts may be ordered from the Tower website.

Your warranty becomes void should you decide to use non Tower spare parts. Spare parts can be purchased from www.towerhousewares.co.uk

2 IMPORTANT SAFETY INFORMATION

Please read these notes carefully **BEFORE** using your Tower appliance

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer, its service agent or a similarly qualified person.
- Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- Do not carry the appliance by the power cord.
- Do not use any extension cord with this appliance.
- Do not pull the plug out by the cord as this may damage the plug and/or the cable.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- Switch off and unplug before fitting or removing tools/ attachments, after use and before cleaning.
- Close supervision is necessary when any appliance is used by or near children.
- Children should not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance should not be undertaken by children without supervision.
- Take care when any appliance is used near pets.
- Do not use this product for anything other than its intended use.

- This appliance is for household use only.
- Do not spill liquid onto the base unit. If this happens switch off and unplug from the mains, mop up the liquid and seek advice from a qualified technician.
- This appliance is not intended for commercial use.
- Do not use the glass coffee pot with any other hotplate.
- Do not use the glass coffee pot on an oven hob to heat.
- Always ensure that the lid is tightly closed and that you avoid the steam plume.
- Use only cold water when filling the device.
- Do not touch the coffee pot surface when the appliance is used, use the handle.
- Do not use the appliance if the glass coffee pot is cracked.
- The water level must be between the MAXIMUM and MINIMUM mark.
- Do not site the product under cupboards or near hanging fabric.
- Do not use a separate timer or separate remote device.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the service department:
+44 (0) 333 220 6066

3 USING YOUR APPLIANCE

Before first use:

1. Run the Coffee Maker for the first time without coffee, filling with water to the maximum mark.

Using your appliance:

1. Remove the coffee pot from the warming plate and fill two thirds full with cold water.
2. Open the water tank lid and pour the water in, being careful not to spill the water.
3. When complete place the coffee pot back onto the warming plate and close the water tank lid.
4. Pull out the filter assembly by lifting the top cover.
5. Add the ground coffee to the mesh basket in the filter assembly.
6. Close the filter assembly ensuring that it has closed completely.
7. Plug the appliance in at the wall socket and switch on
8. Switch the appliance on at the ON /OFF switch, the switch will illuminate to indicate that it is working.

NOTE: The brewing process can be interrupted by pressing the switch again at any time and the indicator light will go off indicating the coffee maker is now OFF.

9. When the appliance reaches temperature, the water will drip through the filter and the ground coffee.
10. The carafe takes approximately 3-7 minutes depending on the amount of cups required.
11. The coffee will collect in the coffee pot and the keep warm mode will begin.

Keep Warm:

After brewing, the appliance will automatically switch to the warming mode which will continue to keep your coffee warm for 40 minutes.

After keeping warm for 40 minutes, the appliance will cut off automatically.

Refilling:

Switch off the Coffee Maker and allow it to cool for 3 minutes before refilling with cold water.

Washable Filter:

Your Coffee Maker is fitted with a filter. The filter helps to prevent limescale from getting into your drink.

The filter should be cleaned regularly, in particular if there are noticeable deposits left on it.

To clean the filter, remove it from the Coffee Maker and rinse it under the tap. Allow the filter to dry thoroughly before fitting it back into the Coffee Maker.

Locating the Filter:

The filter is located under the top cover of the Coffee Maker. Lift it out of the Coffee Maker using the handle.

De-scaling:

Important: Failure to de-scale your Coffee Maker may invalidate your guarantee.

If you do not de-scale your Coffee Maker regularly, the build-up of limescale may result in the following:

- Water filtering through more slowly.
- Damage to the heating element.

To minimise scale build-up:

- Empty the Coffee Maker after each use.
- Do not allow coffee to stand in the Coffee Maker overnight.
- Using filtered water instead of tap water will help to reduce limescale build up.
- Follow the instruction on the bottle or sachet.
- To clean the Coffee Maker thoroughly of any de-calcification residues, operate it 3 times using clean water before making coffee.

Note: the permanent filter should be removed before descaling.

How to de-scale:

- Do not use kettle descaler unless it specifically states it is suitable for Coffee Makers.

4 TROUBLE SHOOTING & FAQ'S

Questions	Answers
What kind of coffee shall I use?	Any ground coffee! You can buy pre-ground coffee for filter machines from supermarkets in a variety of different flavours and blends to suit your taste, you can grind your own coffee beans, or you can buy beans from your favourite coffee shop and ask for them to be ground to filter consistency.
How much coffee shall I put in?	We recommended one level measuring spoon (1 tbsp.) for every cup.
What is the maximum quantity?	The Coffee Maker can make 10 cups of coffee at a time. To avoid any possible overflow, do not add more than 15 level measuring spoons of coffee to the Coffee Maker at anyone point.
The coffee takes a long time to run through and overflows into the filter compartment.	You may be using too much ground coffee. See above for recommendations. The ground coffee may be too fine.
The coffee takes longer to brew.	The Coffee Maker may need to be descaled. Refer to the descaling section.
The coffee has an acidic taste.	You have not sufficiently rinsed/cleaner your Coffee Maker after descaling. Refer to the descaling section.
How do you clean the filter?	The filter can be washed out in warm water, however it must be fully 100% dry prior to re-insertion into the product.
Can I put the carafe in the microwave?	No, never put the carafe in the microwave, dishwasher or on a hotplate.

5 CLEANING & CARE

Remove plug from the mains socket and allow the appliance to cool down before cleaning.

IMPORTANT! Never machine wash the filter. Always allow it to air dry.

- Do not immerse the base unit of the appliance in water and ensure no water enters the appliance.
- Clean the base unit by wiping it with a damp cloth. A little detergent can be added if needed.
- Do not use scouring pads, steel wool, any form of strong solvents or abrasive cleaning agents to clean the appliance, they may damage the outside surfaces of the appliance.
- Clean all accessories in warm soapy water. Do not use any scouring pads, steel wool, any strong solvents or abrasive cleaning agents when cleaning accessories.

- You can put the carafe and lid into a dishwasher if required. However do not use a cycle that is over 65°C. Please read your dishwasher instructions for further information of cycles.

IMPORTANT!

After cleaning allow to dry fully before using again.

Do not use the appliance if damp. Ensure the appliance is completely clean and dry before storing

To store your appliance:

1. Unplug power cord from the power outlet and clean as above.
2. Allow the appliance to dry fully.
3. Store on a flat, dry level surface out of reach of children.

6 RECYCLING



DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.


The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

7 WIRING SAFETY FOR UK USE ONLY

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

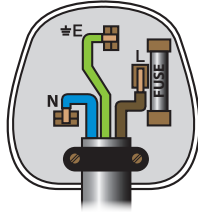


The wires in the mains lead are coloured in accordance with the following code:


Blue neutral [N] Brown live [L]
Green/Yellow [EARTH] 

Plug Fitting Details (Where Applicable).

The wire coloured blue is the neutral and must be connected to the terminal marked [N] or coloured black.

The wire coloured brown is the live wire and must be connected to the terminal marked [L] or coloured red.

The wire coloured green/yellow must be connected to the terminal marked with the letter [E] or marked .

On no account must either the brown or the blue wire be connected to the [EARTH] terminal .

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:
This Appliance **MUST** be Earthed

8 WARRANTY



**We hope that you will enjoy
your Tower Coffe Maker
for many years.
As a thank you for
purchasing one of our
fantastic products,
we are giving you 3 years
peace of mind.**

To receive your 3 year
guarantee, simply register
your appliance
online by visiting

www.towerhousewares.co.uk



This product is guaranteed for 12 months from the date of original purchase.

If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The Following Conditions Apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire Only.

The standard one year guarantee is only extended to the maximum available for each particular product upon registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit www.towerhousewares.co.uk and register with us online. Alternatively, call our customer registration line on +44 (0) 333 220 6066.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year. Extended warranty is only valid with proof of purchase.

9 YOUR RECEIPT

Affix your store receipt to this page for safe keeping.

NOTES

NOTES



TOWER®

thank you!

We hope you enjoy your appliance for many years. As a thank you for purchasing one of our fantastic products, we are giving you an extra 2 years peace of mind.

***To receive your extra 2 years guarantee, register your appliance online by visiting:**

www.towerhousewares.co.uk

Should you have a problem with your appliance, or need any spare parts, please call our Service Department on:
+44 (0) 333 220 6066

Your warranty becomes void should you decide to use non Tower spare parts. Spare parts can be purchased from www.towerhousewares.co.uk



great british design, innovation and excellence since 1912