



10.95" Tablet

Instruction Manual

ACTAB1125





- Before using this product, read all safety instructions carefully first in the Safety Warnings booklet and keep them for future reference.
- For the latest version of the Safety and Instruction Manual, please visit the official website below (other websites may not contain the full and most updated version): **<https://www.currys.co.uk/services/repairs-maintenance/product-service-manuals.html>**

Contents

Safety Warnings	Safety Warnings Booklet	Using Google Play Games	14
Unpacking	4	Using Google Play Books	15
Product Overview	5	E-reader Mode	16
Setup at the First time	6	Introducing Google Kids Space	17
Power On/Off	6	Setting up Google Kids Space	18
Charging Your Tablet	7	Turning off Google Kids Space	19
Connecting to the Internet	7	Turning on Google Kids Space	19
Touching and Typing	8	Managing Google Kids Space	20
Home Screen	9	Battery Information & Maintenance	21
Navigation Mode	10	Force Reboot/Shutdown	22
Using the Cameras	11	Troubleshooting	22
Tablet Updates	12	Specifications	23
SD Card Slot (Micro SD)	12		
Google Play	13		

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party, make sure to include this manual.
- The device is restricted to indoor use only when opening in the 5G WLAN band in the following countries:



Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, unplug from the mains socket and consult your dealer.

Wireless Devices

- Wireless devices can transmit radio frequency (RF) energy, whenever batteries are installed and the wireless device is turned on (If it has an On/Off switch).

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas / electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the working performance of the unit, and cause a distorted sound.

Audio Safety

-  Listening to loud sounds for prolonged periods of time may permanently damage your hearing.
- Before putting on earphones, turn the volume down then put the earphones on and slowly increase the volume until you reach a comfortable listening level.
- For traffic safety, do not use earphones while driving or cycling.
- This product is capable of producing loud noises which may damage your hearing. It is recommended to place the product at a safe distance from your ear.

Battery-Powered Devices:

Rechargeable Lithium Ion batteries are potentially hazardous and can present a serious FIRE HAZARD if damaged, defective or improperly used.

- Always charge in a well ventilated area. Do not charge under pillows, blankets or on flammable surfaces.
- Do not operate the product if it has been wet or otherwise damaged, to prevent against electric shock, explosion and/or injury. Contact the dealer or authorized agent.
- Disposal of battery into fire or a hot oven, or mechanically crushing or cutting of a battery, can result in explosion.
- Leaving a battery in an extremely high temperature environment can result in explosion or leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure may result in an explosion or leakage of flammable liquid or gas.
- Do not short-circuit the product or store it in a receptacle where it may be short-circuited by other metallic or conductive objects.
- Improper use of batteries may result in battery fluid leakage, overheating or explosion.
- Do not disassemble the product or remove any parts.
- Never discharge a Li-ion battery at a rate exceeding the maximum discharge current specified for that battery.
- Immediately discontinue use of the battery if, while using or charging the battery emits an unusual smell, feels hot or appears abnormal in any other way.
- Do not use the product where strong electromagnetic waves are present. Strong electromagnetic waves will cause damage to the product.
- Do not use the product if the temperature is too high or too low, your batteries may be damaged. If the humidity is too high, your batteries may be damaged.
- When the product is charging, keep it away from direct sunlight, moisture, dirt or abrasive chemical products (cleaning products etc.).
- Battery life and charge cycles may vary by use and settings.

Built-in Battery Care

- Your product is powered by a built-in rechargeable battery.
- The battery can be charged and discharged hundreds of times, but will eventually wear out.
- Unplug the charger from the electrical plug and the product when not in use.
- Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime.
- If left unused, a fully charged battery will lose its charge over time.
- Leaving the product in hot or cold places, such as in a closed car in the summer and winter conditions, will reduce the capacity and lifetime of the battery.

- Always try to keep your device in a cool, moisture-free environment that's less than 32°C. A product with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.
- If you plan to store your device for longer than six months, charge the battery for an hour every six months to keep it fresh.
- The unit should be fully recharged after using the device each time. This will keep the health of the battery.

Battery Warning!

- The battery used in this product may present a risk of fire or chemical burn if mistreated.
- Do not attempt to open the product or replace the battery. It is built-in and not changeable. Use of other batteries may present a risk of fire or explosion and the warranty will be terminated.
- Only recharge your battery with the provided approved USB cable designated for this product.
- Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste or in a fire as they may explode.
- Batteries may explode if damaged.

Wall Charger (if included)

- Always insert the USB device in the correct direction. Failure to do so may result in damage to the USB device and this unit.
- Only use with products designed to be powered or charged via a USB socket.
- The power supply must be located near the unit and should be easily accessible.
- Do not use the charger when it is damaged.
- Do not use with a damaged USB charging cable as it can cause overheating and damage to your device.
- Do not drop, tamper, disassemble or attempt to repair the unit by yourself.
- Do not immerse it in water or expose it to wet conditions.
- For IT equipment use only.

 This unit is designed for indoor use only.

 This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

~ AC voltage: This symbol indicates that the rated voltage marked with the symbol is AC voltage.

--- DC voltage: This symbol indicates that the rated voltage marked with the symbol is DC voltage.

Currys.co.uk

All the support you need.

Whether it's a tech emergency or you need plain good advice, we're always on hand to help.

UK: 0344 561 1234

IRE: 0818 810575

Partmaster
CO.UK

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call **0344 800 3456** (UK customers only). Calls charged at National Rate.



Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment.

To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste. For more information, please contact the local authority or your retailer where you purchased the product.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your

responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Currys Group Limited is under license. Other trademarks and trade names are those of their respective owner.

Google, Android, Gmail, Google Drive and other marks are trademarks of Google LLC.

The Acer trademark is licensed to Currys Group Limited by Acer Incorporated, a Taiwan R.O.C. company.

UK Representative and Responsible Person

Currys Group Limited (No. 504877)

1 Portal Way, London, W3 6RS, UK

<https://www.currys.co.uk>

EU Representative and Responsible Person

Currys Ireland Limited (No. 259460)

3rd Floor Office Suite, Omni Park SC,

Santry, Dublin 9, Republic of Ireland

<https://www.currys.ie>

UK & EU Contact details:

business.standards@currys.co.uk

Thank you for purchasing your new product.


We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

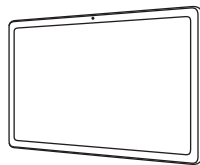

Main unit




USB cable



Instruction manual &
Safety warnings

Product Overview

Front View

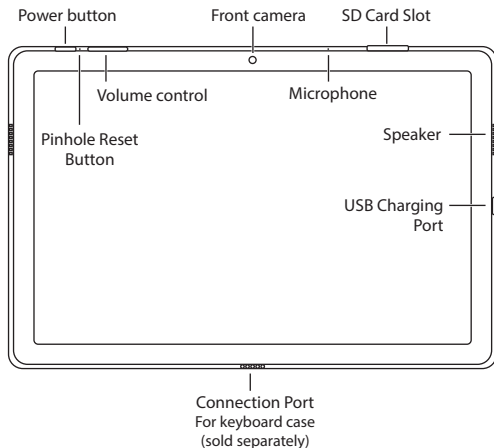

Rear View



Setup at the First time

1. Press and hold the **Power button** for 2-3 seconds.
2. Startup Wizard
3. The first time you start up the tablet, the startup wizard will help you set up:
 - Language
 - WiFi connection
 - Date & time
 - Your name
 - Location service options
 - 3rd party apps



We strongly recommend that you open a Google Account (you need this to download new apps) and we recommend that you answer yes to back up your tablet to the Google Account. This will save your files and settings in case you need to restore your tablet to factory defaults at any point.

Power On/Off

1. During standby mode, press the **Power button** to turn on the tablet.
2. At the Start-up screen, swipe up from the bottom of the screen to unlock.
3. Once you've arrived at the Home screen, you can begin using the tablet.
4. Press the **Power button** to switch to standby mode.




If you are not using the tablet for a long time, you can press and hold the **Power button** to shut it down completely.

Charging Your Tablet

It is recommended to fully charge the tablet before first use. To charge the tablet,

- Plug the USB cable into the wall charger.
- Attach the other end to the USB-C input on the tablet.
- Plug the wall charger into a wall socket.

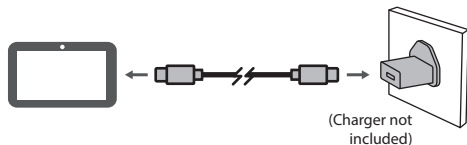

When the tablet is ON and charging, the battery icon will pulsate. A full charge takes up to 3 hours. It is normal for the tablet to get warm while charging, playing games, or streaming video. Battery life will vary depending on usage.



- When the tablet's battery is fully depleted, the charging screen may take up to 2 minutes to appear. This is normal and does not signify a problem with the device.
- Leave the tablet in a well ventilated area while charging.

Connecting to the Internet

To connect to the internet, ensure you have the following:

- A wireless router or an access point with a broadband connection.
- The name of your network (SSID) and the password or other necessary credentials if your network is secure. (The wireless router must support WiFi 802.11 a/b/g/n/ac connections).

Go to **SETTINGS > Network & internet > Internet**


Tap on "Internet" to enable wireless connectivity. The tablet will then scan for available WiFi networks within range. For secured networks, you will need to enter a password. Once entered successfully, the tablet will remember your settings for future connections.

Touching and Typing



To select an item on the screen, simply tap it once with your fingertip. Some items may require you to “double-tap”.

To type in to a text field (e.g., when inputting your name , or a web address), tap the text field. The on-screen keyboard will appear, and allow you to type the information you wish to enter.

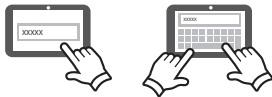

Touch and Hold: Keep your finger on an on-screen item until it glows or activates an alternate menu.




Drag: Move an App or object by touching and holding the image, then moving it to the destination.

Slide: When there are extra “screens” to the side, slide one or more fingers from one side to another.



Home Screen

You can customize your home screen at any time.

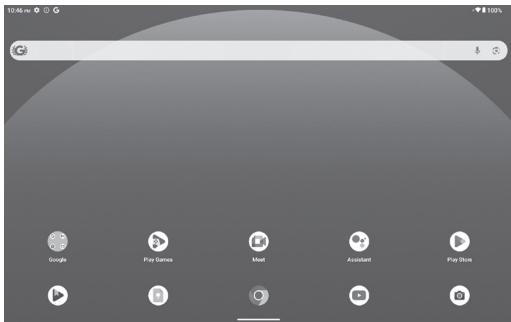

Home Screen

On the default home screen, you will find a Google search bar and some useful apps pre-installed for quick access.

Add a Widget to a Home Screen

Press and hold on an empty area of the home screen, then select "Widgets" from the pop-up menu. Press and hold the widget you want to add, drag it to your desired location on the screen and release.

Change the Wallpapers

Press and hold on an empty area of the home screen, select 'Wallpaper and style' from the pop-up menu, and then choose your preferred wallpaper.

Move an App to Another Screen

Press and hold the app you want to move, then drag it to the desired location on another screen and release.

Adjust Display Size


Go to Settings > Display > Display size and text. Use the slider at the bottom of the page to change the size. You can choose from five sizes: small, default, large, larger, and largest. The default setting is 'default'.

Uninstall an App

Press and hold the app you want to uninstall, select 'App Info' from the pop-up menu, and then tap 'Uninstall'.

Note: Some system apps cannot be uninstalled.

Navigation Mode

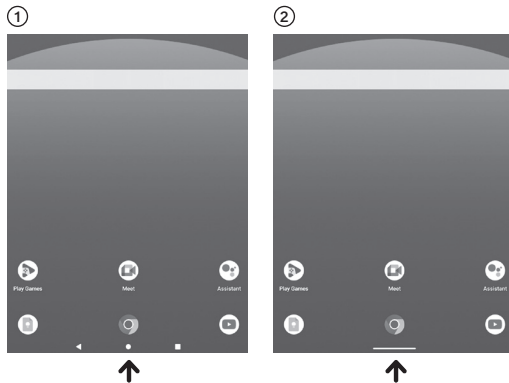

Note: To switch navigation modes, go to Settings > System > Gestures > Navigation mode, and select either 3-Button Navigation or Gesture Navigation.

1. 3-button navigation

Back button ◀: Tap to return to the previous page.

Home button ●: Tap to return to the default home screen.

Recent button ■: Tap to view recent apps. Then you can do the following.

- Tap an app to open it.
- Select **CLEAR ALL** to stop running all apps.


2. Gesture navigation

Go Home: Swipe up from the bottom of the screen to return to the home screen.

Switch Apps: Swipe up from the bottom of the screen and hold for a moment before releasing to view and switch between open apps.

Go Back: Swipe from either the left or right edge of the screen towards the center to go back to the previous screen.

Using the Cameras

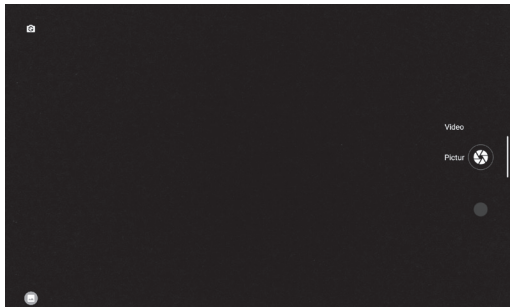

Swipe up from the bottom of the screen to show all apps, select **Camera** app.

Taking photos and videos

You can take photos and record videos with your tablet's built-in camera.

- Tap  to take a photo.
- Tap  to record a video.
- Tap  to switch between the front and the rear camera.

Taking screenshots

Press and hold the "Power" button and the "Volume down" button at the same time.

Viewing pictures and videos

Photos, videos and screenshots are stored in the tablet's internal storage. You can view your photos and videos by using the following methods:

- Tap the thumbnail when using the "Camera" app.
- Go to "Photos" app.

Tablet Updates

To ensure the tablet runs smoothly, it is recommended to perform periodic system software updates, especially during the initial setup. You may receive notifications on the Lock screen indicating that updates are available.

Tap the notification to be directed to the update.

Alternatively, you can go to **Settings > System > System update > Check for Update** to manually search for available updates.



To perform an update, your tablet must be connected to a WiFi network.

SD Card Slot (Micro SD)

- Open the MicroSD cover on the side of the tablet.
- To insert a MicroSD card, push it into the slot until a soft click is heard; to remove the card, push it down then release hold, it will sprung up from the slot.



To ensure compatibility between your tablet and Windows® 10 or 11 computers, format the SD card to FAT32 on the tablet before initial use. Note that the tablet only supports FAT32 and is not compatible with ExFAT or NTFS. Using unsupported file systems may lead to compatibility issues.

Google Play

Automatic Updates


When you first sign into Google Play on your Android device, it automatically checks for updates to your installed apps and begins downloading them. This ensures that all your apps are up-to-date. You'll see a download icon  appear in the status bar at the top of your screen to indicate that updates are in progress.

Performance Tips

Installing a new application while multiple apps are downloading can reduce tablet speed and performance. Once all downloads and updates have been completed, the tablet will return to normal operating performance.



To view ongoing download progress, swipe down from the top of the screen.

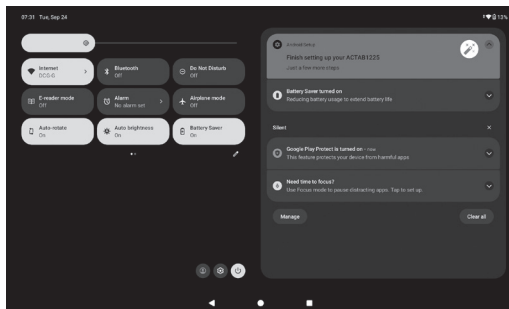


Using Google Play Games



To enjoy Google Play Games, make sure you have a Google Account. Here's how to get started:

1. Open "Google Play Games" on your tablet.
2. Sign in with your Google Account to access your games and save your progress.
3. Adjust your preferences in the app settings for a better gaming experience.
4. Navigate and Play:
 - **Home Button:** Tap to discover new games and catch up on the latest updates.
 - **Library Button:** Tap to access and revisit your games.
 - **Profile Button:** Tap to check your achievements and edit your profile.

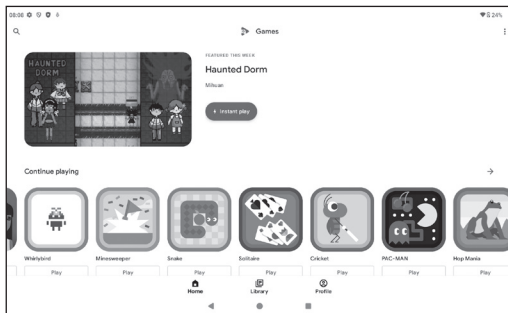

Quick Tip


Visit the Profile page to view your latest achievements and compare your progress with friends to make gaming more interactive and rewarding. For more tips and advanced features, visit the official Google Play Games website.

Using Google Play Books



To start enjoying eBooks and audiobooks with Google Play Books, follow these simple steps:

1. Open "Google Play Books" on your tablet.
2. Sign in with your Google Account to sync your library, bookmarks, notes, and reading positions across devices.
3. Navigate and Discover Books:
 - **Home Button:** Tap to browse personalized recommendations and trending books.
 - **Library Button:** Tap to choose an eBook or audiobook from your collection to start reading or listening right away.
 - **Wishlist Button:** Tap to save titles that you are interested in for future exploration or purchase.
 - **Shop Button:** Tap to search for new releases, bestsellers, or specific titles. Here you can either purchase new books or download available free books directly to your device.

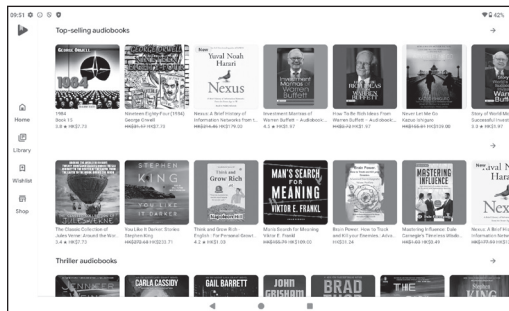

Quick Tip



Discover the full potential of Google Play Books! Customize your settings and enjoy seamless reading across all your devices. For more tips and advanced features, visit the official Google Play Books website.

E-reader Mode

Our tablet comes with a special built-in feature called "E-reader mode," designed to optimize the display for reading. Turning on this mode adjusts the screen settings to reduce eye strain and make reading more comfortable, especially during long sessions.

How to Activate E-reader Mode:

1. Swipe down from the top of the screen to access the quick settings.
2. Tap on "E-reader mode" to enable it.

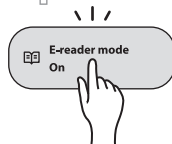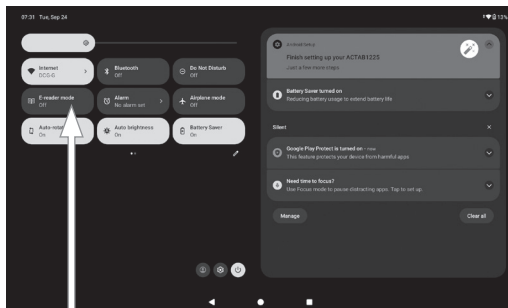

Introducing Google Kids Space

Google Kids Space is a tablet experience featuring a custom home screen and a library of quality content for kids. Kids can personalize their experience with unique avatars and receive content recommendations tailored to their interests. Meanwhile, parents can set boundaries using parental controls.



↑ Screen image is for demonstration purposes only. Actual display may look different.

1. Customizable Avatar

2. Google Kids Space tab



Home: A mix of activities and suggestions for exploration.

Play: Teacher-approved apps and games.

Read: Books handpicked by experts.

Watch: Recommended videos with engaging content.

Make: Videos that spark hands-on creativity & play.

3. Parent Menu

Press and hold ⓘ to open a popup menu with various options for managing your child's device and settings.



Important: Books and video content may not be available in all regions. Video content is subject to the availability of the YouTube Kids app. Book content requires the Google Play Books app. The availability of apps, books, and video content may change without notice.

Setting up Google Kids Space



To use Google Kids Space, ensure the tablet is connected to a WiFi network and set up using a child's account.


1. When setting up the tablet for the first time, you will be asked who is going to use this device. Tap "A child."
 - If you have previously set up the tablet for your child, tap Google Kids Space  and tap "Get Started".
2. Sign in to your child's existing Google Account or follow the prompts to create a new Google Account for your child under 13 (or the applicable age in your country).
3. Sign in with your own Google Account to verify that you are the parent. If your child's account is newly created, Google will perform additional checks to confirm your identity. Choose your preferred verification method when prompted.
4. Follow the on-screen instruction until you see "**Set up Google Kids Space?**", then tap "**Set Up**".
5. Continue following the prompts for additional settings.
6. Tap "**Next**" when prompted to hand over the device to your child.
7. Work with your child to choose their interests and tap "**Next**".
8. Tap "**PUSH**".
9. Congratulations! Your child can now create his or her own character. When finished, tap "**Done**".



For the latest features and setup instructions for Google Kids Space, please visit the official Google website. Information may change without prior notice.

Turning off Google Kids Space

1. From the "Google Kids Space" home screen, press and hold the "Parent menu" .
2. Tap "Exit Kids Space".
3. Tap "Turn off".
4. To verify you're the parent, enter your Google Account password, then tap "Next".

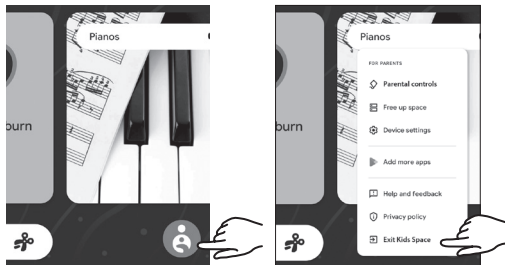

↑ Screen image is for demonstration purposes only. Actual display may look different.

Turning on Google Kids Space

1. From the home screen, tap **Google Kids Space** .
2. Tap "Turn on".
3. To verify you're the parent, enter your Google Account password, then tap "Next".

Managing Google Kids Space

Parents can manage Google Kids Space settings using either the Parental Controls function within the Google Kids Space app or remotely through the Family Link app on a parent's device. Here are the basic steps for each method:

1. Parental Controls


- From the Google Kids Space homescreen, press and hold the "Parent Menu" .
- Tap "Parental Controls" to adjust settings directly on the tablet.

2. Family Link


- Open the app and log in to your Google Account.
- Select your child's profile.
- Go to "Controls," then "Content restrictions," and choose "Google Kids Space*" to manage specific settings.

*Note: "Google Kids Space" appears in "Content restrictions" only when your child is logged into the app on their tablet.

↓ Screen image is for demonstration purposes only. Actual display may look different.

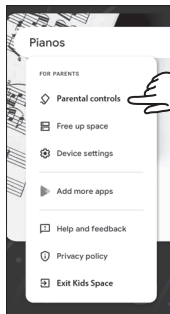

Parental Controls

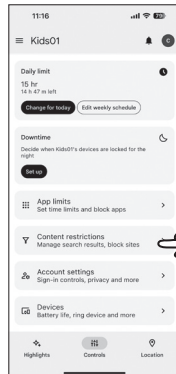

Family Link



For full functionality and the latest features of Family Link, please visit the official Google website. Information may change without prior notice.

Battery Information & Maintenance


Your tablet's battery data allows you to monitor its performance over time. This section shows how to access battery management system information and offers tips to enhance its lifespan.

1. To view your tablet's battery details:

Go to **Settings > Battery > Battery Health & Charging**

Available information includes:

- **Date of First Use**
When the battery was first used after setup.
- **Date of Manufacture**
When the battery was produced.
- **Charging Cycle**
Total number of full charge/discharge cycles.
- **Battery Health**
The current status of the battery's health.
- **Maximum Capacity**
Current remaining capacity (%) compared to its original state.
- **Battery Protection**
Feature(s) on how to maintain your battery's lifespan.

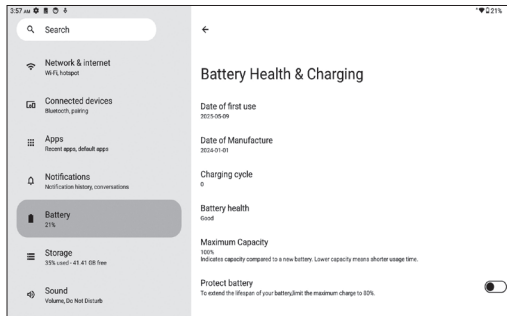

2. To optimize battery lifespan and performance:

- Avoid exposing your device to extreme temperature.
- Avoid full charges and full discharges. Partial charging (20-80%) is recommended for daily use.
- Disable unused wireless features (Wi-Fi, Bluetooth).
- Recharge to 50% every 6 months if storing >30 days.

Force Reboot/Shutdown

There are 2 methods to force reboot/shutdown the tablet.

- Press and hold the "Power" button for about 10 seconds until the tablet reboots.
- Use a toothpick to punch into the "Pinhole reset" button until the tablet turns off, then turn it on again in the normal way.

Troubleshooting

If your tablet is frozen:

Press the "Power" button for at least 10 seconds or use the hardware reset.

To use the Hardware reset, press the "pinhole reset" button by using a sharp object such as a toothpick.

If your tablet doesn't turn on:

Charge your tablet then switch on normally.

If this does not work, press the "pinhole reset" button by using a sharp object such as a toothpick.

If your WiFi reception is poor:

- Make sure you are not far from the WiFi hotspot.
- Update the firmware of the tablet.
- Reset and redefine your connection parameters.
- Reset your wifi setting, go to **Settings > System > Reset options > Reset Bluetooth & WiFi > Reset**
- Contact your WiFi connection provider.

If you want to extend the life of your battery:

Decrease the screen brightness and turn of the wireless connections if not in use.

If your tablet is functioning too slowly:

Close all apps which are not currently being used.

If you want to restore your product (erase all your settings or forgotten password) :

1. Go to **Settings > System > Reset options > Erase all data (factory reset) > Erase all data**
2. This will erase all your files, settings and applications, so make sure you have backed-up your data in your Google Account.
3. When you restart your tablet it will open the Startup wizard again, follow the onscreen instructions.

4. Access your Google Account to retrieve your backed-up data in Google.

If the device does not power on or system crashes:

Charge the battery for half an hour and then press and hold the "Power" button for more than 10 seconds until the device reboots.

If the device cannot wake up from sleep mode:

Press and hold the "Power" button for more than 10 seconds until the device reboots.

Specifications

Tablet


Model	ACTAB1125
Processor	MT8786 (G80) ARM Cortex-A75 & Cortex-A55 Octa-Core Processor (@ 1.8GHz)
Operating System	Powered by Android™ 14
Display	10.95" (1920 x 1200) IPS tempered glass panel with 10 points multitouch
Audio	Two side speakers
Memory	4GB Low-Power LPDDR4
Battery capacity	8000 mAh
Storage	64GB - Expendable by an additional 1TB with Micro SD card
Ports	TYPE C 2.0 / Micro SD Card slot
Camera	Front 5MP / Rear 8MP
Connectivity	Dual Band WIFI, Bluetooth® 5.2
GPS	YES
Microphone	YES

Frequency Range and Max. Radio Frequency Power Transmitted	Bluetooth®: 2400–2482 MHz, Max power (EIRP): 5 dBm 2.4G Wifi: 2410–2474 MHz, Max power (EIRP): 17 dBm 5.2G Wifi: 5178–5242 MHz, Max power (EIRP): 16 dBm 5.8G Wifi: 5743–5827 MHz, Max power (EIRP): 14 dBm
GPS Receiving Frequency	1575.42 MHz
Dimensions	258.5 × 170.1 × 8.0 mm
Weight	525 g

Built-in Battery

Model	U318991PV-2P
Battery Type	Li-ion Polymer Battery
Battery Rating	3.8V 8000mAh 30.4Wh
Designation Code	1ICP4/89/91-2
Manufacturer	Shenzhen Utility Energy Co., Ltd.
Dimension	177.2 × 92 × 3.3 mm
Net Weight	122 g ± 5 g

Features and specifications are subject to change without prior notice.

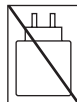

Charger
is not
included.



The power delivered by the charger must be between min 10 Watts required by the radio equipment, and max 18 Watts in order to achieve the maximum charging speed.

For environmental reasons this package does not include a charger. This device can be powered with most USB power adapters and a cable with USB Type-C plug.

Environmental Information

The following are the weight ranges of the critical raw materials and environmentally relevant materials used in the tablet:

Cobalt in the battery	< 10g
Tantalum in capacitors	< 0.01g
Neodymium in loud speakers, vibration motors, and other magnets	0.2g - 1g
Gold in all components	< 0.02g

Exposure to Radio Waves

- Your mobile is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines.
- The guidelines were developed by an independent scientific organization (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.
- The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg.
- Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the ICNIRP guidelines for this device model are:
Body SAR : 0.205W/Kg(10g)
- During use, the actual SAR values for this device are usually well below the values stated above. This is because, for purposes of system efficiency and to minimize interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value.

Privacy Notice

This product is equipped with external sensing components such as GPS, camera and microphone. These sensing capabilities, which could involve collection of privacy - related information (location, sound, video, pictures, etc.).

GPS Sensor: The GPS sensor may collect your location information to provide location-based services and features. **Camera:** The camera may capture video and still images when you use features that require visual input. **Microphone:** The microphone may record audio when you use features that require voice input or communication.



Declaration of Conformity (RER)

Hereby, Currys Group Limited declares that the radio equipment type [ACTAB1125] is in compliance with Radio Equipment Regulations 2017(S.I. 2017/1206). The full text of the UK declaration of conformity is available at the following internet address:

<https://www.currys.co.uk>

Scan the QR code, then click on the 'product manual' search box and enter the model number.

The Acer trademark is licensed to Currys Group Limited by Acer Incorporated. Google, Android, Youtube, Google Play and other marks are trademarks of Google LLC.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Currys Group Limited is under license. Other trademarks and trade names are those of their respective owners.

All brands and product names are registered trademarks and the property of their respective owners.

