


Dual-Antenna Modes

 
- **Directional Mode**
(No External Antennas Installed)

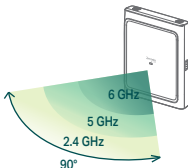


Directional Mode



- **Omnidirectional Mode**
(With External Antennas Installed)



Omnidirectional Mode

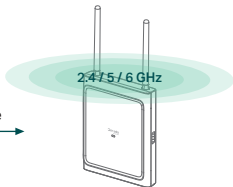

- **Smart Switching: External Antenna Auto Detection**

By default, the antenna mode automatically switches based on the presence of external antennas. To manually adjust the antenna mode, use Omada Controller version 6.1 or later.

Note: Using third-party external antennas is not recommended, as smart switching may not work properly.