

 
## GETTING STARTED

### Power Supply and Tape Cassette

Open the cassette cover by pressing the above indicated area at the top end of the machine.

If a tape cassette is already installed, remove it by pulling it straight up. Also, if batteries are already installed, remove them.

- Make sure that the power is turned off when replacing batteries or tape cassettes.

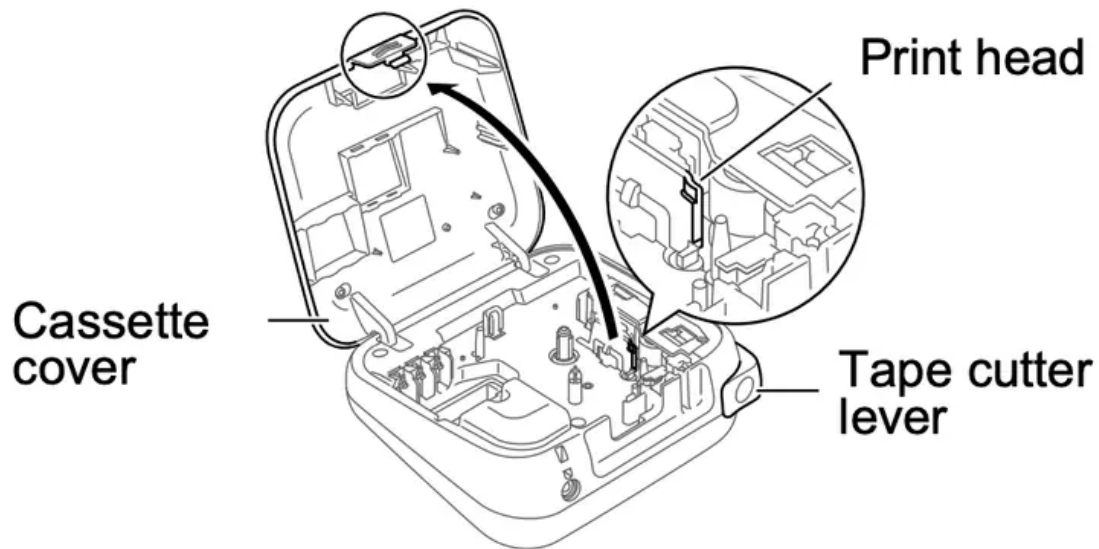


Insert six new AAA alkaline batteries (LR03) or fully charged Ni-MH batteries (HR03), making sure that their poles point in the correct directions.

Users of alkaline batteries:


Always replace all six batteries at the same time with brand new ones. Users of Ni-MH batteries:

 Always replace all six batteries at the same time with fully charged ones.

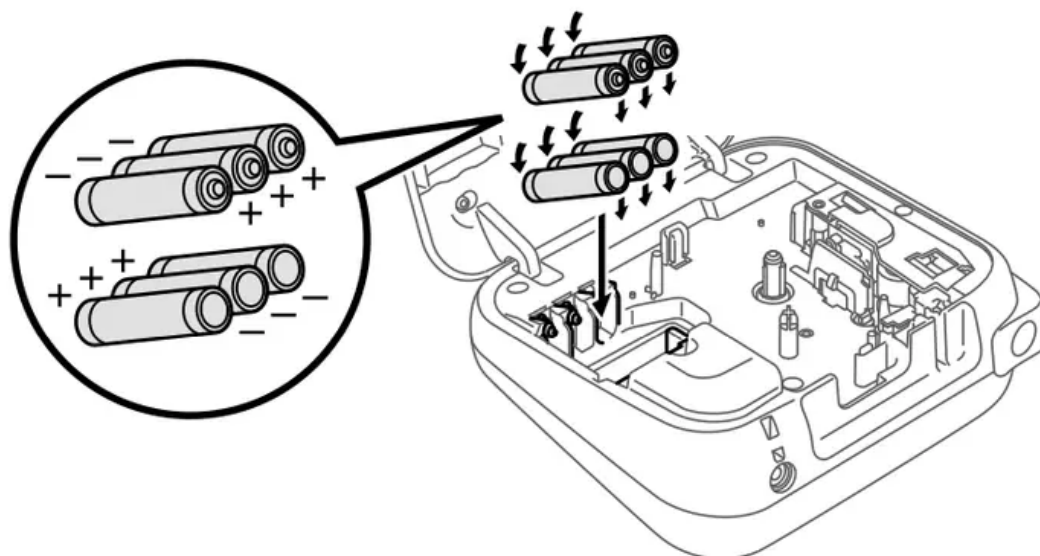

Insert a tape cassette, making sure that it snaps into place.

 
- Make sure that the end of the tape feeds under the tape guides.
- Use only Brother TZe tapes with this machine.

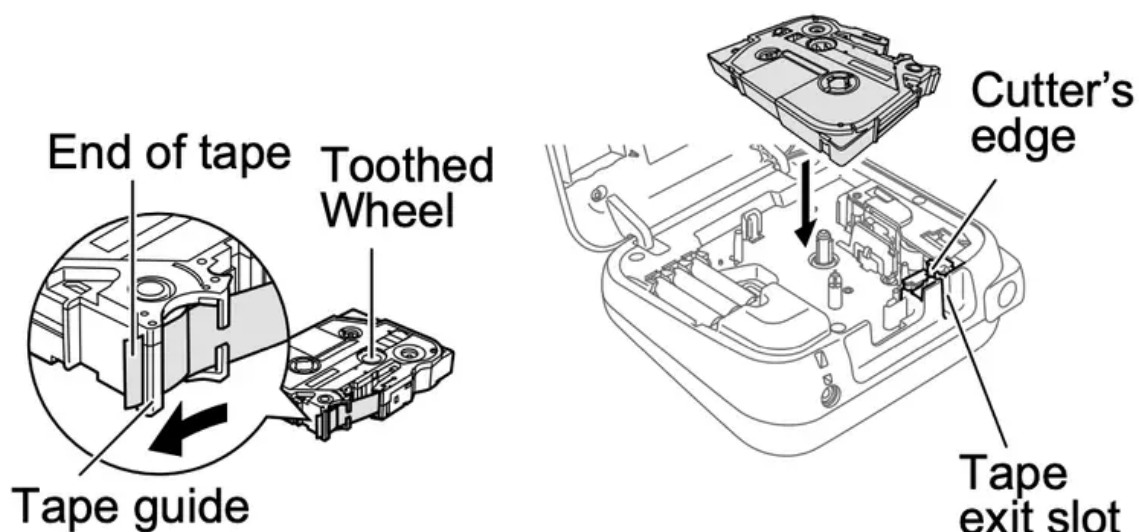

Securely close the cassette cover, making sure that it snaps into place.

**NOTE:** When using optional AC adapter

 
1. Insert the plug on the adapter cord into the AC adapter jack on the top end of the machine.
2. Insert the plug into the nearest standard electrical outlet.  
For memory back up, we recommend using AAA alkaline batteries (LR03) or NiMH batteries (HR03) together when using the AC adapter.

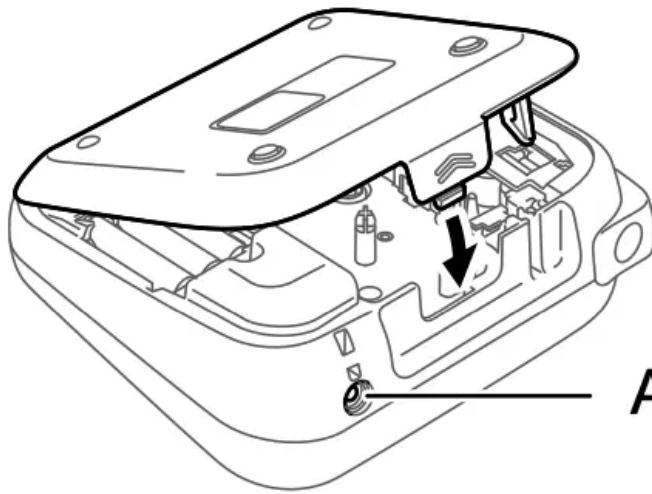


**AC adapter jack**


 
## LCD Display & Keyboard

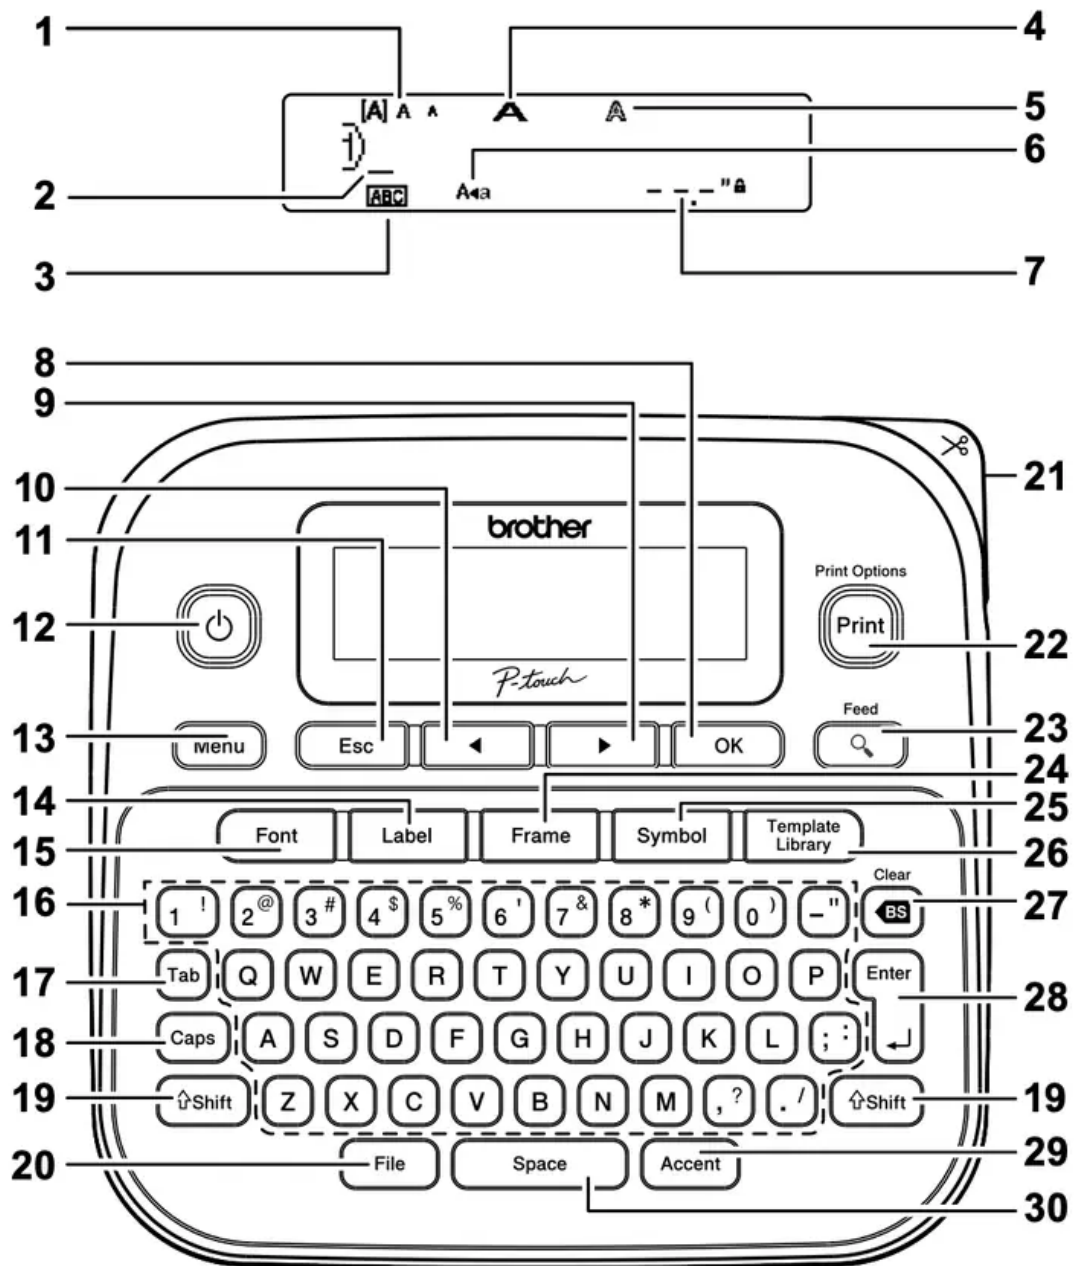


1. Size
2. Cursor
3. Underline/Frame
4. Width
5. Style
6. Caps
7. Label Length

If a specific label length has been selected,  also appears.

8. OK key
9. Cursor key : Right (Use with Shift key to go to end of the text.)
10. Cursor key : Left (Use with Shift key to go to top of the text.)
11. Escape key
12. Power key
13. Menu key
14. Label key
15. Font key
16. Character key
17. Tab key
18. Caps key
19. Shift key
20. File key
21. Tape cutter lever
22. Print key
23. Preview key
24. Frame key
25. Symbol key
26. Template Library key
27. Backspace key
28. Enter key
29. Accent key
30. Space key

#### NOTE

- The LCD shows one row of 15 characters; however, the text that you enter can be up to 80 characters in length.
- While selecting the settings, press  to go back to the default item.
- Pressing the Preview key displays a generated image of the label, and may differ from the actual label when printed.
- Label length shown on LCD may differ slightly from the actual label length when printed.

## Initial Settings

### 1. Turn on your machine.

Supply power by using six AAA batteries or the optional AC adapter and then press



### 2. Set the language.

The default setting is [English].


 


### 3. Set the unit of measurement.

The default setting is [inch].



 
## NOTE

- The machine automatically turns off if no keys are pressed within five minutes.
- To cancel any operation, press .
- After pressing , "Accepted" will be displayed for approximately 1 second.

## Contrast

This function allows you to set the brightness of the LCD display. You can select from five levels of brightness.

The default setting is [0].

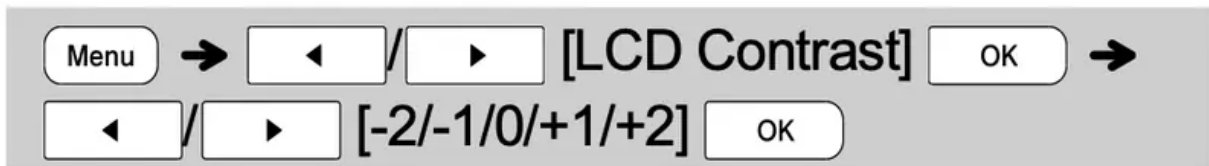

- To change back to default setting, press .
- After pressing , "Accepted" will be displayed for approximately 1 second.


## BASIC USAGE
 
### Entering Text

#### Switching Upper Case/Lower Case




Upper case (  ON)

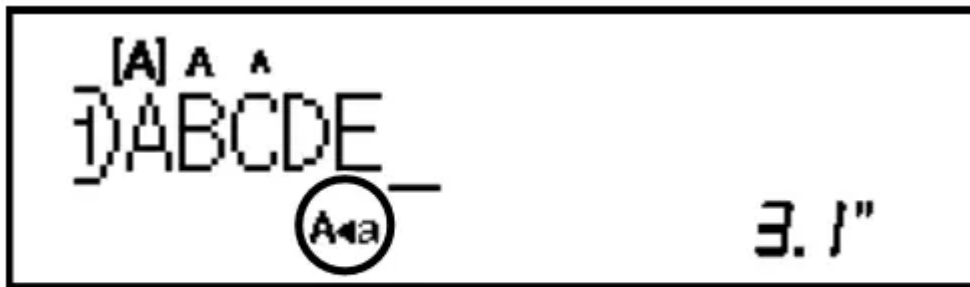


Caps

 Lower case (  OFF)

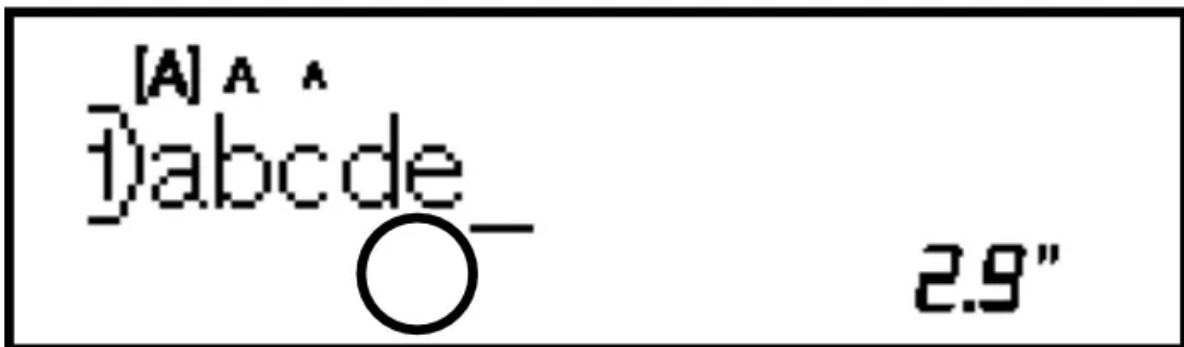


Caps


## Creating Two-Line Labels

 Move the cursor to where you want to start the next line and press . Use either 0.35" (9mm) or 0.47" (12mm) wide tape for two line printing.

### Line 1

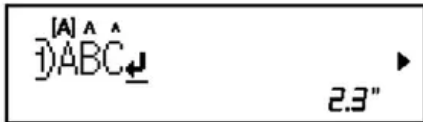

### Label image

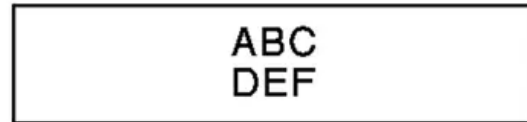 



### Line 2



 
**NOTE:** The return symbol (↵) will be displayed when the Enter key is pressed.

 
## Entering Tabs




- You can also set a tab by pressing .
- A  will appear on the screen when a tab is inserted into the text.
- The maximum number of tabs for a label is 80 without text. If you enter 1 letter, you can set 79 tabs.

## Changing Tab Length

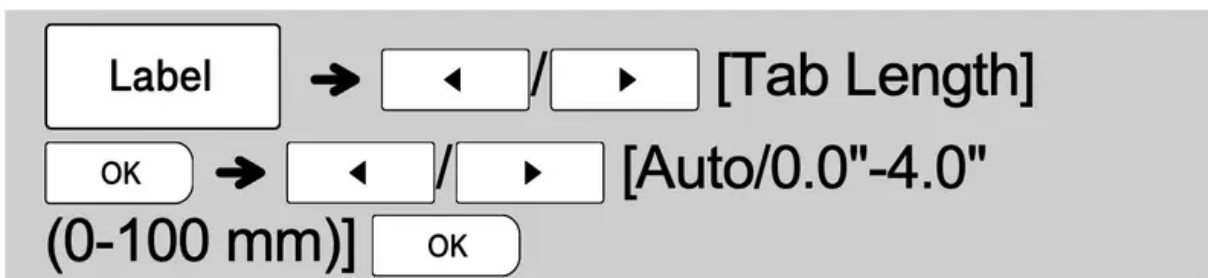


- To change setting back to default, press . The default setting is [Auto].
- After pressing , "Accepted" will be displayed for approximately 1 second.

## Entering Accented Characters

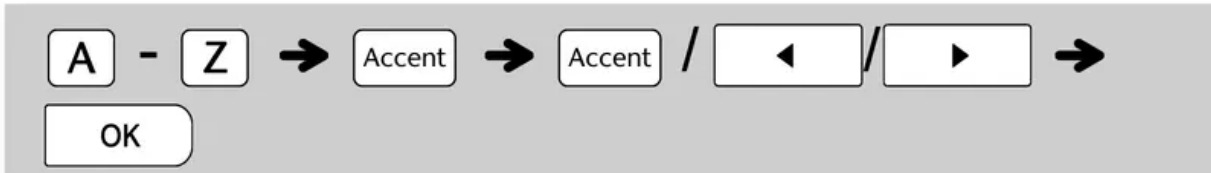 

- Refer to the table of accented characters included in this insertion sheet.
- To cancel operations, press .
- The order of accented characters differs by the selected LCD language.

## Changing Label Length

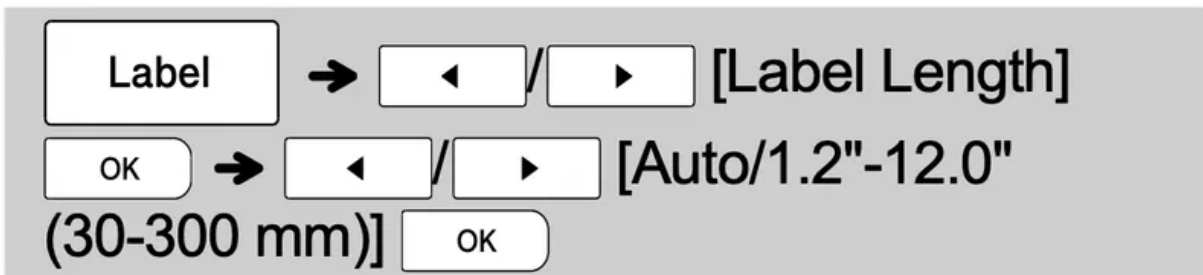 

### NOTE:

- After the label is printed, cut along the printed dots (:) with scissors so that the label length matches what is shown on the LCD.
- If a specific label length has been selected, also appears in the LCD.
- By pressing , [Auto] will be displayed.
- To change setting back to default, press .
- After pressing , "Accepted" will be displayed for approximately 1 second.

## To Clear

By pressing , the letters will be deleted one by one.

To delete all text and settings :



To delete text only :



**NOTE:**

- You can also delete all text and settings or text only by pressing



- After pressing [OK], "Accepted" will be displayed for approximately 1 second.

**Printing Labels**

 
**Preview**

You can preview the text before printing.




- Pressing the Preview key displays a generated image of the label, and may differ from the actual label when printed.
- When the LCD cannot display all the text at once, press [Left Arrow] / [Right Arrow] to display the hidden text.
- Press [OK] / [Enter] / [Esc] to leave the preview mode.

**Feeding (Tape Feed)**

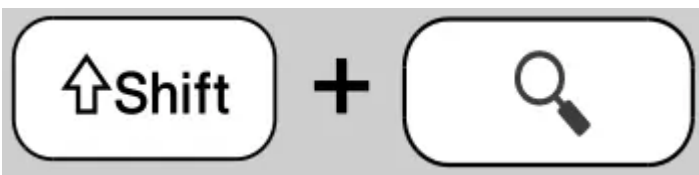

- This function will feed approximately 1" (25mm) of blank tape.


**Printing**

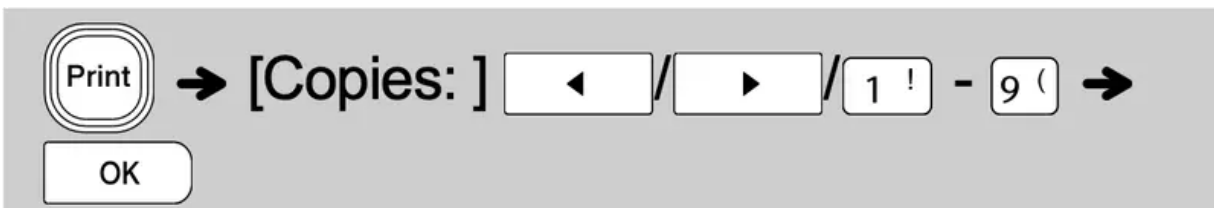 

- If you need only 1 copy of the label, press [OK] without selecting the number of copies.



 - You can print up to 9 copies of each label.
- The number of copies can also be specified by pressing a number key.
- To cut the label, push in the tape cutter lever on the upper-right corner of the machine after the message "Please Cut" is displayed. "Please Cut" is displayed on the screen for 2 seconds.
- To prevent damage to the tape, do not touch the cutter lever while the message "Please Wait" is displayed.
- To remove the backing, fold the label lengthwise with the text facing inward, to expose the inside edges of the backing. Peel off the backing one piece at a time and apply.




Using Print Options ( )

### [Numbering]

 You can print a series of up to 9 labels at a time using auto-numbering. Using this feature you can automatically increase a selected number by 1 after each label is printed. The numbers of labels you can print at one time are dependant upon the initial number.

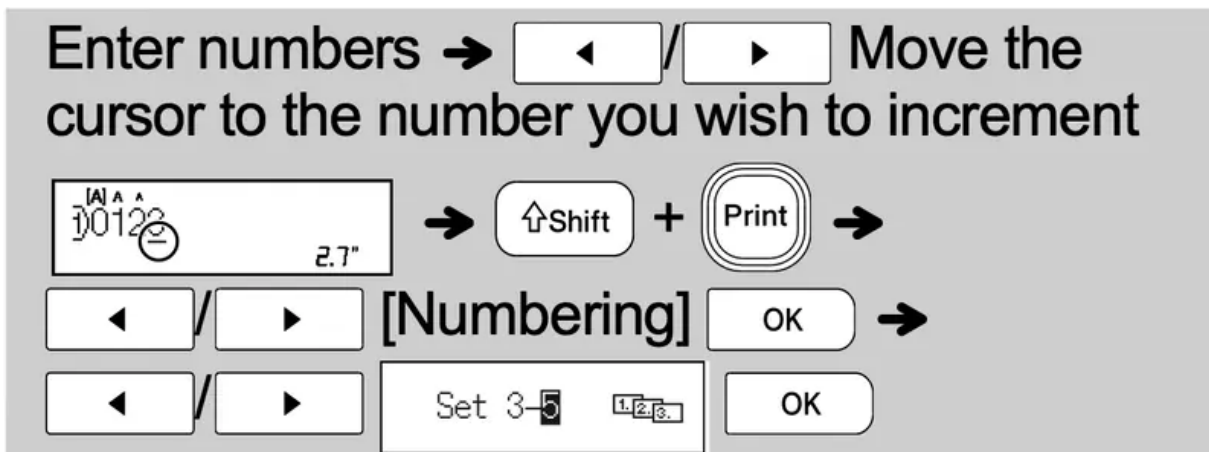

**Example:** To print copies of a label containing a serial number (0123, 0124 and 0125)







- Select the highest number you wish to be printed when setting the number.

### [Mirror]

 **Example:** If you want to Mirror Print "J.SMITH", follow the instructions below after entering "J.SMITH".

Enter text/characters →  +  →

 /  [Mirror]  → [Mirror Print?]



- Use clear tape in [Mirror], so the labels can be read correctly from the opposite side when attached on glass, windows or other transparent surfaces.

Setting Margin (  )

 →  /  [Margin]  →

 /  [Full/Half/Narrow/Chain Print]




[Full]/[Half]/[Narrow]

For leaving equal margins on both sides of the text.


**Full**



  
 

 
 

 
**Half**

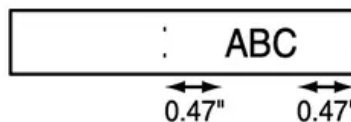

**Narrow**

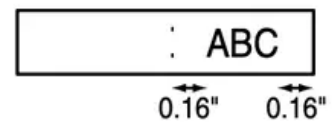

 
[Chain Print] Use this setting when printing several labels with minimum margins.

 
1. Enter text.
2. Press , then [Copies: ] appears.
3. Press  /  or enter number with number keys to select the number of copies.
4. Press . Printing will start, and then the message "Feed OK?" appears.
5. Press  to enter more text.
6. Clear the text, enter the text for the next label, and then press .
7. When the message "Feed OK?" appears after the last label is printed, press .

8. After the tape is fed, press the cutter lever to cut off the chain of labels.

**NOTE**

- When [Chain Print] is set, feed the tape before using the cutter otherwise a part of the text may be cut off.
- When [Half] or [Narrow] is set, displayed label length is the length from the printed dots (:) to the end of the label. Cut along the printed dots (:) with scissors.

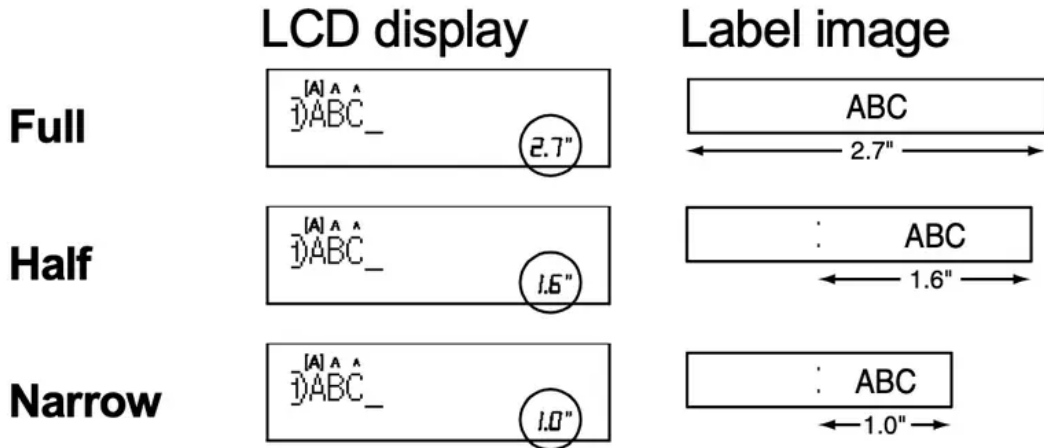


- To print more than 1 copy of a label with minimum margin, set the margin to [Narrow].
- Do not pull the tape since this may damage the tape cassette.
- After pressing , "Accepted" will be displayed for approximately 1 second.


**Saving Label Files**

 You can save up to 30 labels and recall them for printing at a later date. A maximum of 80 characters can be saved per file, a maximum of 2400 characters can be saved in total memory. You can also edit and overwrite the stored labels.


**Save**

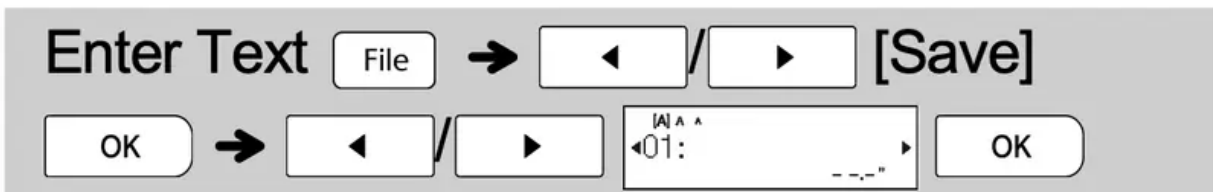

**Print**

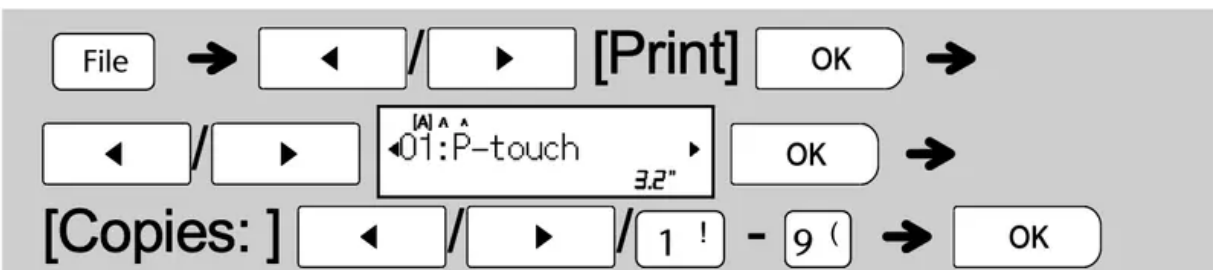 

## Open

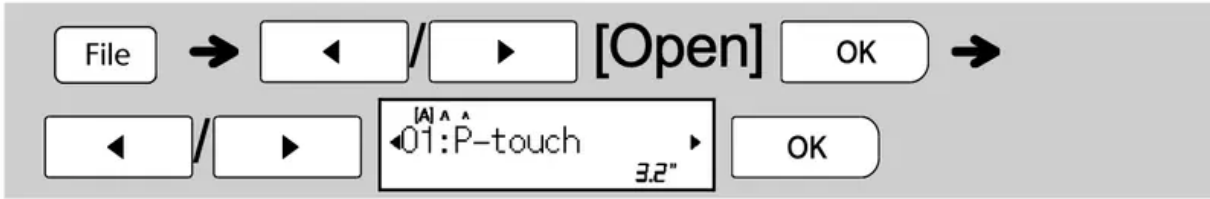 

### NOTE

- You can also enter the File menu by pressing **Menu** → **1 !**.
- If you try to store a label when there is already a label stored to that number, a message "Overwrite OK?" will appear. Press **OK** to save your new label. Press **Esc** to cancel.
- You must type text before starting the save function.
- After pressing **OK**, "Accepted" will be displayed for approximately 1 second.

## USING TEMPLATES

### Text Label

This function allows you to create various labels using the built-in templates. Refer to the Text Label templates table included in this insertion sheet.



**Example 1:** [Template that includes one repeated graphic]


Template Library → [Select Category] ◀ / ▶  
 [Text] OK → [Select Design] ◀ / ▶  
 ◀ ☆ ☆ ☆ ☆ ▶ OK → [Input Text 1] Clear the  
 text and then enter text DABCD\_ 1.9" OK  
 → [Print] OK

- There are three additional Text Label templates that allow you to use two different fonts on one label. The procedure is similar to the steps in Example 1; however, you will be prompted to enter [Input Text 2].



Example 2: [Template that includes two fonts]

 Template Library → [Select Category] ◀ / ▶  
 [Text] OK → [Select Design] ◀ / ▶  
 ◀ File No.1 ▶ OK → [Input Text 1] Clear  
 the text and then enter text DFile\_ 1.8"  
 OK → [Input Text 2] Clear the text and then  
 enter text DNo.1\_ 1.8" OK → [Print] OK

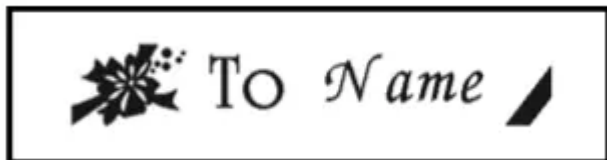

Example 3: [Template that includes two fonts and a frame]

- The procedure is similar to the steps in Example 2. Please see procedure under Example 2.





**Example 4:** [Template that includes two fonts on two lines]

- The procedure is similar to the steps in Example 2. Please see procedure under Example 2.

**Pattern Label**

This function allows you to create unique labels by using built-in templates. Refer to the Pattern Label templates table included in this insertion sheet.

You cannot enter text when using Pattern Label templates.



Example:



**NOTE:**


**For Text Label Templates**

- You cannot set label length when printing Text Label templates.
- To clear the text, move the cursor to the right side where you wish to clear and then press .
- To clear all text, press and , then "All Clear" appears. Press to clear. Press to cancel.
- You are able to preview labels by pressing the Preview key when [Print] is displayed on the LCD display.

 






- You cannot use the copy print function when using Text Label templates.

### For Pattern Label Templates


- Press  to return to the initial setting for "Label Length" mode. The initial setting is [3.9"(100 mm)].
- You cannot use preview feature when using Pattern Label templates.


### For Text Label and Pattern Label Templates

  


- These templates are only available when using 0.47" (12mm) wide tape cassettes.
- The templates cannot be edited.
- To exit templates and return to the text input screen, do one of following:
  - a) Press .
  - b) Press  /  to select [Quit], and then press  when "Print" appears.
- You cannot save labels created using templates to memory.
- When you access Text Label or Pattern Label templates, your most recently printed Text Label or Pattern Label template label length will be recalled.
- "Please Cut" is displayed on the screen for 2 seconds after pressing  when "Print" appears.

## FORMATTING KEYS



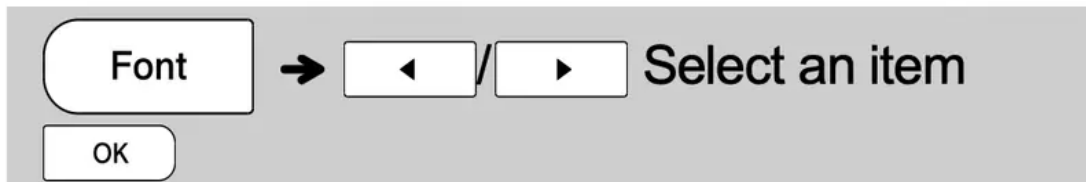 



 









Font Key 

1. Press  to change the font settings.


 


2. Press  /  to select the settings and press .

Font	A A	Helsinki	A 1
		Brussels	A 1
		US	A 1
		Florida	<b>A 1</b>
		Belgium	<b>A 1</b>
		San Diego	A 1
		Los Angeles	<b>A 1</b>
		Calgary	<i>A 1</i>
		Atlanta	A 1
		Adams	A 1
		Brunei	<b>A 7</b>
		Istanbul	<b>A 1</b>
		Sofia	<b>A 1</b>
		Germany	<i>A 1</i>
Size	A A A	Large	<u>A</u>
		Medium	<u>A</u>
		Small	<u>A</u>
Width	A A	Normal	<b>A</b>
		× 2	<b>A</b>
		× 1/2	A

Style		Normal	
		Bold	
		Outline	
		Shadow	
		Solid	
		Italic	
		I+Bold	
		I+Outline	
		I+Shadow	
		Vertical	
Alignment		Left	
		Center	
		Right	
		Justify	

**NOTE:**

- To cancel operations, press .
- Refer to the Font samples table included in this insertion sheet.
- The actual printed font size depends on the tape width, number of characters and number of input lines. Once characters reach a minimum size, the selected font will default to a custom font which is based on the Helsinki style. This allows labels to be printed using the smallest text possible on narrow or multi-line labels.
- After pressing , "Accepted" will be displayed for approximately 1 second.

Frame Key

Press  to select the frame design. Refer to the Frame designs table included in this insertion sheet.

The diagram shows a sequence of steps for selecting a frame. It starts with a button labeled 'Frame'. An arrow points to a set of navigation controls: a left arrow, a right arrow, and a box containing '1 ! - 9 ('. To the right of these controls is the text 'Select a frame'. Below the 'Frame' button is an 'OK' button.

#### NOTE

 
- To cancel operations, press .
- If the message   
TAPE (   
TAPE ) appears on the right side of the display when selecting a frame, it means that frame is only available when using 0.47" (12mm) wide tape cassettes.
- You can select the frame design by pressing a number key of the Frame designs table included in this insertion sheet.
- After pressing , "Accepted" will be displayed for approximately 1 second.

Symbol Key











Press  to select various symbols. Refer to the table of symbols included in this insertion sheet.

The diagram shows a sequence of steps for selecting a symbol. It starts with a button labeled 'Symbol'. An arrow points to a set of navigation controls: a left arrow, a right arrow, and a box containing '[History\*1/Basic/Pictograph]'. Below this is an 'OK' button. Another arrow points to another set of navigation controls: a left arrow, a right arrow, and the text 'Select category'. Below this is another 'OK' button. A final arrow points to a third set of navigation controls: a left arrow, a right arrow, and the text 'Choose a symbol'. Below this is a final 'OK' button.

## NOTE

- To cancel operations, press .
- \*1 Once you select symbols, up to 7 recently used symbols are added to History.
- If you choose History, you cannot select the category.
- You can also select from basic and pictograph categories by pressing the shortcut keys included in this insertion sheet.

## Basic

<b>Punctuation</b>		<b>Greek Letter</b>	
<b>Mathematics</b>		<b>Number 1</b>	
<b>Brackets</b>		<b>Number 2</b>	
<b>Arrows</b>		<b>Number 3</b>	
<b>Unit</b>		<b>Shape</b>	

## Pictograph

Fun	Space	Kitchen	I
Family	A	Garden	J
Clothing	B	DIY	K
Vehicle	C	School	L
Sports	D	Office	M
Animal	E	Signs	N
Astrology	F	Datacom/AV	O
Event/Season	G	Electrical	P
Food	H		

## HELPFUL HINTS

### Short Cut

File	Menu → 1 !
Tab	Menu → 2 @
Unit	Menu → 3 #
LCD Contrast	Menu → 4 \$
Clear	Menu → BS
Language	Menu → Space

 


### Helpful Tips

Clear	↑Shift → BS
Feed	↑Shift → 🔍
Print Options	↑Shift → Print


 
### Resetting the P-touch

You can reset the P-touch labeler when you want to initialize the settings, or in the event it not working properly. All text, settings and stored files are cleared.

1.

Turn off the P-touch labeler, hold down  and  and then press  to turn the P-touch labeler back on.

2.

First release the power button, and then release  and .

The P-touch labeler turns on with the internal memory reset.


**CAUTION:** USING A COMBINATION OF DIFFERENT BATTERIES (SUCH AS Ni-MH AND ALKALINE), MAY RESULT IN AN EXPLOSION. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

**NOTE: Battery Recommendations**

 - Remove the batteries if you do not intend to use the P-touch labeler for an extended period of time.
- Dispose of the batteries at an appropriate collection point, not in the general waste stream. In addition, be sure to observe all applicable federal, state, and local regulations.
- When storing or discarding the batteries, wrap it (for example with cellophane tape), to prevent it from short-circuiting. (Refer to the picture on the lower right)

(Battery insulation example)


 


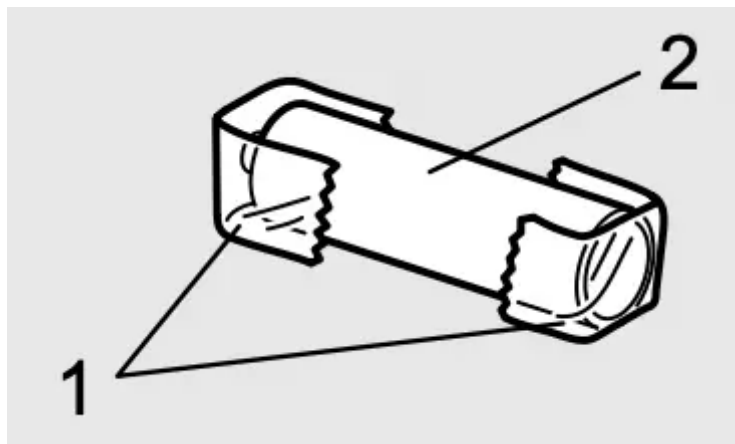


1. Cellophane tape
2. Alkaline or Ni-MH battery






# Troubleshooting

 Error message

  

 








Message	Cause/Remedy
Battery Low!	<p>The batteries are weak.</p> <p>If using AAA alkaline batteries: Replace them with new ones.</p> <p>If using Ni-MH batteries: Charge them fully.</p>
Battery Empty!	<p>The installed batteries are running low and will need to be changed for continued operation.</p>
Invalid!	<ul style="list-style-type: none"> <li>• There is no text above the cursor when you selected [Numbering].</li> <li>• Invalid character is selected for [Numbering].</li> <li>• Invalid number is selected for [Tab Length] or [Label Length].</li> <li>• An invalid value was entered as the label length while using templates.</li> </ul>
No Text!	<ul style="list-style-type: none"> <li>• You tried to print a text file when there is no data stored in the memory.</li> <li>•  is pressed when no text is entered.</li> <li>•  +  is pressed when no text is entered.</li> <li>•  is pressed when no text is entered.</li> <li>•  or  was pressed when no text was entered while using templates.</li> </ul>
2 Line Limit! / 1 Line Limit!	<ul style="list-style-type: none"> <li>•  You tried to enter a 3rd line by pressing</li> <li>• You tried to print or preview two lines of text while 0.13" (3.5mm) or 0.23" (6 mm) tape is installed. Install larger tape size.</li> </ul>
No Cassette!	<p>You tried to print, feed or preview a label when there is no cassette installed.</p>
Cutter Pressed	<p>Tape cutter lever is pressed in the middle of printing process.</p>

Message	Cause/Remedy
Text Full!	The maximum number of characters (80 characters for text, 50 characters for templates) have already been entered.
Change Length	Since the number of entered characters exceeds the label length, reduce the text, or select [Auto] as the label length.
No Frame OK?	<ul style="list-style-type: none"> <li>• Printing on 0.13" (3.5mm) tape with invalid Frame setting ON.</li> <li>• Using tape cassette smaller than 0.47"(12mm) wide though you selected a frame which is only available for 0.47"(12mm) wide tape cassettes. (Select  to print with no Frame,  to cancel.)</li> </ul>
Feed OK?	Feeding tape after printing when [Chain Print] is selected. Refer to "Setting Margin".
Insert 0.47"	Only 0.47"(12mm) tape cassette is available for templates.
Use TZe Tape!	Use a tape cassette with the  mark.

## What to do when...

 Problem	Solution
The display stays blank after you have turned on the machine.	<ul style="list-style-type: none"> <li>• Check that the batteries are correctly inserted.</li> <li>• If the batteries are weak, replace them.</li> <li>• Check that the adapter is correctly connected.</li> </ul>
When the label is printed out, there is too much margin (space) on both sides of the text.	<ul style="list-style-type: none"> <li>• See “Setting Margin” in this users guide and select [Half] or [Narrow] to have smaller margins for your label.</li> </ul>
The machine does not print, or the printed characters are not formed properly.	<ul style="list-style-type: none"> <li>• Check that the tape cassette has been inserted correctly.</li> <li>• If the tape cassette is empty, replace it.</li> <li>• Check the cassette cover is properly closed.</li> </ul>
The setting has cleared on its own.	<ul style="list-style-type: none"> <li>• The batteries may be weak. Replace them.</li> <li>• When power is disconnected for more than three minutes, all text &amp; formats in the display will be lost.</li> </ul>
A blank horizontal line appears through the printed label.	<ul style="list-style-type: none"> <li>• There may be some dust on the print head. Remove the tape cassette and use a dry cotton swab to gently wipe the print head with an up-and-down motion.</li> </ul>
The machine has “locked up” (i.e., nothing happens when a key is pressed, even though the machine is on.)	<ul style="list-style-type: none"> <li>• Refer to “Resetting the P-touch”.</li> </ul>
The power turns off when you try to print.	<ul style="list-style-type: none"> <li>• The batteries may be weak. Replace them.</li> <li>• Check that the batteries are correctly inserted.</li> <li>• A wrong adapter is used; the recommended adapter is the AD-24ES/AD-24ESA/AD24ESAW/AD-24ESA-01/AD-24ESAW-01.</li> </ul>

 Problem	Solution
<p>The tape does not feed properly or the tape gets stuck inside the machine.</p>	<ul style="list-style-type: none"> <li>• Check that the end of the tape feeds under the tape guides.</li> <li>• The cutter lever is pressed while printing. Do not touch the cutter lever during printing.</li> </ul>
<p>All text and format settings need to be cleared to create a new label.</p>	<ul style="list-style-type: none"> <li>• Press  +  and select [Text&amp;Format].</li> <li>• Press <ul style="list-style-type: none"> <li> →  /  [Clear]</li> <li> →  /  [Text&amp;Format]</li> <li></li> </ul> </li> </ul>
<p>To change language setting.</p>	<ul style="list-style-type: none"> <li>• Refer to "Initial Settings".</li> </ul>



Category	Symbols (Pictograph)
Garden	
DIY	
School	
Office	
Signs	
Datacom/AV	
Electrical	

Accented Characters			
A	Á Â Ã Ä Å Æ Æ Æ Æ Æ	a	á â ã ä å æ ã ç å ä ä
C	Ç Ć Ć Ć	D	Ď Ď Ď
c	ç ċ ċ ċ	d	d' ð đ
E	É Ê Ë Ì Í Î Ï	e	é è ê ë ě ē è ē
G	Ĝ Ğ	g	ğ ğ
I	İ İ İ İ Ĭ Ĭ Ĭ	i	í î ï ï ĭ ĭ ĭ
K	Ķ	k	ķ
L	Ł Ł Ł Ł	l	ł ł ł ł
N	Ñ Ñ Ñ Ñ	n	ñ ñ ñ ñ
R	Ŕ Ŕ Ŕ Ŕ	r	ř ř ř ř
O	Ó Ô Õ Ø Ö Õ Æ Õ	o	ó ô õ ø ö õ œ õ
S	Š Š Š Š Š ß	s	š š š š š ß
T	Ť Ť Ť Ť	t	t' † † †
U	Ú Û Ü Ü Ü Ú Ú Ú	u	ú û ü ü ú ú ú
Y	Ý Ÿ	y	ý ŷ
Z	Ž Ž Ž	z	ž ž ž












Font samples			
Helsinki	ABC\$£€39	Calgary	<i>ABC\$£€39</i>
Brussels	ABC\$£€39	Atlanta	ABC\$£€39
US	ABC\$£€39	Adams	<b>ABC\$£€39</b>
Florida	<b>ABC\$£€39</b>	Brunei	<b>ABC\$£€39</b>
Belgium	ABC\$£€39	Istanbul	<b>ABC\$£€39</b>
San Diego	<b>ABC\$£€39</b>	Sofia	<b>ABC\$£€39</b>
Los Angeles	<b>ABC\$£€39</b>	Germany	<i>ABC\$£€39</i>



Text Label templates					
01		07	<b>File No.1</b>	13	To Name
02		08	<b>file</b> No.1	14	Bill White ABC Company
03		09	File No.1	15	Bill White ABC Company
04		10	<b>File</b> No.1	16	ABC Company <b>Bill White</b>
05		11	To Name	17	Bill White ABC Company
06		12	To Name		

 Pattern Label templates					
01		05		09	
02		06		10	
03		07			
04		08			

 Frame designs					
01	Off (No frame)	12		23	
02	ABCDE	13		24	
03		14		25	
04		15		26	
05		16		27	
06		17		28	
07		18		29	
08		19		30	
09		20		31	
10		21		32	
11		22		33	

Frame designs					
34		56		78	
35		57		79	
36		58		80	
37		59		81	
38		60		82	
39		61		83	
40		62		84	
41		63		85	
42		64		86	
43		65		87	
44		66		88	
45		67		89	
46		68		90	
47		69		91	
48		70		92	
49		71		93	
50		72		94	
51		73		95	
52		74		96	
53		75		97	
54		76		98	
55		77		99	

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

---

Document generated by [ManualsFile](#)

