




ENERGY SAVING MODE

This machine is equipped with an energy saving feature. The machine will automatically enter power off mode after 9 minutes.




To turn the machine on either press the Espresso or Lungo button.

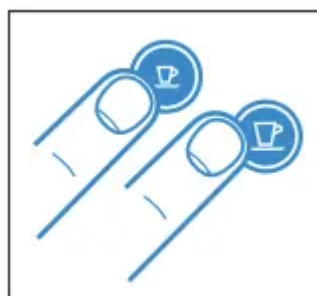

To turn the machine off before automatic Power Off mode, press both the Espresso and Lungo button simultaneously.

To change this setting:

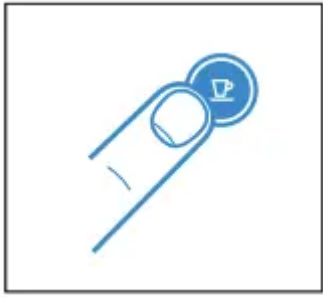

1. With machine being turned off. Press and hold the Espresso button for 3 seconds.



2. The Espresso button will blink to indicate the current setting.




3. To change this setting press the Espresso button: One time for power off mode after 9 minutes One more time for power off mode after 30 minutes One more time to deactivate




4. To exit the energy saving mode press the Lungo button for 3 seconds.

FIRST USE OR AFTER A LONG PERIOD OF NON USE

CAUTION: first read the safety precautions to avoid risks of fatal electrical shocks and fire.

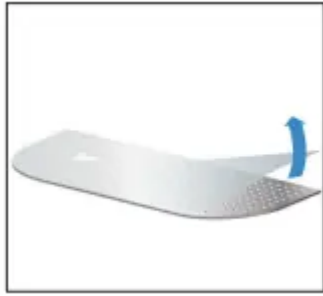

1. Remove the plastic film from the drip grid.

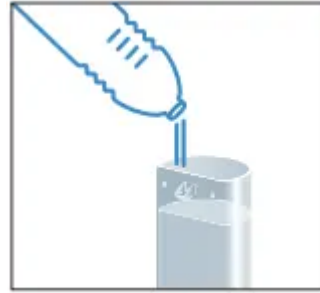

2. Rinse the water tank before filling with potable water.



3. Place a container (min. 1 L) under coffee outlet.



4. Plug into mains




5. Press the Espresso or Lungo button to activate the machine



Blinking Lights: heating up (25 sec)

Steady Lights: ready

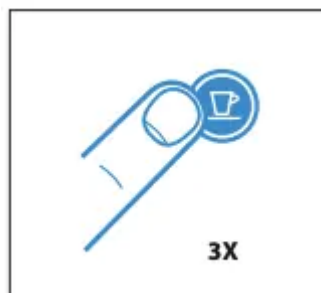


6. Press the Lungo button to rinse the machine. Repeat 3 times



COFFEE PREPARATION




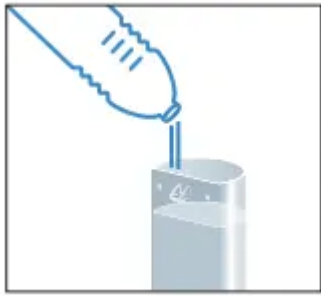

1. Rinse then fill the water tank with potable water



2. Press the Espresso or Lungo button to activate the machine.

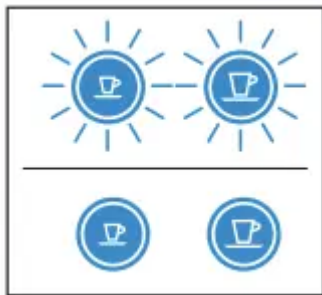

Blinking Lights: heating up (25sec)

Steady Lights: ready



3. Lift the lever completely and insert a Nespresso capsule.



4. Close the lever and place a cup under the coffee outlet.



5. Press the Espresso (40ml) or the Lungo (110 ml) button to start. Preparation will stop automatically. To stop the coffee flow or top up your coffee, press again.

CAUTION: never lift lever during operation and refer to the safety precautions to avoid possible harm when operating the appliance.



6. Remove the cup. Lift and close the lever to eject the capsule into the used capsule container

NOTE: during heat up, you can press either coffee button while blinking. The coffee will then flow automatically when the machine is ready.

PROGRAMMING THE WATER VOLUME



1. Turn the machine on and wait for it to be in ready mode (steady lights).



2. Fill the water tank with potable water and insert a Nespresso capsule.



3. Place a cup under the coffee outlet.



4. Press and hold the Espresso or Lungo button.

5. Release button once the desired volume is served.

6. Water volume level is now stored

MILK PREPARATION

WARNING: risk of electrical shock and fire! Make sure the under side of the milk frother is dry.



Place milk frother on connector


Milk frother is provided with:



1 whisk



1 mixer

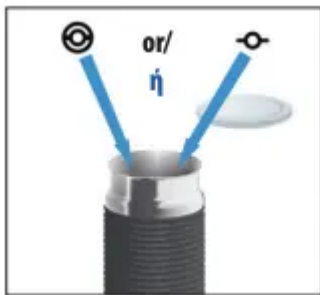

Attach whisk or mixer; see Recipes section



Fill milk frother with desired amount of milk.

CAUTION: spattered milk may cause burns. Only use milk frother with lid.

Milk frother's maximum level indicated:



Milk froth

2 Nespresso Cappuccino cups

1 Nespresso Recipe glass




Hot milk

2 Nespresso Recipe glasses

Milk frother's minimum level:


Make sure to cover the base of whisk/mixer

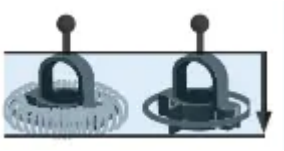


TIP: use cold and newly opened UHT. full-fat or semi-skimmed milk.



Press button to start. Lamp lights up. Milk frother stops automatically.

 For hot preparation, briefly press button to start. Take approx 70-80s

 For cold milk froth, keep button pressed for approx. 2 seconds. Takes approx. 60 s

EMPTYING THE SYSTEM BEFORE A PERIOD OF NON-USE AND FOR FROST PROTECTION. OR BEFORE A REPAIR


NOTE: your machine will be blocked for 10 minutes after emptying mode.



1. To enter the emptying mode, press both the Espresso and Lungo button to turn the machine off.




2. Remove the water tank and open the lever

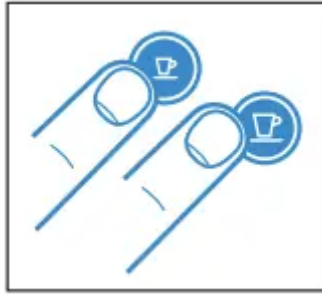

3. Press both the Espresso and Lungo button for 3 seconds



Both LEDs blink alternatively.

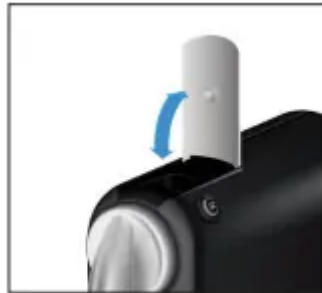

4. Close the lever.

5. Machine switches off automatically.

6. Empty and clean the used capsule container and drip tray.

RESET TO FACTORY SETTINGS



1. With machine being turned off, press and hold down the Lungo button for 5 seconds.



2. LEDs will blink fast 3 times to confirm machine has been reset to factory settings.



3. LEDs will then continue to blink normally, as heating up, until ready.

Steady lights: machine ready

Factory settings

Espresso Cup: 40 ml

Lungo Cup: 110 ml

Power Off mode: 9 min

DESCALING

This machine is equipped with a descaling alarm. When both LEDs blink during ready mode, your machine needs descaling.


NOTE: duration approximately 15 minutes.




1. Remove the capsule and close the lever.



2. Empty the drip tray and used capsule container

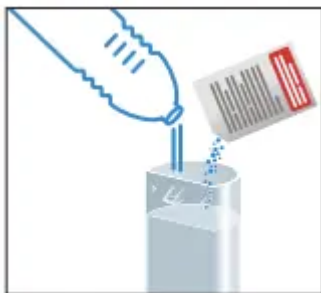

3. Fill the water tank with 0.5 L of potable water and add 1 Nespresso descaling liquid.

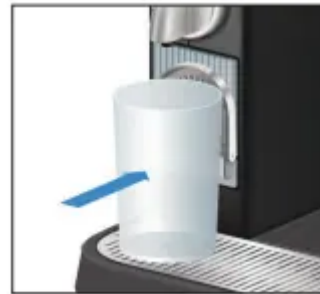

4. Place a container (min. volume 1 L) under the coffee outlet.




5. To enter the descaling mode, while the machine is turned on, press both the Espresso and Lungo button for 3 seconds.




Both LEDs blink.



6. Press the Lungo button and wait until the water tank is empty

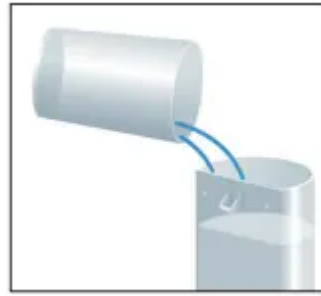


7. Refill the water tank with the used descaling solution collected in the container and repeat step 4 and 6

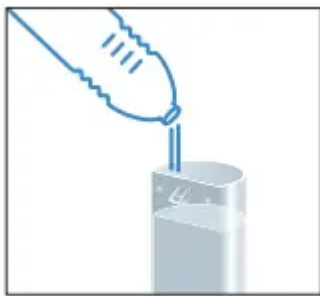

8. Empty and rinse the water tank. Fill with potable water.

9. When ready, repeat step 4 and 6 to now rinse the machine.

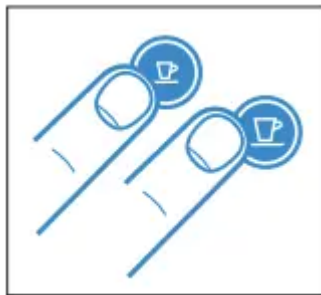


10. To exit the descaling mode, press both the Espresso and Lungo button for 3 seconds

11. The machine is now ready for use.

CAUTION: the descaling solution can be harmful. Avoid contact with eyes, skin and surfaces. Never use any product other than the Nespresso descaling kit available at the Nespresso Club to avoid damage to your machine. The following table will indicate the descaling frequency required for the optimum performance of your machine, based on water hardness. For any additional questions you may have regarding descaling, please contact your Nespresso Club.



fH	dH	CaCO ₃	Cups	Φλιτζάνια (ml / γιλ)
36	20	360 mg/l	↑	300
18	10	180 mg/l		600
0	0	0 mg/l		1200



CLEANING

WARNING Risk of fatal electrical shock and fire.

Never immerse the appliance or part of it in water. Be sure to unplug the machine before cleaning. Do not use any strong cleaning agent or solvent cleaner. Do not use sharp objects, brushes or sharp abrasives. Do not place in a dishwasher.

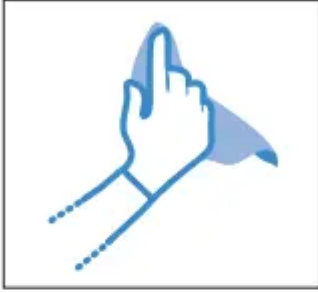Clean the coffee outlet regularly with a soft damp cloth.

Maintenance unit can be removed in separate pieces for easy cleaning.

MILK FROTHER CLEANING

NOTICE: milk frother is waterproof but NOT dishwasher safe. Make sure to clean the Aeroccino after each preparation to avoid build up of milk and residue.



1. Remove milk frother from connector and detach whisks by hand (no tools required).



2. Remove seal from lid to clean both parts. Rinse and clean with a soft damp cloth.

3. Once clean, clip whisk back to inner base of jug to avoid misplacing it.

TROUBLESHOOTING

No light indicator	Check the mains, plug, voltage, and fuse. In case of problems, call the Nespresso Club.
No coffee, no water.	<ul style="list-style-type: none"> • First use: fill water tank with warm water (max. 55°C) and run through machine according to instructions on page 13. • Water tank is empty. Fill water tank. • Descale if necessary; see Descaling section.
Coffee comes out very slowly.	Flow speed depends on the coffee variety Descal if necessary; see Descaling section.
Coffee is not hot enough.	Preheat cup Descal if necessary
Capsule area is leaking (water in capsule container).	Position capsule correctly. If leakages occur, call the Nespresso Club
Irregular blinking.	Send appliance to repair or call the Nespresso Club.
No coffee, just water runs out (despite inserted capsule)	In case of problems, call the Nespresso Club.
Both LEDs blink during ready mode.	Proceed to descaling

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)