


 

 

 



 
 
 

 
 
 
 

 



 




 


 


 
 

 
 
 
 
 

 

## Instrument Panel

### Indicators


 









Indicator	Name	On/Blinking	Explanation	Message
 <p>U.S. <b>BRAKE</b> Canada (Red)</p>	Parking Brake and Brake System Indicator (Red)	<ul style="list-style-type: none"> <li>Comes on for a few seconds when you set the power mode to ON, then goes off if the parking brake has been released.</li> <li>Comes on when the parking brake is applied, and goes off when it is released.</li> <li>Comes on when the brake fluid level is low.</li> <li>Comes on if there is a problem with the brake system.</li> <li>The beeper sounds and the indicator comes on if you drive with the parking brake not fully released.</li> </ul>	<ul style="list-style-type: none"> <li><b>Comes on while driving</b> - Make sure the parking brake is released. Check the brake fluid level.                             <ul style="list-style-type: none"> <li>➤ <b>What to do when the indicator comes on while driving</b> P. 569</li> </ul> </li> <li><b>Comes on along with the ABS indicator</b> - Have your vehicle checked by a dealer.                             <ul style="list-style-type: none"> <li>➤ <b>If the Brake System Indicator (Red) Comes On</b> P. 569</li> </ul> </li> </ul>	
 <p>U.S. <b>BRAKE SYSTEM</b> Canada (Amber)</p>	Parking Brake and Brake System Indicator (Amber)	<ul style="list-style-type: none"> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>Comes on if there is a problem with a system related to braking other than the conventional brake system.</li> </ul>	<ul style="list-style-type: none"> <li><b>Stays on constantly</b> - Have your vehicle checked by a dealer.</li> <li>With this indicator on, your vehicle still has normal braking ability.</li> </ul>	
	Malfunction Indicator Lamp	<ul style="list-style-type: none"> <li>Comes on when you set the power mode to ON, and goes off when the engine starts, or after several seconds if the engine did not start. If "readiness codes" have not been set, it blinks five times before it goes off.</li> <li>Comes on if there is a problem with the emissions control system.</li> <li>Blinks when a misfire in the engine's cylinders is detected.</li> </ul>	<ul style="list-style-type: none"> <li>Readiness codes are part of the on board diagnostics for the emissions control systems.                             <ul style="list-style-type: none"> <li>➤ <b>Testing of Readiness Codes</b> P. 587</li> </ul> </li> <li><b>Comes on while driving</b> - Have your vehicle checked by a dealer.</li> <li><b>Blinks while driving</b> - Stop in a safe place where there are no flammable objects. Stop the engine for 10 minutes or more, and wait for it to cool down. Then, take your vehicle to a dealer.                             <ul style="list-style-type: none"> <li>➤ <b>If the Malfunction Indicator Lamp Comes On or Blinks</b> P. 568</li> </ul> </li> </ul>	
	Charging System Indicator	<ul style="list-style-type: none"> <li>Comes on when you set the power mode to ON, and goes off when the engine starts.</li> <li>Comes on when the battery is not charging.</li> </ul>	<ul style="list-style-type: none"> <li><b>Comes on while driving</b> - Turn off the climate control system and rear defogger in order to reduce electricity consumption.                             <ul style="list-style-type: none"> <li>➤ <b>If the Charging System Indicator Comes On</b> P. 568</li> </ul> </li> </ul>	
	Gear Position Indicator	<ul style="list-style-type: none"> <li>Indicates the current gear selection.</li> </ul>	<ul style="list-style-type: none"> <li>➤ <b>Shifting</b> P. 401</li> </ul>	—
	M (sequential mode) Indicator/ Sequential Mode Gear Selection Indicator	<ul style="list-style-type: none"> <li>Comes on when the manual sequential shift mode is applied.</li> </ul>	<ul style="list-style-type: none"> <li>➤ <b>Sequential Mode</b> P. 407</li> </ul>	—







 

 


 

 
 


 


 

 

	Transmission System Indicator	<ul style="list-style-type: none"> <li>The indicated current gear selection blinks if there is a problem with the transmission system.</li> </ul>	<ul style="list-style-type: none"> <li>Avoid sudden start and acceleration, and stop in a safe place immediately. Have your vehicle checked by a dealer.</li> </ul>	
		<ul style="list-style-type: none"> <li>All the gear positions may light for several seconds, and go off.</li> </ul>	<ul style="list-style-type: none"> <li>When all the gear positions light, immediately stop your vehicle in a safe place.</li> <li>Indicators go off if there is no problem. However, even if they go off, take your vehicle to a dealer for inspection.</li> </ul>	
		<ul style="list-style-type: none"> <li>The indicated current gear selection or all the gear positions blink if there is a problem with the transmission system, and the vehicle no longer moves.</li> </ul>	<ul style="list-style-type: none"> <li>Immediately stop in a safe place. <ul style="list-style-type: none"> <li><b>Emergency Towing</b> P. 577</li> </ul> </li> <li>Have your vehicle checked by a dealer.</li> </ul>	
		<ul style="list-style-type: none"> <li>The indicated current gear selection or all the gear positions blink if you cannot select <b>P</b> due to the transmission system failure.</li> </ul>	<ul style="list-style-type: none"> <li>The engine can be activated as a temporary measure. <ul style="list-style-type: none"> <li><b>If the Transmission Indicator Blinks along with the Warning Message</b> P. 571</li> </ul> </li> <li>Set the parking brake when parking.</li> <li>Have your vehicle checked by a dealer immediately.</li> </ul>	
	Seat Belt Reminder Indicator	<ul style="list-style-type: none"> <li>Comes on and the beeper sounds if you are not wearing a seat belt when you set the power mode to ON.</li> <li>If the front passenger is not wearing a seat belt, the indicator comes on a few seconds later.</li> <li>Blinks while driving if either you and/or the front passenger has not fastened a seat belt. The beeper sounds and the indicator blinks at regular intervals.</li> </ul>	<ul style="list-style-type: none"> <li>The beeper stops and the indicator goes off when you and the front passenger fasten their seat belts.</li> <li><b>Stays on after you and/or the front passenger has fastened the seat belt(s)</b> - A detection error may have occurred in the sensor. Have your vehicle checked by a dealer. <ul style="list-style-type: none"> <li><b>Seat Belt Reminder</b> P. 38</li> </ul> </li> </ul>	 
		<ul style="list-style-type: none"> <li>Comes on when the fuel reserve is running low (approximately 2.5 U.S. gal./9.5 Liter left).</li> <li>Blinks if there is a problem with the fuel gauge.</li> </ul>	<ul style="list-style-type: none"> <li><b>Comes on</b> - Refuel your vehicle as soon as possible.</li> <li><b>Blinks</b> - Have your vehicle checked by a dealer.</li> </ul>	 
	Anti-lock Brake System (ABS) Indicator	<ul style="list-style-type: none"> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>If it comes on at any other time, there is a problem with the ABS.</li> </ul>	<ul style="list-style-type: none"> <li><b>Stays on constantly</b> - Have your vehicle checked by a dealer. With this indicator on, your vehicle still has normal braking ability but no anti-lock function. <ul style="list-style-type: none"> <li><b>Anti-lock Brake System (ABS)</b> P. 478</li> </ul> </li> </ul>	





 
 
 




	<p>Supplemental Restraint System Indicator</p>	<ul style="list-style-type: none"> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>Comes on if a problem with any of the following is detected: <ul style="list-style-type: none"> <li>Supplemental restraint system</li> <li>Side airbag system</li> <li>Side curtain airbag system</li> <li>Seat belt tensioner</li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li><b>Stays on constantly or does not come on at all</b> - Have your vehicle checked by a dealer.</li> </ul>	
	<p>Auto High-Beam Indicator</p>	<ul style="list-style-type: none"> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>Comes on when all the operating conditions of the Auto high-beam are met.</li> </ul>	<ul style="list-style-type: none"> <li> <b>Auto High-Beam</b> P. 165</li> </ul>	<p>—</p>
	<p>Vehicle Stability Assist™ (VSA®) System Indicator</p>	<ul style="list-style-type: none"> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>Blinks when VSA®, or trailer stability assist is active.</li> <li>Comes on if there is a problem with the VSA®, hill start assist, trailer stability assist or brake lighting system.</li> </ul>	<ul style="list-style-type: none"> <li><b>Stays on constantly</b> - Have your vehicle checked by a dealer. <ul style="list-style-type: none"> <li> <b>Vehicle Stability Assist™ (VSA®), aka Electronic Stability Control (ESC), System</b> P. 418</li> <li> <b>Trailer Stability Assist</b> P. 387</li> <li> <b>Hill start assist system</b> P. 398</li> </ul> </li> <li>When <b>Trailer Stability Assist Problem</b> is displayed on the Driver Information Interface, the VSA® does not activate.</li> </ul>	  
	<p>Vehicle Stability Assist™ (VSA®) OFF Indicator</p>	<ul style="list-style-type: none"> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>Comes on when VSA® OFF switch is pressed.</li> </ul> <p><b>AWD models</b></p> <ul style="list-style-type: none"> <li>Comes on when Mud/Sand mode is selected by pressing Intelligent Traction Management System switch.</li> </ul> <p><b>AWD models</b></p> <ul style="list-style-type: none"> <li>Comes on when VSA® OFF switch is pressed.</li> </ul>	<p>—</p> <ul style="list-style-type: none"> <li>Appears when Normal or Snow mode is selected. <ul style="list-style-type: none"> <li> <b>VSA® On and Off</b> P. 419</li> </ul> </li> <li>Appears when Mud mode is selected. <ul style="list-style-type: none"> <li> <b>Intelligent Traction Management</b> P. 416</li> </ul> </li> <li>Appears when Sand mode is selected. <ul style="list-style-type: none"> <li> <b>Intelligent Traction Management</b> P. 416</li> </ul> </li> <li>Appears when Mud or Sand mode is selected. <ul style="list-style-type: none"> <li> <b>VSA® On and Off</b> P. 419</li> </ul> </li> </ul>	<p>—</p>    
	<p>Electric Power Steering (EPS) System Indicator</p>	<ul style="list-style-type: none"> <li>Comes on when you set the power mode to ON, and goes off when the engine starts.</li> <li>Comes on if there is a problem with the EPS system.</li> </ul>	<ul style="list-style-type: none"> <li><b>Stays on constantly or does not come on at all</b> - Have your vehicle checked by a dealer. <ul style="list-style-type: none"> <li> <b>If the Electric Power Steering (EPS) System Indicator Comes On</b> P. 569</li> </ul> </li> </ul>	




 
 

	<p>Low Tire Pressure/TPMS Indicator</p>	<ul style="list-style-type: none"> <li>• Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>• Comes on if the tire pressure of any of the tires becomes significantly low.</li> <li>• Blinks for about one minute, and then stays on if there is a problem with the TPMS with Tire Fill Assist, or when a compact spare tire is temporarily installed.</li> </ul>	<ul style="list-style-type: none"> <li>• <b>Comes on while driving</b> - Stop in a safe place, check tire pressures, and inflate the tire(s) if necessary.</li> <li>• <b>Blinks and remains on</b> - Have your vehicle checked by a dealer. If the vehicle is fitted with a compact spare, get your regular tire repaired or replaced and put back on your vehicle as soon as you can.</li> </ul>	 
	<p>Turn Signal and Hazard Warning Indicators</p>	<ul style="list-style-type: none"> <li>• Blinks when you operate the turn signal lever.</li> <li>• Blink along with all turn signals when you press the hazard warning button.</li> </ul>	<ul style="list-style-type: none"> <li>• <b>Does not blink or blinks rapidly</b>   <b>Replacing Light Bulbs</b> P. 521, 522</li> </ul>	<p>—</p>
	<p>High Beam Indicator</p>	<ul style="list-style-type: none"> <li>• Comes on when the high beam headlights are on.</li> </ul>	<p>—</p>	<p>—</p>
	<p>Lights On Indicator</p>	<ul style="list-style-type: none"> <li>• Comes on whenever the light switch is on, or in <b>AUTO</b> when the exterior lights are on.</li> </ul>	<ul style="list-style-type: none"> <li>• If you set the power mode to ACCESSORY or VEHICLE OFF while the exterior lights are on, a chime sounds when the driver's door is opened.</li> </ul>	<p>—</p>
	<p>Fog Light Indicator</p>	<ul style="list-style-type: none"> <li>• Comes on when the fog lights are on.</li> </ul>	<p>—</p>	<p>—</p>
<p>Indicator</p> 	<p>Immobilizer System Indicator</p>	<ul style="list-style-type: none"> <li>• Comes on briefly when you set the power mode to ON, then goes off.</li> <li>• Blinks if the immobilizer system cannot recognize the key information.</li> </ul>	<ul style="list-style-type: none"> <li>• <b>Blinks</b> - You cannot start the engine. Set the power mode to VEHICLE OFF*1, then select the ON mode again.</li> <li>• <b>Repeatedly blinks</b> - The system may be malfunctioning. Have your vehicle checked by a dealer.</li> <li>• Do not attempt to alter this system or add other devices to it. Electrical problems can occur.</li> </ul>	<p>—</p>
<p>Indicator</p> 	<p>Security System Alarm Indicator</p>	<ul style="list-style-type: none"> <li>• Comes on briefly when you set the power mode to ON, then goes off.</li> <li>• Blinks when the security system alarm has been set.</li> </ul>	<ul style="list-style-type: none"> <li>•  <b>Security System Alarm</b> P. 149</li> </ul>	<p>—</p>

\*1:Canadian models only: Apply and hold the brake pedal before selecting the ON mode.

Indicator	Name	On/Blinking	Explanation	Message
	System Message Indicator	<ul style="list-style-type: none"> <li>Comes on along with a beep when a problem is detected. A system message on the driver information interface appears at the same time.</li> </ul>	<ul style="list-style-type: none"> <li>While the indicator is on, press the  (home) button, select <b>Warnings</b>, then press the <b>ENTER</b> button to see the message again.</li> <li>Refer to the Indicators information in this chapter when a system message appears on the driver information interface. Take the appropriate action for the message.</li> <li>The driver information interface does not return to the normal screen unless the warning is canceled, or the <b>ENTER</b> button is pressed repeatedly.</li> </ul>	—
	Econ Mode Indicator	<ul style="list-style-type: none"> <li>Comes on when the Econ mode is on.</li> </ul>	 <b>ECON Mode</b> P. 415	
<div style="border: 1px solid black; padding: 2px; margin-bottom: 2px;">Normal</div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 2px;">Snow</div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 2px;">Mud *1</div> <div style="border: 1px solid black; padding: 2px;">Sand *1</div>	Intelligent Traction Management Indicator	<ul style="list-style-type: none"> <li>Comes on when pressing the Intelligent Traction Management button.</li> </ul>	 <b>Intelligent Traction Management</b> P. 416	<div style="border: 1px solid black; padding: 2px; margin-bottom: 2px;">2WD models</div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 2px;"></div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 2px;">AWD models</div> <div style="border: 1px solid black; padding: 2px;"></div>
	Auto Idle Stop Indicator (Green)	<ul style="list-style-type: none"> <li>Comes on when Auto Idle Stop is in operation. The engine automatically shuts off.</li> </ul>	 <b>Auto Idle Stop</b> P. 409	—
	Auto Idle Stop System Indicator (Amber)	<ul style="list-style-type: none"> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> </ul>	—	—
		<ul style="list-style-type: none"> <li>Comes on when Auto Idle Stop system has been turned off by the Auto Idle Stop <b>OFF</b> button.</li> <li>Blinks if there is a problem with the Auto Idle Stop system.</li> </ul>	 <b>Auto Idle Stop System ON/OFF</b> P. 410	 
	All-wheel drive (AWD) Indicator*	<ul style="list-style-type: none"> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>Comes on if there is a problem with the AWD system.</li> <li>Blinks when the differential temperature is too high.</li> </ul>	<ul style="list-style-type: none"> <li><b>Stays on constantly</b> - The engine drives the front wheels only in this state. Have your vehicle checked by a dealer.</li> </ul>	
		<ul style="list-style-type: none"> <li>Blinks while driving - Stop in a safe place, change to <b>[P]</b>, and idle the engine until the indicator goes off. If the indicator does not stop blinking, take your vehicle to a dealer.</li> </ul>	 <b>Intelligent Variable Torque Management (i-VTM4™) AWD System*</b> P. 426	
	Lane Keeping Assist System (LKAS) Indicator (Amber)	<ul style="list-style-type: none"> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>Comes on if there is a problem with the LKAS.</li> </ul>	<ul style="list-style-type: none"> <li><b>Stays on constantly</b> - Have your vehicle checked by a dealer.</li> </ul>	
	Lane Keeping Assist System (LKAS) Indicator (Green)	<ul style="list-style-type: none"> <li>Comes on when you press the <b>MAIN</b> button.</li> </ul>	 <b>Lane Keeping Assist System (LKAS)</b> P. 459	—

	Road Departure Mitigation (RDM) Indicator	<ul style="list-style-type: none"> <li>Comes on for a few seconds when you change the power mode to ON, then goes off.</li> <li>Comes on if there is a problem with the RDM system.</li> </ul>	<ul style="list-style-type: none"> <li><b>Stays on constantly</b> - Have your vehicle checked by a dealer.</li> </ul>	
		<ul style="list-style-type: none"> <li>Comes on when the RDM system shuts itself off.</li> </ul>	<ul style="list-style-type: none"> <li><b>Stays on</b> - The temperature inside the camera is too high. Use the climate control system to cool down the camera. The system activates when the temperature inside the camera cools down. <ul style="list-style-type: none"> <li>➤ <b>Front Sensor Camera</b> P. 473</li> </ul> </li> </ul>	
		<ul style="list-style-type: none"> <li>Comes on if there is a problem with the RDM system.</li> </ul>	<ul style="list-style-type: none"> <li><b>Stays on</b> - The area around the camera is blocked by dirt, mud, etc. Stop your vehicle in a safe place, and wipe it off with a soft cloth.</li> <li>Have your vehicle checked by a dealer if the indicator and message come back on after you cleaned the area around the camera. <ul style="list-style-type: none"> <li>➤ <b>Front Sensor Camera</b> P. 473</li> </ul> </li> </ul>	
	Adaptive Cruise Control (ACC) Indicator (Amber)	<ul style="list-style-type: none"> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>Comes on if there is a problem with ACC.</li> </ul>	<ul style="list-style-type: none"> <li><b>Comes on while driving</b> - Have your vehicle checked by a dealer.</li> </ul>	
	Adaptive Cruise Control (ACC) Indicator (Green)	<ul style="list-style-type: none"> <li>Comes on when you press the <b>MAIN</b> button.</li> </ul>	<ul style="list-style-type: none"> <li>➤ <b>Adaptive Cruise Control (ACC)</b> P. 446</li> </ul>	
	Collision Mitigation Braking System™ (CMBS™) Indicator	<ul style="list-style-type: none"> <li>Comes on for a few seconds when you change the power mode to ON, then goes off.</li> <li>Comes on when you deactivate the CMBS™. A driver information interface message appears for five seconds.</li> <li>Comes on if there is a problem with the CMBS™.</li> </ul>	<ul style="list-style-type: none"> <li><b>Stays on constantly without the CMBS™ off</b> - Have your vehicle checked by a dealer. <ul style="list-style-type: none"> <li>➤ <b>Collision Mitigation Braking System™ (CMBS™)</b> P. 434</li> </ul> </li> </ul>	 

## Models with Blind spot information System

Indicator	Name	On/Blinking	Explanation	Message
	Blind spot information System Indicator	<ul style="list-style-type: none"> <li>Stays on while blind spot information system is turned off.</li> </ul>	<p>—</p>	
		<ul style="list-style-type: none"> <li>Comes on when mud, snow, or ice accumulates in the vicinity of sensor.</li> </ul>	<ul style="list-style-type: none"> <li><b>Comes on while driving</b> - Remove the obstacle in the vicinity of the sensor. <ul style="list-style-type: none"> <li>➤ <b>Blind spot information System*</b> P. 421</li> </ul> </li> </ul>	
		<ul style="list-style-type: none"> <li>Comes on if there is a problem with the system.</li> </ul>	<ul style="list-style-type: none"> <li><b>Comes on while driving</b> - Have your vehicle checked by a dealer.</li> </ul>	

# Controls

## Clock

### Adjusting the Clock


#### Models without navigation system

You can adjust the time manually in the audio/information screen, with the power mode in ON.

#### ■ Adjusting the Time





Using the Settings menu on the audio/ information screen

1. Select , then select Settings.
2. Select System.
3. Select Date & Time.
4. Select Set Date & Time.
5. Select Automatic Date & Time, then select OFF.

To adjust time:

6. Select Set Time.

7. Selecting / .

-AM/PM icon can be switched to each other either by selecting / , or by directly touching the icon.

-When you customize the clock display to 24 hour clock, AM/PM icon is not displayed.



8. Select Save to set the time.

#### Models with navigation system

The clock is automatically updated through the navigation system, so the time does not need to be adjusted.

### Using the Settings menu on the audio/information screen



You can also adjust the clock by touching the clock displayed on the upper right corner of the display or the Clock icon on the home screen.

1. Touch the clock on the display. The clock screen of the select face-type appears.
2. Select Settings.
3. Select Date & Time Settings.
4. Select Set Date & Time.
5. Select Automatic Date & Time, then select OFF.
6. Select Set Date or Set Time.
7. Adjusting the dates, hours and minutes by selecting / .
8. Select Save to set the time.

You can customize the clock display to show the 12 hour clock or 24 hour clock.

### To adjust date:




6. Select Set Date.
7. Selecting / .
8. Select Save to set the date.

## Locking and Unlocking the Doors

### Key Types and Functions


This vehicle comes with the following keys:

Use the keys to start and stop the engine, and to lock and unlock all the doors and tailgate.

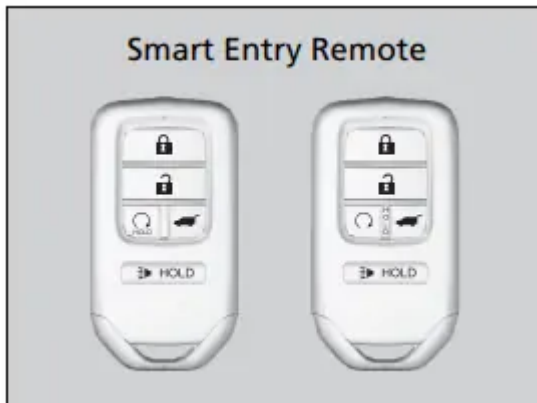

### Built-in Key


The built-in key can be used to lock/unlock the doors when the smart entry remote battery becomes weak and the power door lock/ unlock operation is disabled.

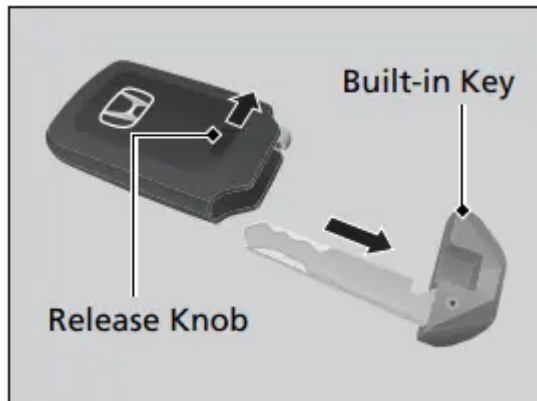

To remove the built-in key, slide the release knob and then pull out the key. To reinstall the built-in key, push the built-in key into the smart entry remote until it clicks.

### Key Number Tag

Contains a number that you will need if you purchase a replacement key.

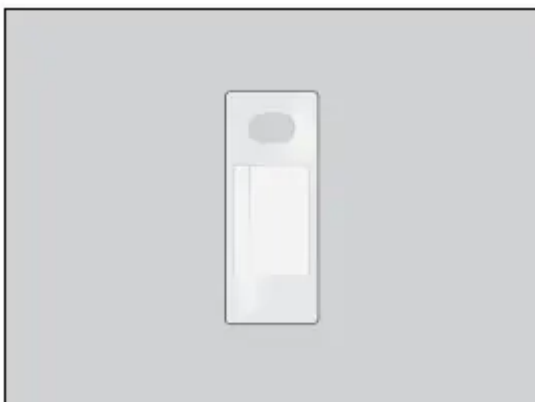

*Keep the key number tag separate from the key in a safe place outside of your vehicle. If you wish to purchase an additional key, contact a dealer.*

*If you lose your key and you cannot start the engine, contact a dealer.*

## Low Smart Entry Remote Signal Strength

The vehicle transmits radio waves to locate the smart entry remote when locking/ unlocking the doors and tailgate, or to start the engine.

In the following cases, locking/unlocking the doors and tailgate, or starting the engine may be inhibited or operation may be unstable:


- Strong radio waves are being transmitted by nearby equipment.
- You are carrying the smart entry remote together with telecommunications equipment, laptop computers, cell phones, or wireless devices.
- A metallic object is touching or covering the smart entry remote.

*Communication between the smart entry remote and the vehicle consumes the smart entry remote's battery. Battery life is about two years, but this varies depending on regularity of use. The battery is consumed whenever the smart entry remote is receiving strong radio waves. Avoid placing it near electrical appliances such as televisions and personal computers.*

## Locking/Unlocking the Doors from the Outside

### Using the Smart Entry with Push Button Start System

When you carry the smart entry remote, you can lock/unlock the doors and the tailgate.


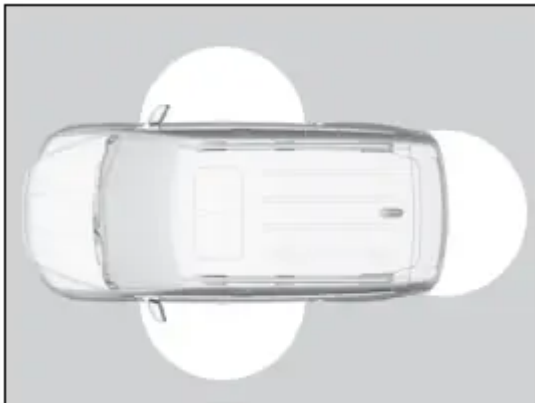


You can lock/unlock the doors and the tailgate within a radius of about 32 inches (80 cm) of the outside door handle or tailgate outer handle.



### Locking the doors and tailgate

Press the door lock button on a front door or the tailgate.

- Some exterior lights flash; the beeper sounds; all the doors and tailgate lock; and the security system sets.

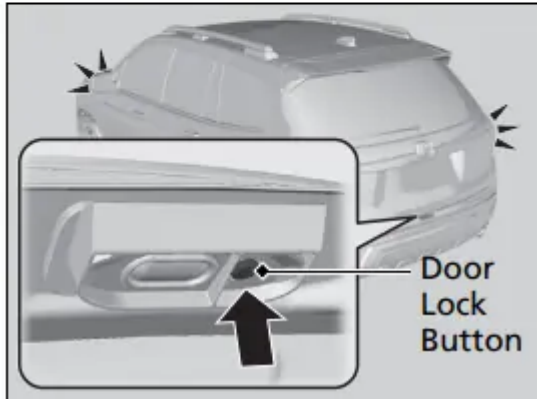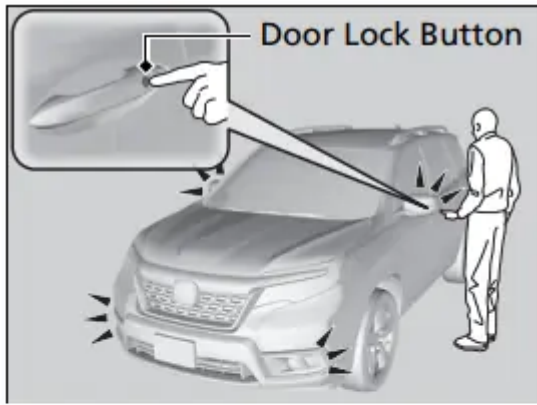

### Unlocking the doors and tailgate

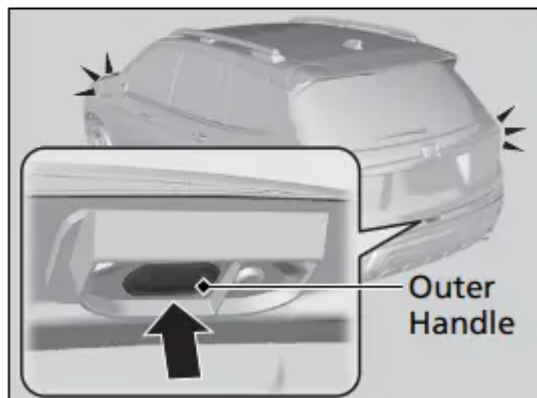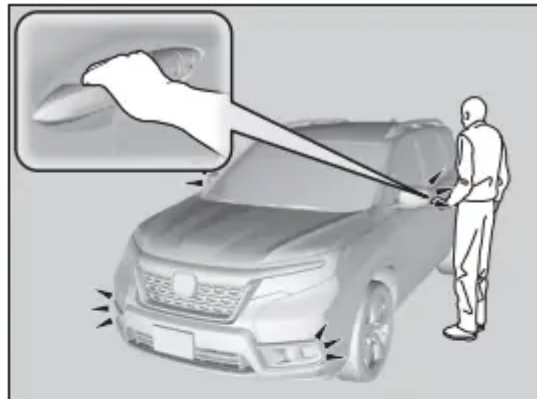

Grab the driver's door handle:

- The driver's door unlocks.
- Some exterior lights flash twice and the beeper sounds twice.

Grab the front passenger's door handle:

- All doors and the tailgate unlock.
- Some exterior lights flash twice and the beeper sounds twice.

Press the tailgate outer handle:


- The tailgate unlocks and opens.
- Some exterior lights flash twice and the beeper sounds twice. → Using the Tailgate Outer Handle P. 144

## Childproof Door Locks

The childproof door locks prevent the rear doors from being opened from the inside regardless of the position of the lock tab.

To open the door from the inside when the childproof door lock is on, put the lock tab in the unlock position, lower the rear window, put your hand out of the window, and pull the outside door handle.

### Setting the Childproof Door Locks

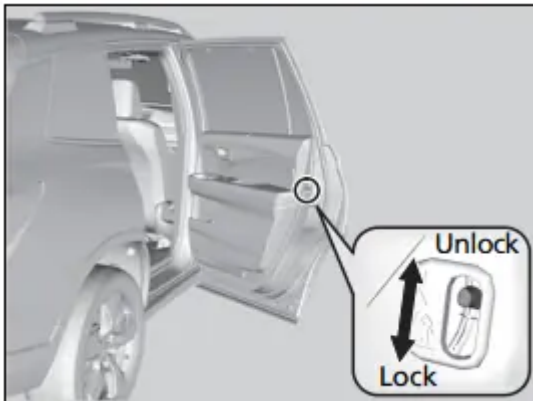

Slide the lever in the rear door to the lock position, and close the door.

- **When opening the door**  
Open the door using the outside door handle.

## Auto Door Locking/Unlocking

Your vehicle locks or unlocks all doors automatically when a certain condition is met.

You can turn off or change to another auto door locking/unlocking setting using the audio/information screen.

### Auto Door Locking

Drive lock mode: All doors and tailgate lock when the vehicle's speed reaches about 10 mph (15 km/h).

### Auto Door Unlocking

Driver's door open mode: All doors and tailgate unlock when the driver's door is opened.


# Features

## Audio System

### About Your Audio System

The audio system features AM/FM radio and SiriusXM® Radio\* service. It can also play USB flash drives, and iPod, iPhone, iPad and Bluetooth® devices.

You can operate the audio system from the knobs on the panel, the remote controls on the steering wheel, or the icons on the touchscreen interface.

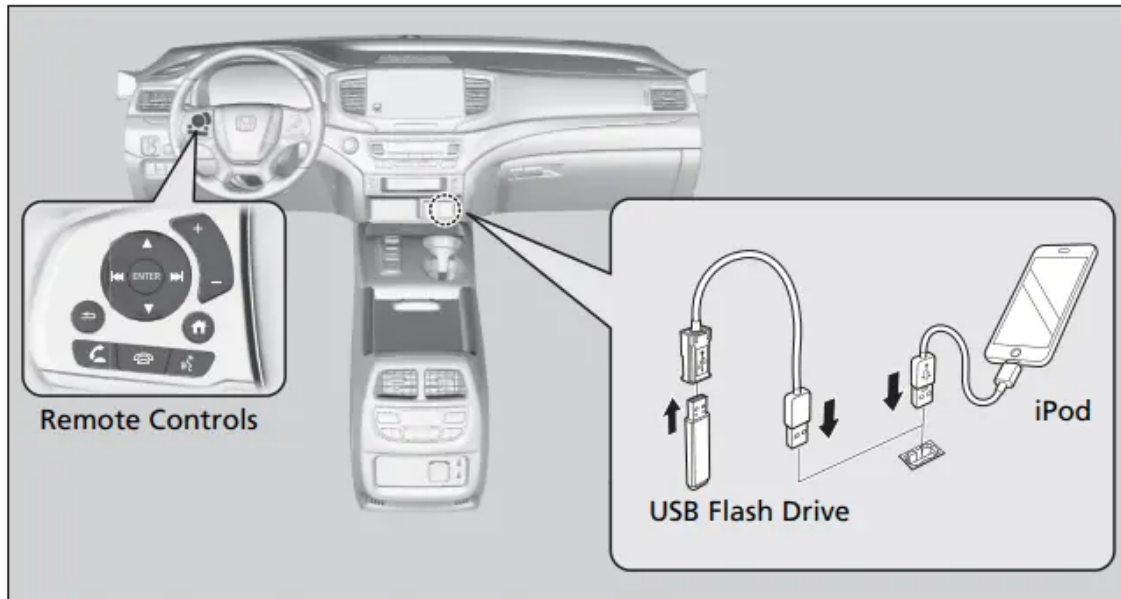

### USB Ports



#### On the console panel

The USB port (2.5A) is for charging devices, playing audio files and connecting compatible phones with Apple CarPlay or Android Auto.

- To prevent any potential issues, be sure to use an Apple MFi Certified Lightning Connector for Apple CarPlay, and for Android Auto, the USB cables should be certified by USB-IF to be compliant with USB 2.0 Standard.

### In the console compartment

The USB port (2.5A) is only for charging devices.

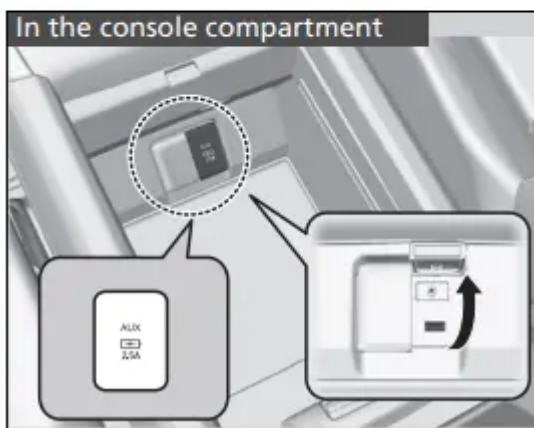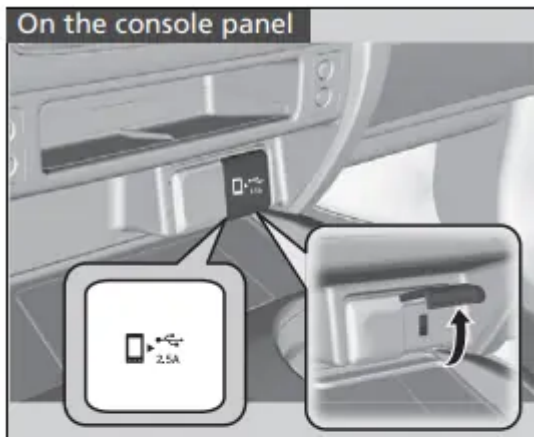

**USB charge:** The USB port can supply up to 2.5A of power. It does not output 2.5A unless requested by the device. For amperage details, read the operating manual of the device that needs to be charged.

**In the console compartment:** This port is for battery charge only. You cannot play music even if you have connected a music player to it.

## Audio Error Messages

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.