

Intended Use

- The vacuum cleaner is intended for vacuuming and extracting materials that are not hazardous to one's health.
- The vacuum cleaner is intended for commercial/indoor use, for example in department, house, hotels, schools, factories, shops, offices and rental businesses recommended by manufacturer.

Technical Data


Model	H250
Power	250W
Charging time	4.5H
Separation technique	Cyclone technical
Container volume (gross)	1.2L
Battery charger output	26.5V/500mA
Battery	22.2V/2200mAh
Mode	
-Standard	7KPa/30min
-High	18KPa/12min

Remark:


The primary function of cyclone isolates the dust to the bottom of cyclone, instead of on the combed grid, Adopting the cyclone technology, the vacuum cleaner can suction the granular dust precipitated on the bottom of the container, reduce the probability of the metal mesh blocked by cotton wool , greatly reduce the cleaning frequency of the filter, effectively extend the life-time, and make your experience better & more comfortable!

Introduction of Components

Main body:

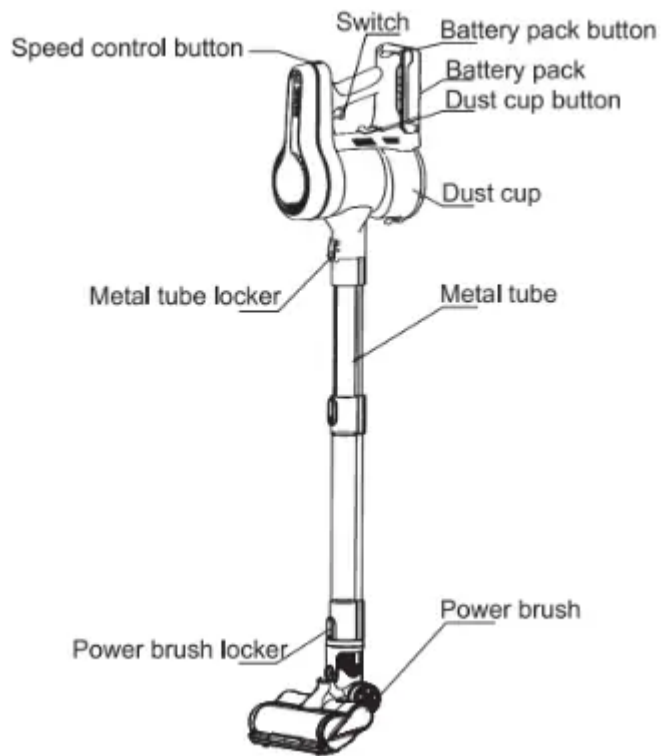


Wall mounted:

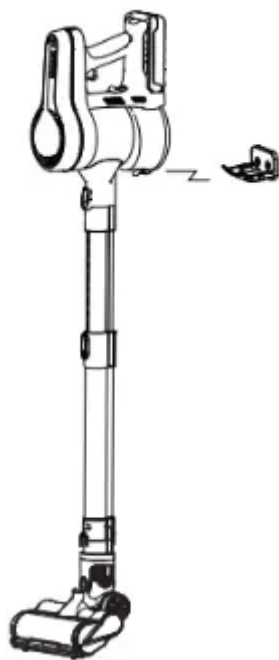


Assembly


- Before vacuuming, ensure that the filter assembly is assembled securely. Attach the battery to the dust cup as (a).

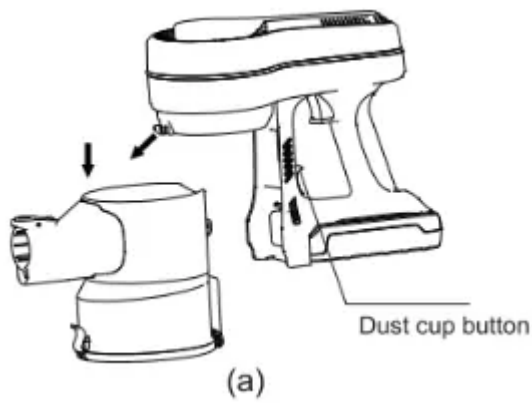

- Attach the metal tube to the body until you hear a click (b).
- Attach the dust cup and battery to the top of the tube until you hear a click (c).
- Attach a brush head.

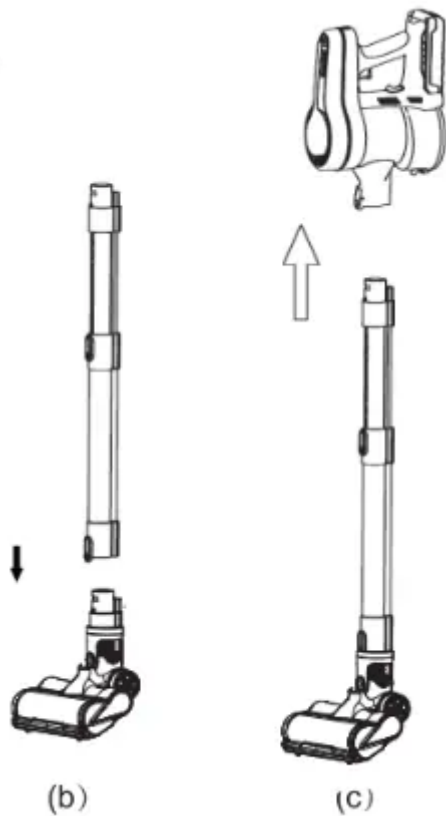


- Adjusting the vacuuming power. Press the power switch to begin operation. The "Standard" vacuuming power stage is set by default.

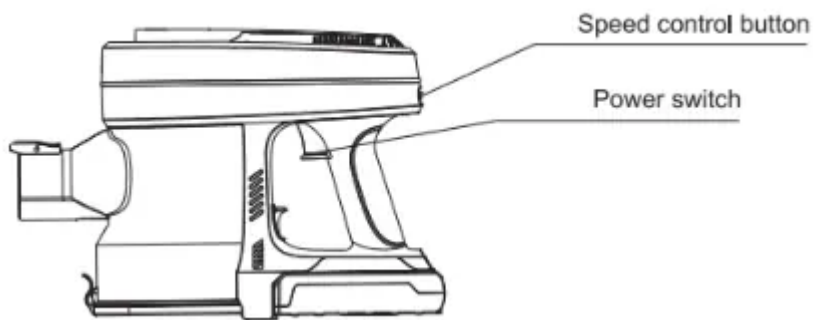

- Hand Vacuum Assembly

Insert your selected accessory (bristle brush or long crevice) into the vacuum body as shown below:

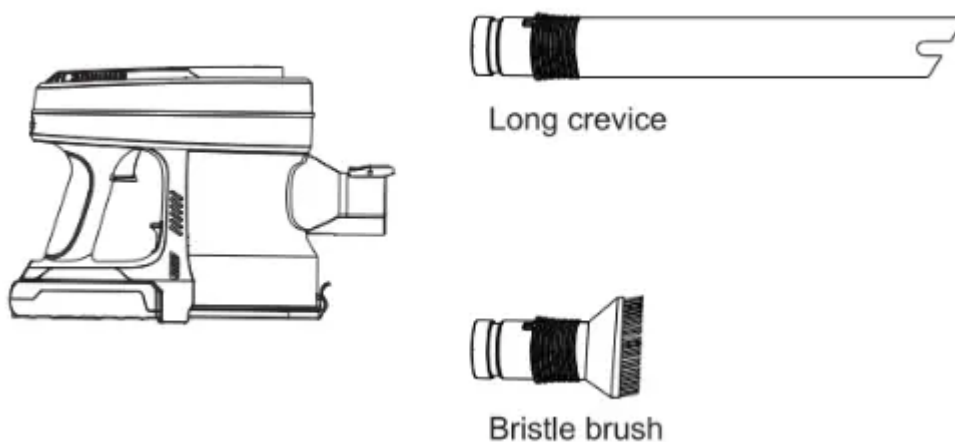

Starting Operation

Charging the Battery

Charging time: 4-5 hrs


- Low power: battery indicator blinks in blue when in use , please turn off the appliance, and then charge it.
- Charging :3 blue lights are illumi nated one by one.
- Fully charged: 3 blue lights remain on.

During operation, indicator lights will show the following:

Blue - On/ low speed

Pink - High speed

Red - Brush head is jammed

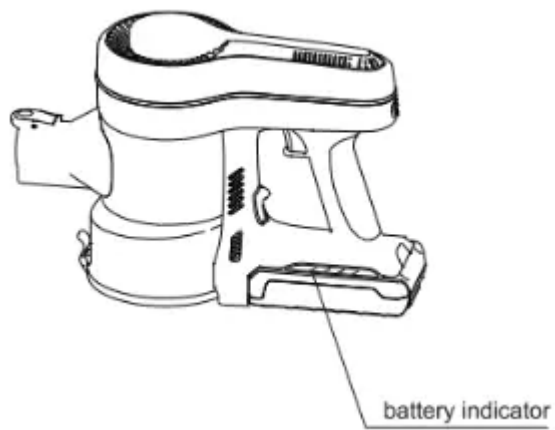


Empty the Dust Cup




Maintaining the Filter


1. Press the battery pack button to remove the battery.

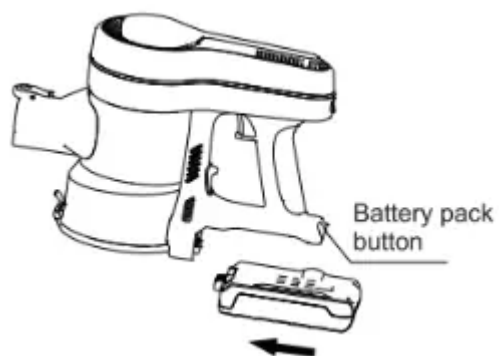

2. Open the dust cup as shown below.

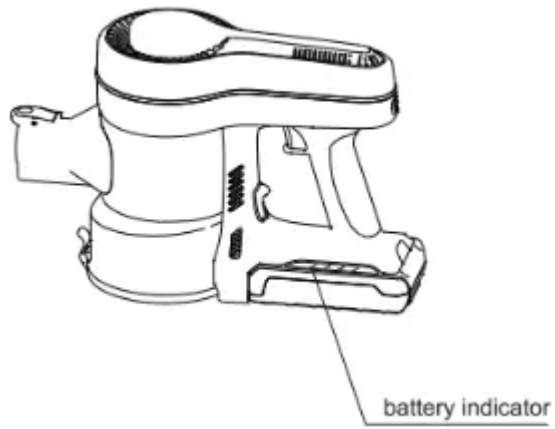

3. Remove the filter case, and then remove the filter.

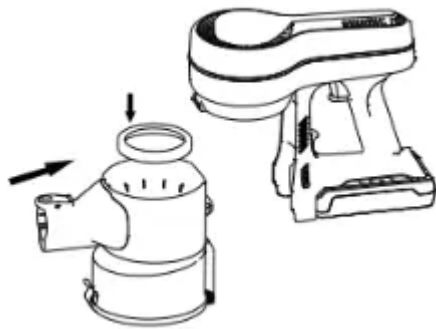

4. Wash the filter case.




5. Using the Cleaning Brush

A. Use the brush side to clean the metal mesh and inner filter:




B. Use the knife side to remove tangled hairs or debris from the brush roller.

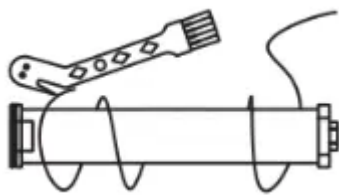

6. Installing wall-mounted Adhesive 3M, recommending to suspend the vacuum cleaner after 24 hours.

- Do not close floor brush to the ground when the machine is suspended.
- Do use expansion screw to attach machine on the wall or attachment surface when dangling.

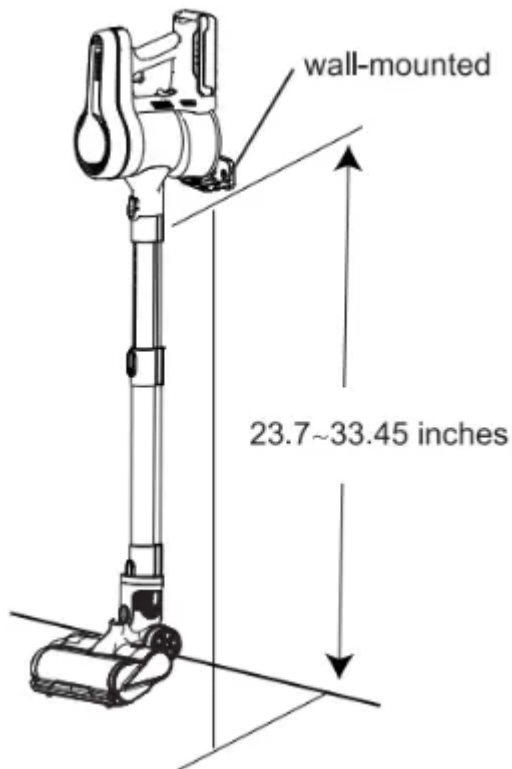

Troubleshooting

Weak suction

- Empty the dust cup.
- Clean the HEPA filter.
- Check if the dust cup is installed correctly.

Roller brush stops spinning or emits unusual noise

- Check if the brush (especially the bearing) is tangled with hair.
- Check if the filter cup is installed correctly.
- Detach the tube, and use the handheld part only. If this does not work, contact the seller for help.

Battery doesn't hold a charge

- Check if the vacuum cleaner is fully charged with 3 lights on.
- Check if the charger & charging base are connected correctly.
- If there is no light on when charging, contact the seller for help.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.