

## BEFORE USING FOR THE FIRST TIME

In this section, you can find out what you must do before using your oven to prepare food for the first time. Read the Safety information section beforehand.

Remove the appliance packaging and dispose of it appropriately.

### Setting the time

After connecting the oven or after a power failure, **0:00** and auto will blink on the display.

1. Hold the TIMERS button down until the colon blinks on the display.
2. Set the current time with the + and - buttons. Hold the or A button down to change the value faster.

The time set is taken over after 5 seconds.

### Setting the time during operation

1. Hold the + and - button down until the colon blinks on the display.
2. Set the current time with the + and - buttons. Hold the or A button down to change the value faster.

The time set is taken over after 5 seconds.

### Baking out the oven

#### Pre-cleaning the oven

1. Remove the accessories, the hook-in racks and the roof liner from the cooking compartment.
2. Completely remove any leftover packaging, e.g. small pieces of polystyrene, from the cooking compartment.
3. Some parts are covered with a protective film. Remove this scratch protection film.
4. Clean the outside of the appliance with a soft, damp cloth.
5. Clean the cooking compartment with hot soapy water.

#### Heating up the oven

To remove the new smell, heat up the oven when it is empty and closed.

1. Turn the function selector to the Bake operating mode.
2. Turn the temperature selector to the maximum temperature.
3. Switch the oven off after 40 minutes.

## Re-cleaning the oven

1. Clean the cooking compartment with hot soapy water.
2. Refit the hook-in racks.

## Cleaning the accessories

Before using the accessories, clean them thoroughly using a cloth and warm soapy water.

# OPERATION

## Switching on the oven

1. Use the function selector to set the type of heating.
2. Use the temperature selector to set the temperature.

The oven begins to heat up.

## Switching off the oven

Turn the function selector and temperature selector to the off position.

## Changing settings


The heating function and temperature or broil setting can be changed at any time using their respective selectors.

## Heating up

In order to heat up the cooking compartment as quickly as possible, use the "Conv Bake" heating type. When the set temperature has been reached (indicator light lights up continuously and signal sounds), set the desired heating type.


## Kitchen timer

The short-term timer has no influence on the functioning of the oven. The duration of the short-term timer can be set from 1 minute to 23 hours and 59 minutes.


1. Hold the TIMERS button down until the  blinks and **0:00** is displayed.
2. Set the desired duration with the + and - buttons.

The set time is taken over after 5 seconds.

After the time has elapsed, a signal sounds and the † symbol blinks.

**Note:** While the short-term timer is running, the time is displayed and the  symbol lights up continuously.

## Changing the set time:

To change the remaining time, hold the TIMERS button down until the  symbol blinks on the display. Then change the remaining time with the + and - buttons.

### Canceling the short-term timer

To delete the setting, hold the TIMERS button down until the † symbol blinks on the display. Then press the + and - buttons simultaneously.

### Switching the signal tone off


Hold the TIMERS button down until the clock disappears.


After seven minutes, the signal switches off automatically.

### Setting the automatic timer

With the TIMER function, you can set an operating time duration or program a start and end time.


#### Automatic switch-off

1. Press the TIMERS button down until the  symbol blinks.
2. Press the TIMERS button again.
3. On the display, auto and *dur* blink.
4. Use the + and - buttons to set the operating time duration. The operating time duration can be set from 1 minute to 10 hours.
5. Set the desired heating type and temperature.

The oven starts. The  and auto signals light up on the display, the current time is displayed.


#### The operating time duration has elapsed

A signal sounds, auto blinks on the display.

1. Switch off the temperature selector and function selector.
2. Hold the TIMERS button down until the  symbol appears.





The oven switches back to manual mode.

#### Canceling the operating time duration

To delete the setting, hold the TIMERS button down until the  symbol blinks on the display. Then press the + and - buttons simultaneously.


#### Automatic switch-on and switch-off

Baking or roasting starts for the set duration at a later time which you chose.

1. Press the TIMERS button down until the  symbol blinks.
2. Press the TIMERS button again. On the display, auto and *dur* blink.
3. Use the + and - buttons to set the operating time duration. The operating time duration can be set from 1 minute to 10 hours.
4. Press the TIMERS button again. auto and the  symbol blink on the display. The end time for the programmed operating time duration is displayed.
5. Adjust the end time with the + and - buttons. The end time can be set up to 23 hours and minutes. The oven calculates the start time. After 5 seconds, the time set is taken over. The  and auto signals go out, the current time is displayed.
6. Set the desired heating type and temperature. The oven will begin to heat at the calculated start time. On the display, the  and auto symbols light up.


### **The operating time duration has elapsed**

A signal sounds, auto blinks on the display.

1. Switch off the temperature selector and function selector.
2. Hold the TIMERS button down until the  symbol appears.

The oven switches back to manual mode.

### **Canceling the operating time duration**

To delete the setting, hold the TIMERS button down until the  symbol blinks on the display. Then press the + and - buttons simultaneously.

### **Basic Settings**

You can always make the following basic settings:

<b>Basic setting</b>	<b>Options</b>
Acoustic signal	<ul style="list-style-type: none"> <li>● quiet</li> <li>● middle</li> <li>● loud*</li> </ul>
Time format	<ul style="list-style-type: none"> <li>● 24 h*</li> <li>● 12 h am/pm</li> </ul>

\* Factory setting

### **Adjust the signal volume**

The oven must be switched off.

1. Hold the + and - button down until the colon blinks on the display.
2. Press the TIMERS button again. Signal appears on the display.
3. Press the - button repeatedly until the required volume is reached.

### **Changing the time format**

The oven must be switched off.

Press and hold the + button for 3 seconds. **AM/PM** appears on the display. To change to the 24 h time format, hold the + button down again for 3 seconds.

## **CLEANING AND MAINTENANCE**

With good care and cleaning, your oven will remain clean and fully-functioning for a long time to come. Here we will explain how to maintain and clean your oven correctly.

### **Notes**

- Slight differences in the colors on the front of the oven are caused by the use of different materials, such as glass, plastic and metal.
- Shadows on the door panel that look like streaks, are caused by reflections made by the oven light.
- Enamel is baked on at very high temperatures. This can cause some slight color variation. This is normal and does not affect operation. The edges of thin trays cannot be completely enameled. As a result, these edges can be rough. This will not impair the anticorrosion protection.

### **WARNING RISK OF ELECTRICAL SHOCK**

Moisture entering the appliance can cause an electrical shock. Don't use a high-pressure cleaner or steam cleaner.

### **WARNING RISK OF BURNS**

The appliance becomes very hot. Never touch the hot inside surfaces of the oven interior or heating elements. Always allow the appliance to cool down.

Keep children away.

### **Cleaning agents**

Observe the following information to ensure that the different surfaces are not damaged by using the wrong type of cleaning agent.

Do not use:

- any harsh or abrasive cleaning agents,
- cleaning agents with a high concentration of alcohol,
- hard scouring pads or sponges,
- high-pressure cleaners or steam cleaners.

Wash new sponge cloths thoroughly before use.

Area	Cleaning agents
Appliance exterior	Hot soapy water: Clean with a dish cloth and dry with a soft cloth. Do not use glass cleaner or a glass scraper.
Stainless steel	<p>Hot soapy water:</p> <p>Clean with a dish cloth and dry with a soft cloth. Remove flecks of lime scale, grease, starch and albumin e.g. egg white) immediately. Corrosion can form under such flecks.</p> <p>Special stainless steel cleaning products suitable for hot surfaces are available from our customer service or from specialist retailers.</p> <p>Apply a very thin layer of the cleaning product with a soft cloth.</p>
Aluminum and plastic	Glass cleaner: Clean with a soft cloth.
Enamel surfaces (smooth surfaces)	<p>To facilitate cleaning, you can switch on the interior lighting and detach the appliance door if necessary.</p> <p>Apply commercially available dishwashing liquid or a vinegar solution with a soft, damp cloth or chamois; dry with a soft cloth. Soften baked on food residues with a damp cloth and detergent. Leave the cooking compartment open to dry after cleaning.</p>
Self-cleaning surfaces (rough surfaces)	Please see the notes in section: Selfcleaning surfaces
Door panels	Glass cleaner: Clean with a soft cloth. Do not use a glass scraper.
Glass cover for the oven light	Hot soapy water: Clean with a dish cloth.
Seal Do not remove.	Hot soapy water: Clean with a dish cloth. Do not scour.
Rails	Hot soapy water: Soak and clean with a dish cloth or brush.
Accessories	Hot soapy water: Soak and clean with a dish cloth or brush.
Roof liner	

Hot soapy water: Soak and clean with a dish cloth or brush.  
Remove from oven for cleaning.

## Catalytic cooking compartment panels

The catalytic cooking compartment panels are coated with self-cleaning enamel.

The surfaces clean themselves while the oven is in operation. Larger splashes will only be removed after the oven has been used several times.

### Self-cleaning surfaces

The rear and side walls are covered with catalytic paneling. So not use oven cleaner on the catalytic panels. Slight discoloration of the enamel does not affect self-cleaning.


## Removing and installing the door panels

To facilitate cleaning, you can remove the glass panels from the oven door.

### Removing the door panels

1. Open the oven door fully.
2. Lock both hinges on the left and right using a locking pin.


**Note:** The locking pins must be fully inserted into the holes in the hinges.

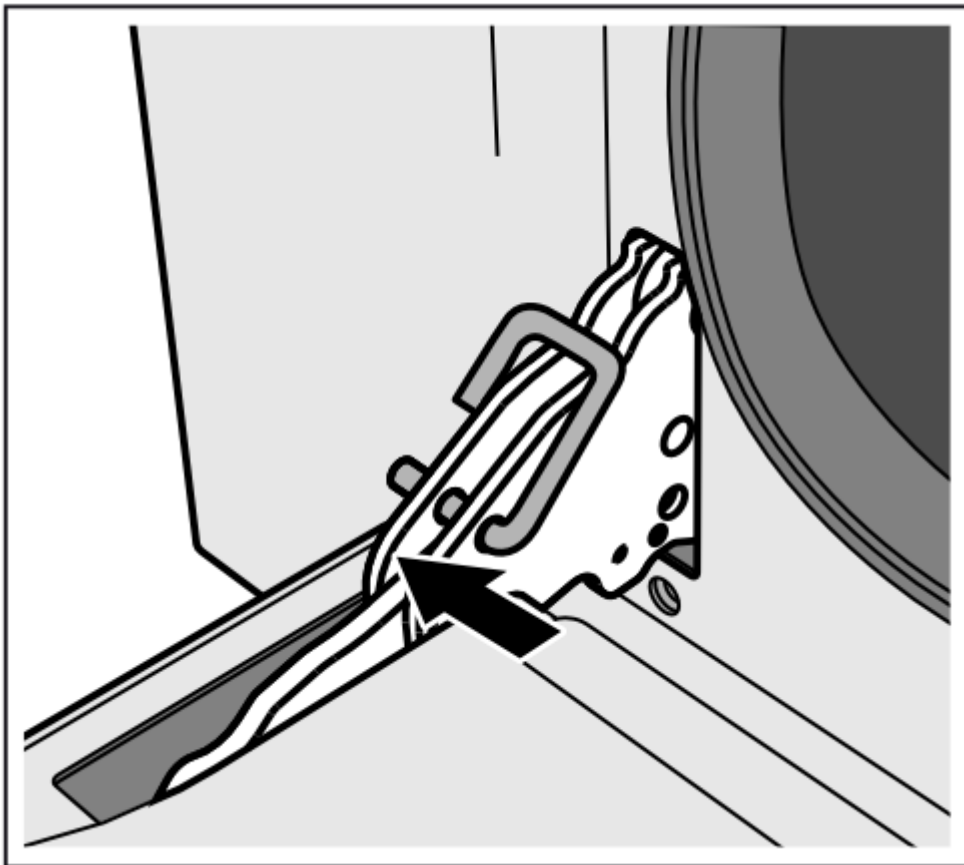

3. Lift the bottom of the inner panel slightly until the fastening pins come out of the holder (1).


4. Carefully lift the top of the inner panel until the fastening pins come out of the holder (2).

**CAUTION** When lifting the inner panel, the middle panel may stick to the inner panel. Make sure that the middle panel does not fall.

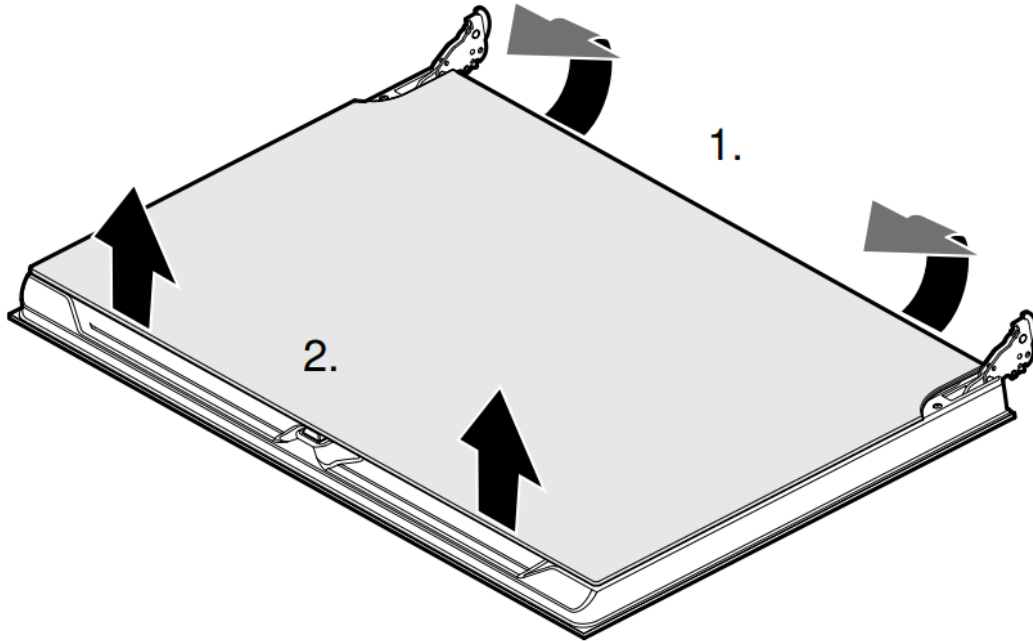


5. Remove the inner panel.

6. Remove the middle panel.

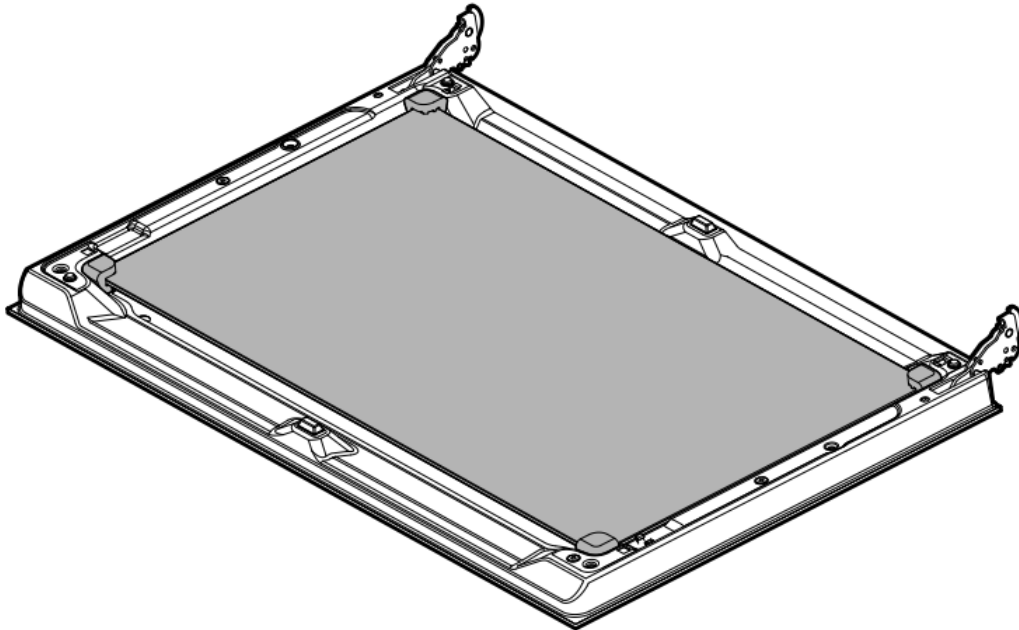

**Note:** The middle panel is kept in place with rubber bushings rather than retaining pins.

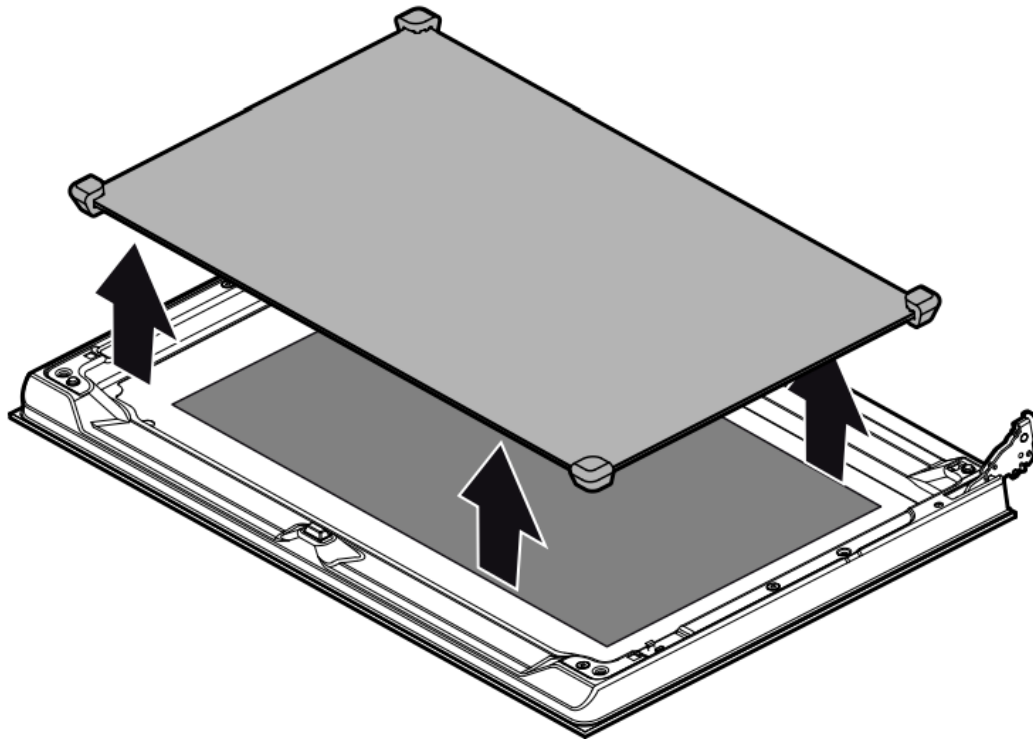

Clean the panels with glass cleaner and a soft cloth.

#### **WARNING RISK OF INJURY**

Scratched glass in the appliance door can burst. Do not use any glass scrapers or strong or abrasive cleaning agents.

#### **Fitting the door panels**

1. Reinsert the middle panel.
  - Note: Make sure that the panel is seated correctly. All rubber bushings must lay flat against the outer panel.
2. Reinsert the inner panel.
  - Note: All four fastening pins must engage in the holders provided for them.
3. Remove the locking pins and close the oven door.

#### **Removing and fitting the appliance door**

In case of especially heavy soiling, the oven door can be removed for better cleaning. Normally, however, this is not necessary.

#### **CAUTION WHEN REMOVING THE OVEN DOOR:**

- Make sure oven is cool and power to the oven has been turned off before removing the door.

Failure to do so could result in electrical shock or burns.


- The oven door is heavy and parts of it are fragile.

Use both hands to remove the oven door. The door front includes glass components. Handle carefully to avoid breakage.

- Grasp only the sides of the oven door. Do not grasp the handle as it may swing in your hand and cause damage or injury.
- Failure to grasp the oven door firmly and properly could result in personal injury or product damage.
- To avoid injury from hinge bracket snapping closed, be sure that both locking levers are securely in place before removing the door. Also, do not force the oven door open or closed - the hinge could be damaged and injury could result.
- Do not lay the removed door on sharp or pointed objects as this could break the glass. Lay the door on a flat, smooth surface, positioned so that the door cannot fall over.

### Removing the appliance door

1. Open the oven door fully.
2. Lock both hinges on the left and right using a locking pin (a).
  - Note: The locking pins must be fully inserted into the holes in the hinges.
3. Grip the oven door on either side with both hands and close the oven door by approx. 30° (b).

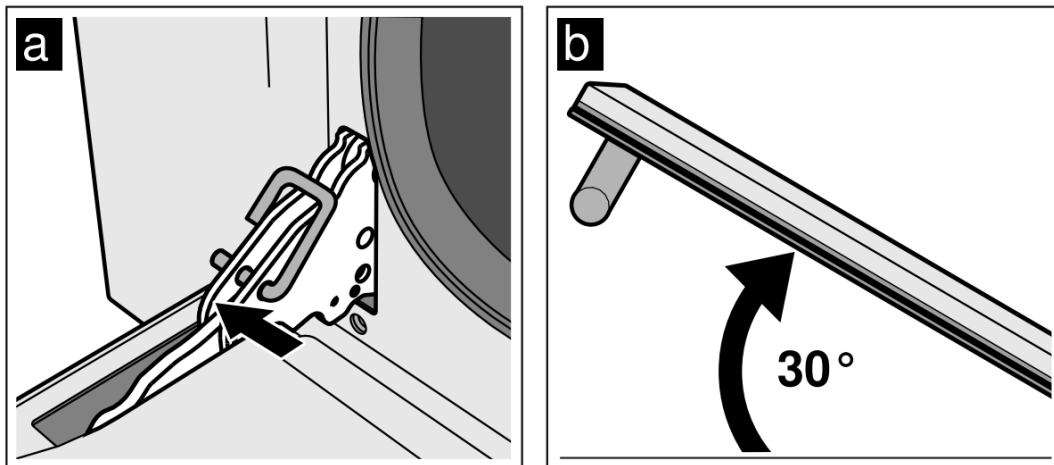

4. Raise the oven door slightly and pull it out.


Note: Do not fully close the oven door. The hinges could become bent and the enamel could be damaged.

### Fitting the appliance door

1. Grip the oven door on either side with both hands.

2. Slide the hinges into the slots in the oven (a).

◦ Note: The notch below the hinges must engage into the frame of the oven (b).

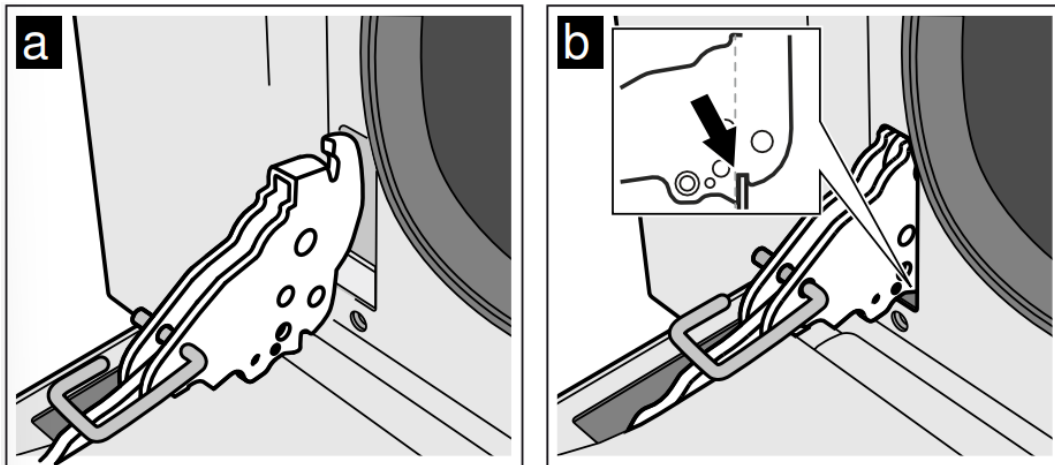

3. Lower the door downwards.

4. Remove the locking pins.

### **WARNING RISK OF INJURY**

Do not touch the hinge if the oven door falls out unintentionally or a hinge snaps closed. Call customer service.


### **Removing and inserting the hook-in racks**

You can remove the hook-in racks for easier cleaning.

#### **Removing the hook-in racks**

The hook-in racks are each fixed to the side panels of the cooking compartment at three points.

1. Grip the front of the hook-in rack and pull it to the middle of the cooking compartment.  
The front hook of the hook-in rack will release from the hole.
2. Fold out the hook-in rack further and pull it from the rear holes of the side panel.
3. Hold the catalytic cooking compartment panel in place.
4. Remove the hook-in rack from the cooking compartment.

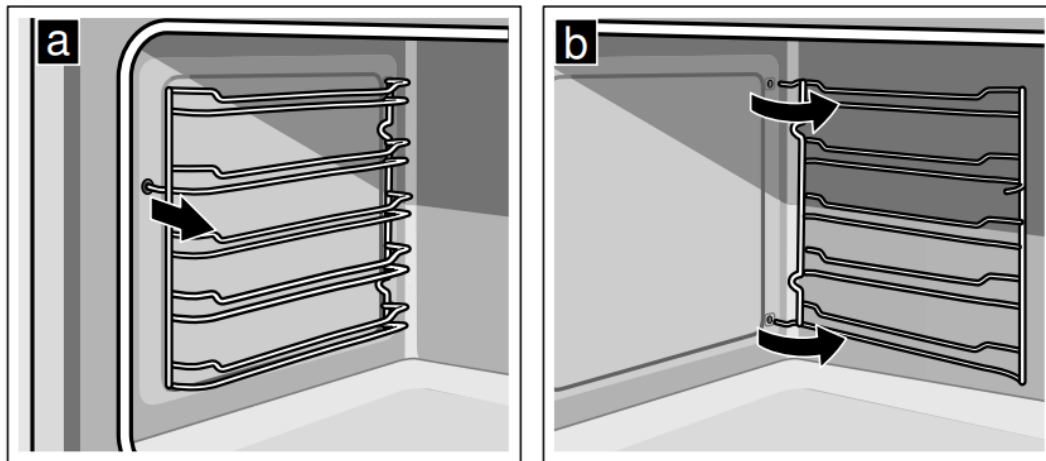

### Inserting the hook-in rack

1. Hold the catalytic cooking compartment panel in place.
2. Insert the hooks of the hook-in rack into the rear holes in the side panel.
3. Press the front hook of the hook-in rack into the hole.

## TROUBLESHOOTING

### Before Calling for Service

Before calling Customer Service, consider the suggestions and instructions below:

#### **WARNING RISK OF ELECTRIC SHOCK**

Incorrect repairs are dangerous. Repairs must only be carried out by one of our trained customer service technicians.

**Incorrect repairs to your appliance may present considerable risks for the user.**

Fault	Possible cause	Notes/remedy
The appliance does not work	Faulty fuse	Look in the fuse box and check that the circuit breaker for the range is in working order.
	Power failure	Check whether the kitchen light works.
The oven cannot be switched off.	Electronics are faulty	Switch off the circuit breaker. Call customer service.
The clock display flashes	Power failure	Reset the clock.
The oven does not heat.	Faulty fuse	Check the fuse and replace if necessary
	Function selector not set	Set the function selector.
The door glass is broken.		Switch off the appliance. Call customer service.
Fruit juice or albumen stains on enameled surfaces.	Moist cake or meat juices	Harmless change in the enamel, cannot be removed.
The oven stops operating in the middle of a program, and the cooling fan continues to run at high speed even when function selector is set to Off position. The buzzer sounds intermittently and the control lamp is flashing.	Problem with thermostat	<ol style="list-style-type: none"> <li>1. Set function selector to Off position. The cooling fan continues to run at high speed.</li> <li>2. Wait for 10 seconds.</li> <li>3. Set function selector to a new position.</li> </ol> <p>If the error occurs again when setting a new function: Disconnect the oven from power supply, then reconnect power supply.</p>

Fault	Possible cause	Notes/remedy
		If the error occurs again after reconnecting power supply: Call customer service.

## Replacing the oven light bulb

If the oven light bulb fails, it must be replaced.


Replacement heat-resistant bulbs can be obtained from customer service or from specialist retailers. Please supply your appliance's E number and FD number. Do not use any other type of bulb.

### CAUTION WHEN REPLACING AN OVEN LIGHT:

- Make sure the appliance and lights are cool and power to the appliance has been turned off before replacing the light bulb(s). Failure to do so could result in electrical shock or burns.
- The lenses must be in place when using the appliance.
- The lenses serve to protect the light bulb from breaking.
- The lenses are made of glass. Handle carefully to avoid breaking. Broken glass could cause an injury.
- Light socket is live when door is open.

**WARNING** Light socket is live when door is open if main power supply is not turned off.

1. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
2. Allow the cooking compartment to cool down.
3. Open the appliance door.
4. Place a tea towel in the cooking compartment to prevent damage.
5. Remove the hook-in racks.
6. Remove the glass cover. To do this, open the glass cover at the front with your hand. Should you experience difficulties removing the glass cover, use a spoon to help.
7. Remove the oven light bulb

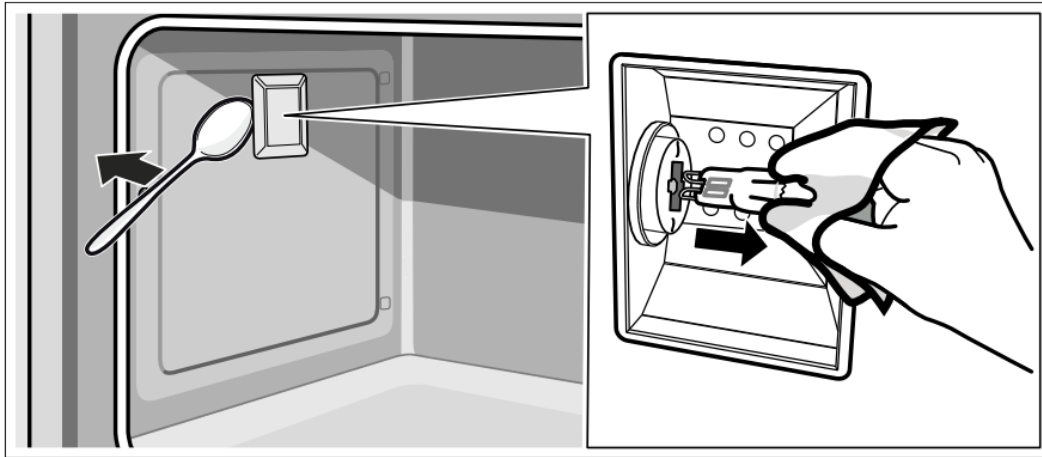

8. Replace the oven light bulb with a bulb of the same type:

**Voltage (V):** 12 V; **Power:** 20W; **Socket:** G4 **Temperature resistance:** 570° F (300 °C)

9. Refit the glass cover for the oven light bulb.

10. Refit the hook-in racks.

11. Remove the tea towel.

12. Switch the circuit breaker back on.

13. Check that the oven lighting is working again.

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.