


GETTING TO KNOW YOUR CORDLESS IRON

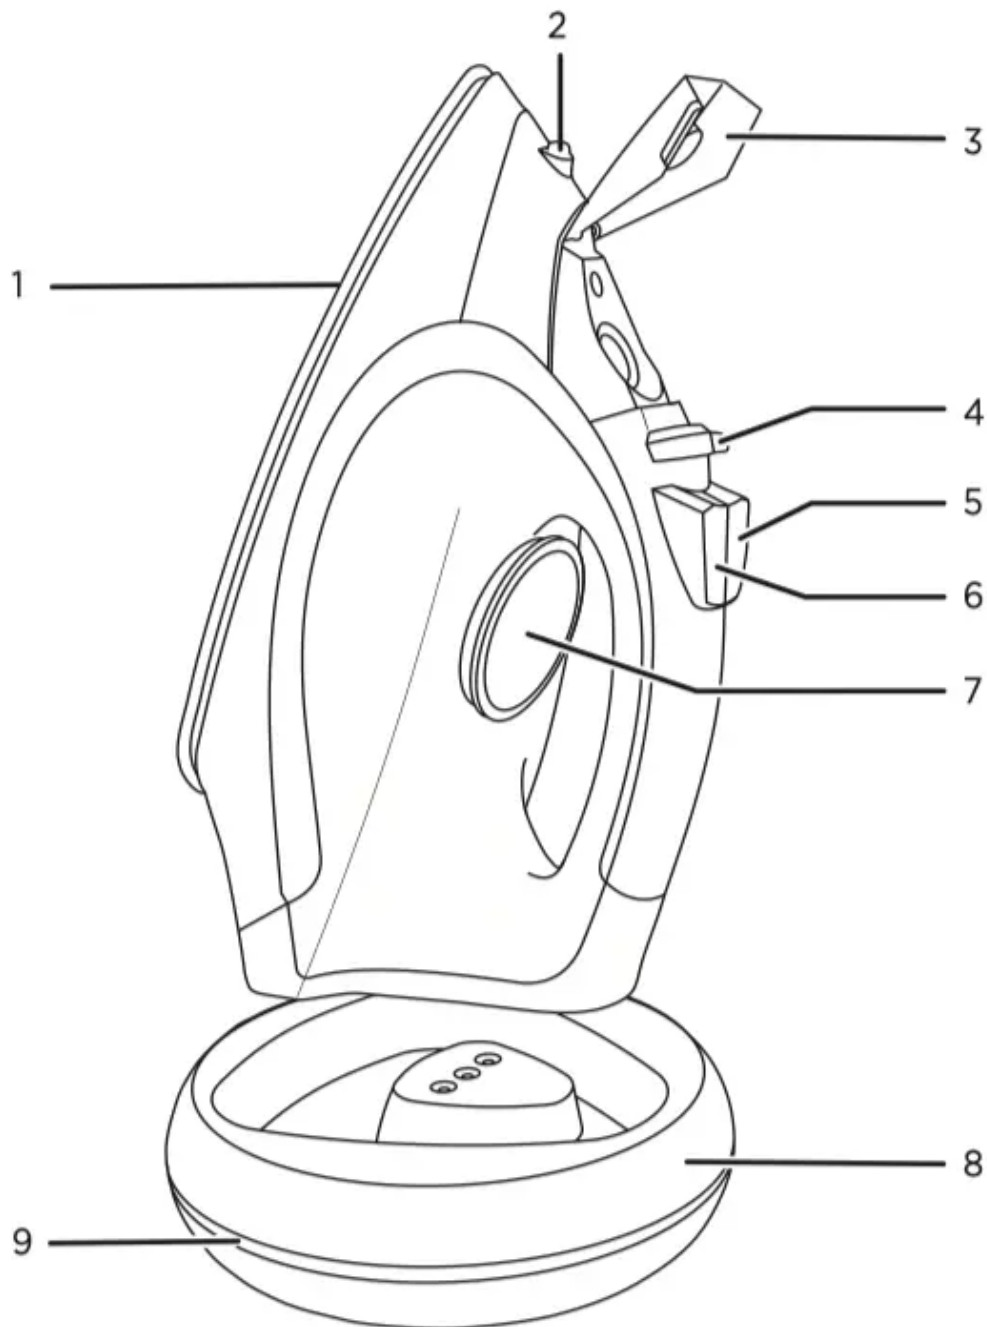

1. Soleplate
2. Spray nozzle
3. Water-fill cover
4. Steam control lever
5. Steam burst button

6. Spray mist button
7. Temperature control
8. Base
9. Smart status light
10. Hook-and-loop cord wrap (not shown)

Product may vary slightly from what is illustrated.

GETTING STARTED

- Remove all labels, tags and stickers attached to the body, cord, or soleplate of the iron and the plastic band around the power plug.
- Remove and save literature.

FILLING THE WATER TANK



1. Remove iron from the base. Take the iron far enough from the base so that water won't spill onto the base when filling tank.
2. With the soleplate tilted at a 45° angle, open the water-fill cover. (A)
3. Using a clean measuring cup, pour water slowly into opening until water reaches the "MAX" level mark on the side of the water tank. Do not overfill. Close the water-fill cover securely.

Tip: You may use the iron with tap water. If your water is hard you should use distilled water (not chemically descaled or softened water). Do not use water with perfumes or scented additives.

HEATING YOUR IRON

Your iron is heated by placing it onto the stand. The smart status light will show you when you need to reheat your iron and when it is ready to use. The smart status light operates as follows:

Smart Status Light	Iron mode
Steady red	Heating up
Flashing green	Ready to use
Flashing red	Recharge warning
Flashing red, 3 beeps	Recharge needed
Slowly pulsing red	Auto shut-off activated




Important Note:

Between ironing tasks always put the iron back onto the base. This ensures the most efficient heating and gives you the best performance from your iron.

1. Plug the base into an outlet.
2. Place the iron onto the base to preheat and to recharge as needed. Smart status light will be a steady red.
3. Follow fabric care instructions on garments to determine the appropriate temperature setting.
4. Turn the dial to the desired setting.
5. Move the steam control lever to the desired setting.


SETTING GUIDE


For best results, it's recommended to use the manufacturer's garment tags for heat and steam instructions. When in doubt, always start at the low heat setting.

Setting name and Icon	Fabrics
 No steam	synthetics, nylon, silk, polyester
 Low steam	blends
 High steam	wool, cotton, linen



ADDITIONAL FEATURES SPRAY MIST BUTTON


Water spotting affects some fabrics. Test this out first on a hidden part of the fabric.

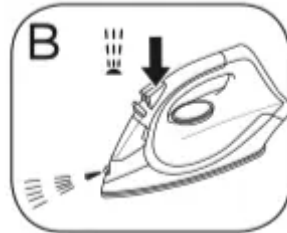1. Lift the iron off the fabric.
2. Aim the spray nozzle at the fabric.
3. Press the  button – you may have to press it 2 or 3 times to pump water through the system. (B)




STEAM BURST BUTTON

1. Steam is available when the temperature control is at  or above.
2. Press the  button. (C)
3. Leave 4 seconds between shots, to let the temperature build up.

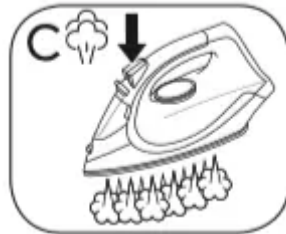


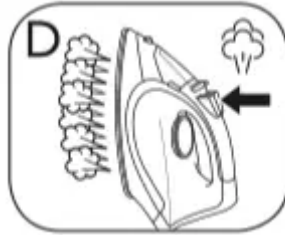
DRY IRONING (IRONING WITHOUT STEAM)

1. If you're going to be dry ironing for 20 minutes or more, empty the reservoir first to avoid spontaneous bursts of steam.
2. Set the steam control to .
3. Set the desired temperature.
4. When the smart status light flashes green, your iron is ready to use.

VERTICAL STEAMING

Steam wrinkles from hanging clothes, hanging curtains, and upholstery.

1. Set the temperature control to max.
2. Hold the iron vertically, close to (but not touching) the fabric.
3. Press the  button. (D)
4. Leave 4 seconds between shots, to let the temperature build up.




AFTER USE

1. Set the temperature control to min.
2. Unplug the base.
3. Open the water inlet cover.
4. Hold the iron over a sink, turn it upside down, and drain the water from the water tank. (E)



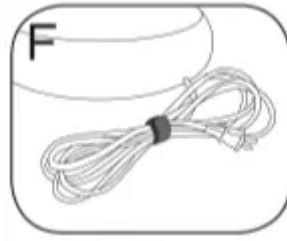

5. Place the iron on the base and leave it to cool down completely.
6. When cold, wipe off any moisture, and close the water inlet cover.
7. Wipe outer surfaces with a damp cloth.
8. Remove spots from the soleplate with a little vinegar. Take care not to scratch it.
9. Wrap and secure cord with hook-and-loop cord wrap. (F)



SELF CLEAN

To avoid scale build-up, use the self clean function monthly in normal water areas, more often in hard water areas.

1. Fill the water tank to the max mark.
2. Set the temperature control to max.
3. Sit the iron on the base.
4. Plug in the base and wait until the smart status light flashes green.
5. Hold the iron over a sink with the soleplate down.
6. Move the steam control past  to  and hold it there.
7. Gently move the iron back and forth, over the sink.
8. When water and steam stop coming from the soleplate, release the steam control lever.
9. Follow the steps under AFTER USE.

AUTO SHUT-OFF

1. If the iron is motionless for about 8 minutes it will switch off.
2. The smart status light will slowly pulse red.
3. To switch on again, lift it off the base then return it to allow it to heat up again. Iron is heated once the smart status light flashes green.

NEED HELP?

For service, repair or any questions regarding your appliance, please call our Customer Service Line at 1-800-465-6070. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this pamphlet.

Warranty Information (Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Spectrum Brands' liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at prodprotect/blackanddecker, or call toll-free 1-800-465-6070, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

IMPORTANT SAFETY INSTRUCTIONS

When using your iron, basic safety precautions should always be followed, including the following:

- READ ALL INSTRUCTIONS BEFORE USING.
- Only use iron for intended use.
- To avoid the risk of electric shock, do not immerse the iron in water or other liquids.

- Always turn the iron to MIN setting before plugging in or unplugging from the outlet. Never pull on the cord to disconnect from the electrical outlet; instead grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away.
- When storing, gather the cord into even ovals. Then gently cinch with the strip of hook and loop.
- Always disconnect the base from electric outlet when: filling the reservoir with water, emptying water, cleaning the appliance, and the appliance is not in use.
- Do not operate the iron if it has been dropped, if there are visible signs of damage to the iron or its cord, or if it's leaking. To avoid the risk of electric shock, do not disassemble the iron; take it to a qualified service person for examination and repair, or call the appropriate toll-free number on the cover of this manual. Incorrect reassembly can cause risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended when plugged in or on an ironing board.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn the iron upside down - there may be hot water in the reservoir. Avoid rapid movement of iron to minimize hot water spillage.
- The iron must be used and rested on a stable surface.
- The iron must only be used with the base provided.
- When placing the iron on its base, ensure that the surface on which the base is placed is stable.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

SPECIAL INSTRUCTIONS

- To avoid circuit overload, do not operate another high wattage appliance on the same circuit.
- If an extension cord is absolutely necessary, a minimum 13-ampere cord should be used. Cords rated for less amperage can result in a risk of fire or electrical shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

