 




## Product Overview

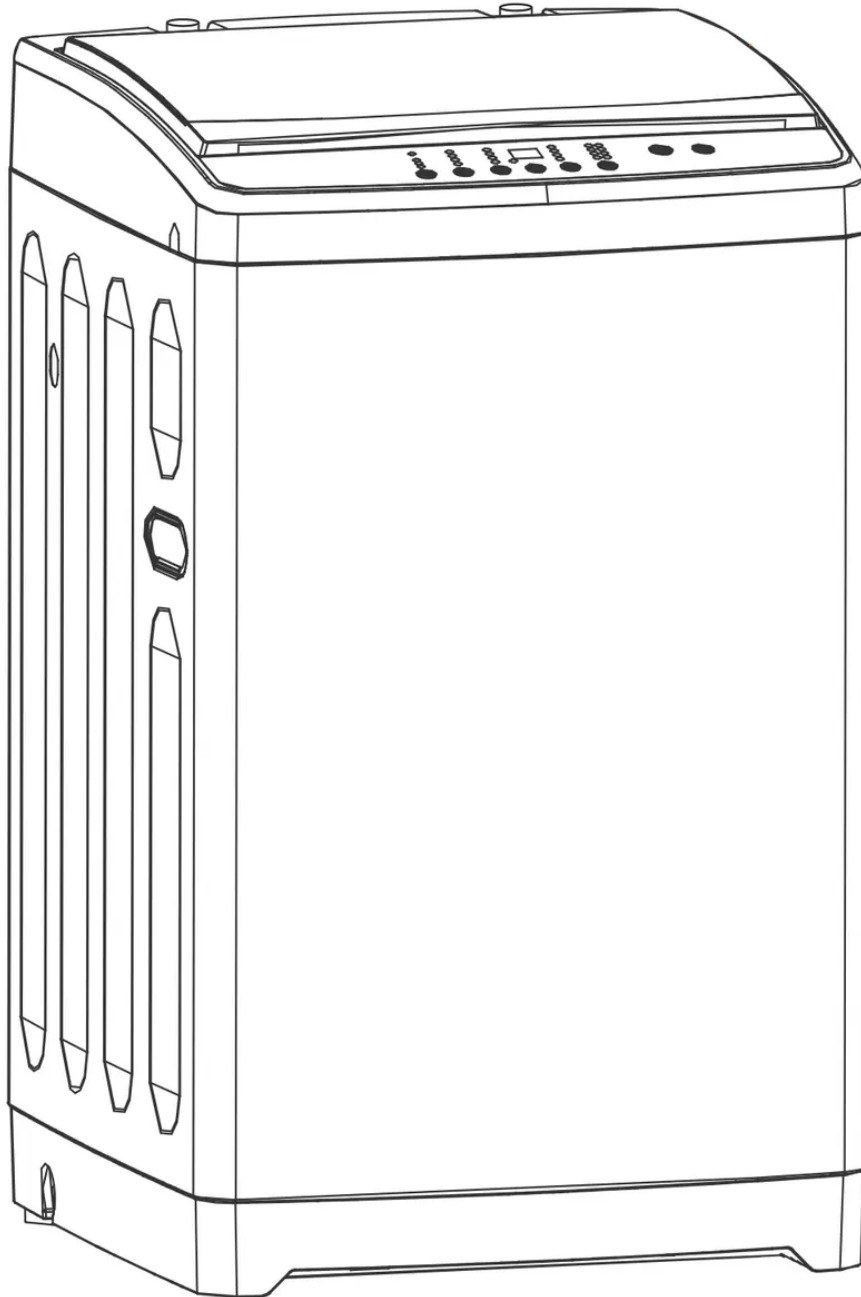

## Description of symbols

 

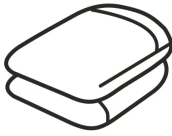 
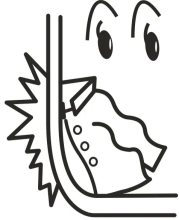 
<p>Warning sign</p> 	<p>Contents marked with this symbol are related to the safe use of the product and the personal safety of the user. Please operate in accordance to the contents of this manual, to avoid harm to the user or damage to the machine itself.</p>
<p>Forbidden sign</p> 	<p>Contents marked with this symbol indicate operations or actions that should not be undertaken by the user. Performing of such actions may result in injury to the user or damage to machine itself, and void warranty.</p>

## Before Washing

### Preparation

1. Ensure the water inlet hoses are correctly installed and faucets are turned on.
2. Insert the power plug into the electrical socket.
3. Ensure the drain hose is mounted at the correct height.
4. Select a suitable location for the washer on a hard, even surface, away from direct sunlight or heat sources, e.g. radiators/heaters, cooking, appliances etc.
5. Any floor unevenness may result in unstable working or abnormal noise. Please ensure the machine level.

 
## Check the following before washing
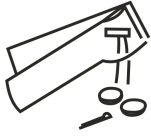
<p>Check if the laundry has any special washing instructions.</p>	<p>Clear the pockets, and take out loose items such as coins, sand, hairpins etc.</p> 	<p>Tie any long straps or strings, fasten buttons and close zippers.</p> 	<p>The weight of the laundry shall not exceed the rated capacity of your machine, loosen the laundry before placing it evenly in the tub.</p> 	<p>When the machine is running, buttons may cause noise. To reduce the noise, turn clothes inside out or place them in a laundry bag.</p> 
<ol style="list-style-type: none"><li>1. Check if the laundry is suitable for machine washing.</li><li>2. Divide the laundry into colour fast and non-colour fast items.</li><li>3. Separate items that do not absorb water easily and wash by hand.</li><li>4. For heavily soiled items, please first remove loose dirt, then apply detergent directly (as per instructions on pack) to the stain before washing.</li><li>5. For those items that may attract lint or are furry or fluffy, please turn inside out before washing.</li><li>6. Do not put laundry soiled with chemicals or solvents into the washing machine.</li></ol>				

## Loading your laundry

- The rated washing capacity refers to the largest dry weight of a load that can be washed.
- The thickness, size and type of clothes will influence the actual capacity.
- Do not select more than water Level "Mid" for clothes less than 1.0kg, to avoid splashing of water.
- It is recommended that Low suds/ high efficiency washing powder is used.

## Detergent Usage Guide

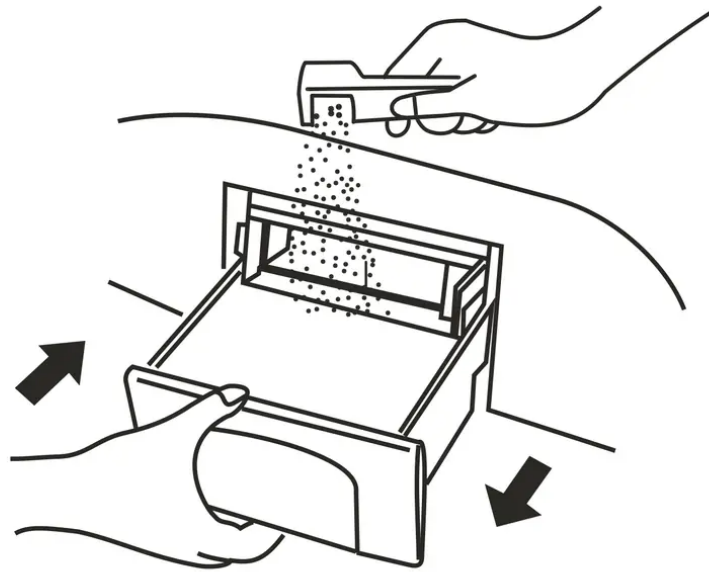

### How to use bleach/ whitener

- Always refer to the bleach/ whitener instructions prior to usage.
- Fill water to desired level.
- Dilute the bleach/ whitener in a container. Pour it slowly into the washing tub.
- Avoid using whitener on laundry with colour or patterns as they are prone lose colour.
- The bleach/ whitener should NOT be directly applied to laundry directly.

### Adding washing powder

- It is suggested to dissolve detergent before adding to the tub, see as below:

1. Prepare warm water (<35°C) in a container.
2. Add washing powder, stirring to dissolve it completely.

- **Adding washing powder Fuzzy Logic Programs.**

Adding washing powder/ liquid into the detergent box directly for "Fuzzy logic" programs and "Dealy" program.

- **Adding washing powder Normal Wash**

It is recommended that washing powder/ liquid is dissolved with water and then directly emptied into the washing machine:

 
1. Adding some water (select the "1" water level)
2. Adding washing powder/ liquid. Run for about 30 seconds to fully dissolve the detergent. Then push the "Start/ Pause" button to pause the wash cycle.

3. Load laundry. Select suitable water level. Push the "Start/ Pause" button again to recommence washing cycle.

- If you select "Quick" program, it is recommended to use liquid detergent instead of washing powder to ensure the most effective wash results.
- Old or poor quality washing powder may causing caking in tub or detergent dispenser.
- Clean the detergent box periodically to ensure washing power is evenly distributed and remove any detergent build up.

**NOTE:** If a manufacture specifies only the use of a low-sudsing or high-efficiency type detergent, then detergent for drum type machines shall be used irrespective of the type of machine under test. Otherwise the detergent type to be used shall be chosen according to the type of clothes washing machine under test, as follows.

## Operation & Wash Cycles

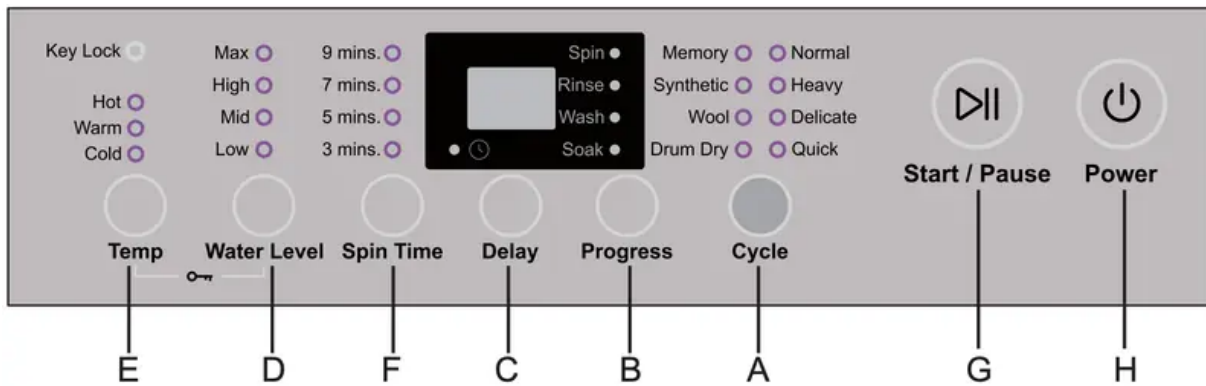

### Indicator display

- Off
- On: Indicates the program is about to run and indicates the selected cycle and options
- Flashing: Indicates the program is running and indicates the selected cycle and options

### Remaining time display H

- Displays “-” during Fuzzy Logic detection cycle until level is determined
- Displays total time remaining during current, in progress wash cycle
- Displays remaining time when the "Delay" program is used (hours)
- Displays error codes

A “Cycle” button	
Program	Recommend
Normal	Recommended for mixed fabrics and general clothing items
Heavy	Items that are soiled or items that are heavy/big
Delicate	Delicate items that are machine washable
Quick	Lightly soiled or small laundry loads less then 1.5kg
Memory	This cycle setting remembers the last wash, rinse and spin settings
Syntietic	<b>Ideal for synthetic fabrics</b>
Wool	Machine washable woollen items
Drum Dry	Dries the inner and outer tub to avoid the growth of mildew
Soak Wash	This programs is suitable for soiled items which require a soak

B “ Progress ” buttons
<ul style="list-style-type: none"> <li>● You may change the Wash, Rinse and Spin times when Memory, Heavy, Normal and Synthetic cycles are selected.</li> <li>● When the Wool cycle has been selected you cannot change the Wash, Rinse and Spin times.</li> <li>● You cannot change the Wash Rinse and Spin times when Drum dry and Quick cycles are selected.</li> </ul>

C “Delay” button
<ul style="list-style-type: none"> <li>● The display shows the time remaining (in minutes) before the cycle will finish.</li> <li>● Push the "Delay" button and the display will show the remaining time for the cycle to finish (in hours). The indicator flashes to indicate that the delay function is operating.</li> <li>● Delay start can be set for 2-24hr operation.</li> <li>● <b>NOTE:</b> The delay time is until the selected wash program finishes (you will need to deduct wash time from this delay time to calculate when the wash will start).</li> </ul>

D “Spin Time” button
<ul style="list-style-type: none"> <li>● A spin time setting will automatically be selected with the wash cycle. Use this button to change the default setting.</li> </ul>

#### E “Water Level” button

- During the Memory and Synthetic programs the washing machine will detect the size of the laundry and automatically select the water level between levels Mid,High,Max.
- To change the water level, press the Start/Pause button and make your selection by pressing the “Water Level” button until desired level is shown (Low-Max).
- If there is water inside the tub and the machine cannot detect the laundry load, it will display water level "Mid". If wet laundry is put in the machine, it will display level "Mid" you can then manually adjust to the desired water level.
- If Tub Dry program is selected the water level cannot be manually overridden.
- During operation of the wash, or rinse program, you can adjust the water level by pressing the Water Level button.
- The water level may vary due to the different moisture level of the laundry items.

#### F “Temp ”button

- Press the Temp(Wash/Rinse)" button to select your wash temperature.
- During “Quick” cycle, the water temperature is preset. Temp button does not work .
- During wool cycle, the "hot/cold" water temperature cannot be chosen.

#### G “START/PAUSE” button

- After the power is switched on press the “Start/Pause” button to start the machine.
- During operation, push the Start/Pause button to pause the machine.
  - Push the Start/Pause button again to restart the machine.

#### H “POWER ” button

- To turn on/off the power, press the power button.
- If the start pause button is not pushed within 5 minutes, the washing machine will automatically switch off the power.

### Button Operation and Descriptions

1. Press the "Power" button to switch power on/off.
2. Press the "Cycle" button to select automatic program.  
When the power is switched on "Normal" cycle is automatically set. To select a different automatic cycle, rotary program knob till the corresponding indicator is on. Refer to the section on the "cycle" button above.
3. Press the "Progress" buttons to customise the preset options.  
Separate colour fast clothes before loading washing machine.  
During Rinse cycle, only SPIN times can be set, all other wash functions are locked.  
During Wool and Drum Dry cycles, these settings cannot be changed and buttons will not function, as machine will only follow pre-programmed settings.
4. Press the "Delay" button to select the delay wash program  
The delay time program is automatically off, and wash cycles will start as soon as "Start/Pause" button is pushed.

### **Confirm the operation of "Dealy" program.**

To set a delay time, first select the Cycle and options required and push the "Delay" button.

The cycle indicator lights will go off the "Delay" (Hours) indicator light will be on.

During the delay program, press the "Delay" button to display the time remaining. The delay time indicator shows the time remaining till the wash ends.

To cancel the delay program, switch the power off and back on, then make a new selection.

Delay start (2-24hr) option.

Delay time is to the end of washing cycle.

5. Press the "Spin Time" button to change the spin time.

Set the spin time in accordance to the requirements of each load.

6. Press the "Water level" button to change the water level.

For the "Synthetic" and "Memory" and "Sock Wash" cycles the machine will run a Fuzzy Logic program that automatically detects the type of laundry in the tub. After detection it will set the water level automatically.

The water level can only changed once the machine has started by pushing the "Start/ Pause" button, then push the "Water Level" button to reset the water level. Press the "Start/ Pause" button to resume the wash cycle.

7. Press the "Temp" button to select the wash and rinse temperature.

Set the wash temperatures in accordance to the requirements of each load.

The suitable temperature between 35-65 °C.

 
8. Press the "Start/ Pause" button to start the cycle.

If the top lid is opened while machine is in SPIN cycle, the machine will stop and an audible alarm will sound.

## **Maintenance**

- Remove the power plug before carrying out any cleaning or maintenance.
- Clean the lint filter(s) and detergent box after each wash.

Remove and clean the detergent box, replace after cleaning.

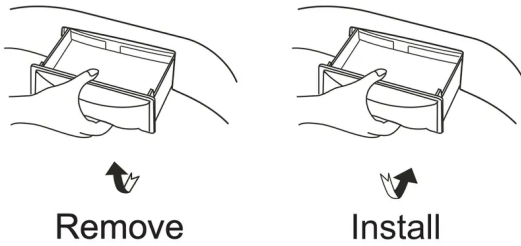

- The lint filter must be used during washing.
- It must be cleaned after each use

 
Lint filter:

1. Slide upwards to remove.
2. Gently push it down to install; ensuring it is in place before next wash.

Directions for cleaning lint filter on model




The filter at the water inlet valve may become blocked by impurities in the water supply. Clean it with a plastic bristled brush every two months.

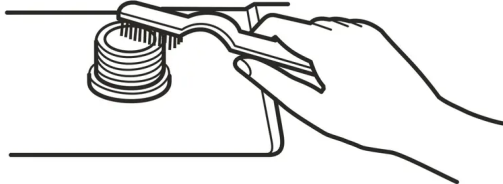

If the cabinet is dirty, wipe it with a damp cloth.

 - Do not wash directly with water.
- Wipe with a neutral detergent (please check directions on detergent bottle first).
- Do not wipe machine with thinners, petrol, alcohol or other harsh solvents.

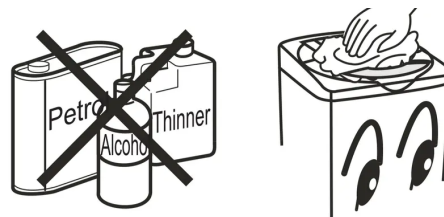

1. After washing cycle has finished, turn off the water faucet. (If needed, you can remove the water inlet hose).
2. Do not store water in the washing machine for a long period without completing a wash cycle. Drain the water completely after each wash.
3. Hang up the power cord and drain hose.

4. Wipe up any drops of water on the surface of the machine and inside the tub. Leave the lid open for about 1 hour after each wash to evaporate any residual water.

# Troubleshooting



Problem		Possible Causes	What to do
The machine does not drain or drains slowly. The display shows E1.		<ul style="list-style-type: none"> <li>• Is the drain hose blocked?</li> </ul>	<ul style="list-style-type: none"> <li>• Remove the blockage. Open and close the top lid once.</li> </ul>
The machine stops running. The display shows E2.		<ul style="list-style-type: none"> <li>• The top lid is not closed.</li> </ul>	<ul style="list-style-type: none"> <li>• Close the top lid.</li> </ul>
The machine does not spin. The display shows E3.		<ul style="list-style-type: none"> <li>• Has the laundry been placed unevenly in the machine?</li> <li>• Is the machine level?</li> </ul>	<ul style="list-style-type: none"> <li>• Redistribute the load evenly. Close the top lid.</li> <li>• Level the machine. The machine will start 10 seconds after being leveled correctly.</li> </ul>
The display shows E4.		<ul style="list-style-type: none"> <li>• Is the water tap closed or has the water supply been interrupted?</li> <li>• Is the water inlet valve blocked?</li> <li>• Is the water pressure too low?</li> </ul>	<ul style="list-style-type: none"> <li>• Open the water tap. Push the Start/ Pause button once.</li> <li>• Clean the water inlet valve then push the Start/ Pause button once.</li> <li>• Use after the water pressure is normal.</li> </ul>
The display shows FA.		<ul style="list-style-type: none"> <li>• The water level sensor has failed.</li> </ul>	<ul style="list-style-type: none"> <li>• Please contact Customer Care.</li> </ul>
The machine	Will not wash	<ul style="list-style-type: none"> <li>• Is there a power failure?</li> </ul>	<ul style="list-style-type: none"> <li>• Wait for the power supply to be restored.</li> </ul>

Problem		Possible Causes	What to do
does not work.		<ul style="list-style-type: none"> <li>• Is the power plug inserted tightly?</li> <li>• Has the water level reached preset position?</li> </ul>	<ul style="list-style-type: none"> <li>• Insert the power plug tightly.</li> <li>• Wait for water to fill to the preset level.</li> </ul>
	Will not spin	<ul style="list-style-type: none"> <li>• Is the power plug inserted tightly?</li> <li>• Is the top lid closed?</li> <li>• Is the laundry distributed unevenly in the machine?</li> </ul>	<ul style="list-style-type: none"> <li>• Insert the power plug tightly.</li> <li>• Close the top lid.</li> <li>• Redistribute the laundry.</li> </ul>
There are abnormal sounds inside the machine.		<ul style="list-style-type: none"> <li>• Is the machine level?</li> <li>• Has the laundry been placed unevenly in the machine?</li> <li>• Are there any foreign objects inside the bowl?</li> </ul>	<ul style="list-style-type: none"> <li>• Redistribute the load evenly. Close the top lid.</li> <li>• Level the machine.</li> <li>• Remove the foreign object.</li> </ul>
The water tap leaks.		<ul style="list-style-type: none"> <li>• Is the water inlet hose loose?</li> </ul>	<ul style="list-style-type: none"> <li>• Fasten the inlet hose.</li> </ul>

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

