


Universal Remote Control Owner's Manual

Step 1: Install the batteries

Your universal remote requires two CR2032 coin-cell batteries (included).

To install the batteries:

1. Remove the battery compartment cover.
2. Place the batteries in the compartment with their (+) markings up. Push each battery up under the ridge in the compartment with the "+" marking.
3. Push the battery cover back into place.

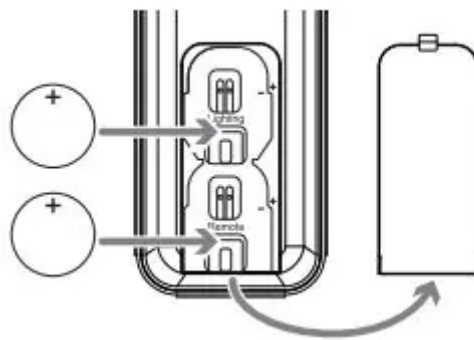

Battery Saver

Your universal remote control saves battery power by automatically turning off if any key is pressed for more than 60 seconds. This saves your battery life should your remote get stuck in a place where the keys remain depressed, such as between sofa cushions.

Step 2: Program your remote

To use this universal remote with your home entertainment system, first you need to program it to control your devices. There are four ways you can program the universal remote to operate your devices. Try them in the order listed.


- The **Direct Code Entry** lets you enter a code from the accompanying code list for your brand of device.
- The **Brand Code Search** searches through the codes for select brands of devices.
- The **Auto Code Search** goes automatically through all the codes for the device you're trying to control.
- The **Manual Code Search** lets you manually go through all the codes for the device you're trying to control.

Direct code Entry

Direct Code Entry lets you enter a code from the accompanying code list for your brand of device.

TIP: Each device key is associated with a type of device— the TV is preset to search for TVs, SATELLITE CABLE for satellite receivers or cable boxes, STREAM 1 and 2 for streaming players, DVD B RAY for DVD and Blu Ray players, and AUDIO SOUNDBAR for audio receivers and sound bars. To program a device key for a different type of device, see the Changing a Key's Device Type section.

1. Manually turn on the device you want to control.

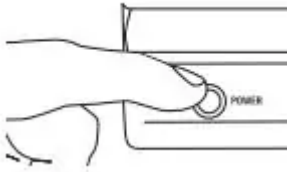


2. Find the Code List that came with the remote. Locate the section for the type of device you're trying to program, and find your brand in that section. Circle the codes for your brand and keep them handy.




3. Press and hold the device key you want to program (the POWER key illuminates). While you're holding down the device key, use your other hand enter the first five-digit

code for your brand in the code list (the POWER key turns off after the first digit).

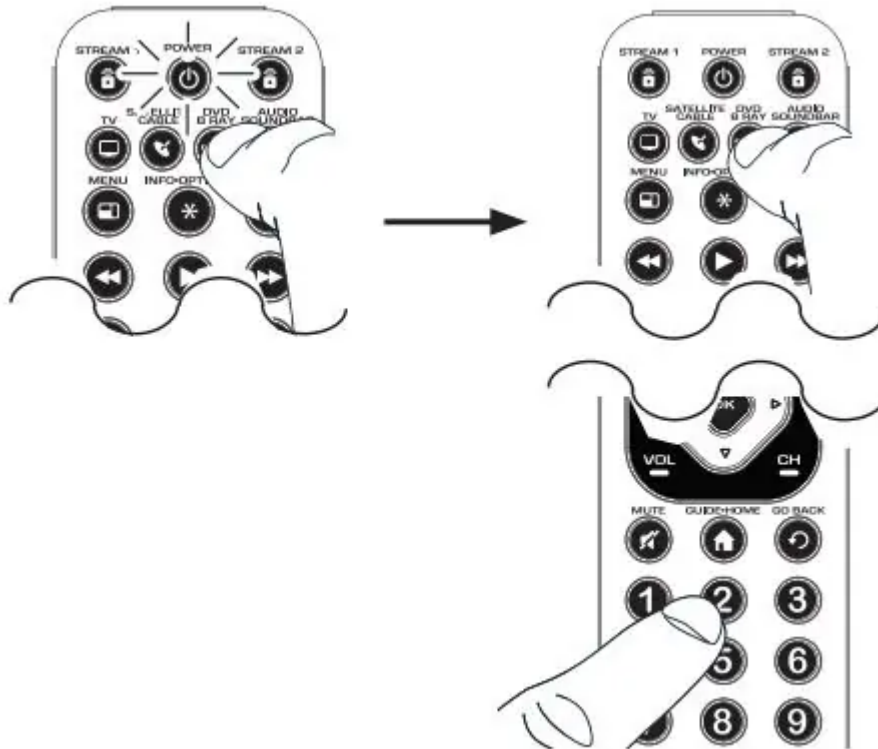

4. When you've finished entering the five-digit code, keep holding down the device key and look at the POWER key.

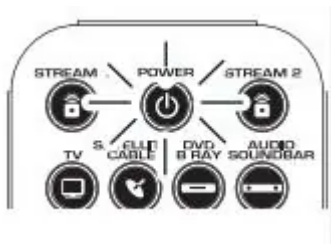

Is the **POWER** key illuminated?

YES: You're done! You've programmed this device key.

NO, it blinked four times and turned off: You have either entered a code number that is not in the code lists or missed a step in the code entry procedure. Try step 3 again.

NOTES:

Test the remote with the device to make sure the device key is programmed with the correct code for maximum functionality. If some features don't work, try a different code in the list.

Remember to enter the code for future reference in the box provided in the Code Retrieval section of this manual.

If your brand isn't listed in the code list, use one of the Code Search methods to program the remote control. (Refer to the Auto and Manual Code Search methods.)



If you release the device key any time during the Direct Code Entry procedure, the POWER key blinks four times, and the process is exited. The last programmed code under the device key is retained.



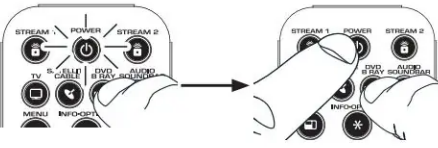


Brand Code Search

The Brand Code Search goes through only the codes for one of the select brands listed in the accompanying code list. If your brand of device is listed, this search can be very quick and easy.

TIPS:

Each device key is associated with a type of device— the TV is preset to search for TVs, SATELLITE CABLE for satellite receivers or cable boxes, STREAM 1 and 2 for streaming players, DVD B RAY for DVD and Blu Ray players, and AUDIO SOUNDBAR for audio receivers and sound bars. To program a device key for a different type of device, see the Changing a Key's Device Type section.

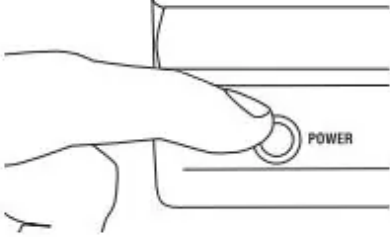
To exit without saving a new code at any point in the Brand Code Search, press the EXIT key.


<p>1. Manually turn on the device you want to control.</p>	
<p>2. Find your device's brand in the Brand Code list section of the accompanying code list. Circle the number for your brand and keep the list handy.</p>	
<p>3. Press and hold the device key you want to program. The POWER key illuminates. While you're holding down the device key, use your other hand to press and hold the remote's POWER key at the same time. The POWER key turns off.</p>	
<p>4. Wait until the POWER key comes on and stays on. Then release both keys.</p>	
<p>5. Look at the numbers you circled for your device's brand code number. Press those numbers on the remote keypad.</p>	
<p>6. Point the remote directly at the front panel of the device you want to control.</p>	

Press POWER on the remote and wait 2 seconds. The remote is testing a single code for your device's brand.



Did your device turn off?

YES: Press the key  to store the code. You're done! You've programmed this device key.

NO: Press POWER again. The remote tests the next code for your brand. Keep pressing POWER every 2 seconds until your device turns off. When it does, press .

NOTES:

Throughout the programming of each key, be sure to keep the remote pointed at the IR sensor of the device you are currently programming the remote to control.



Test the remote with the device to make sure the device key is programmed with the correct code for maximum functionality. If some features don't work, try a different code. See the "Testing the Code for Maximum Functionality" section below for more information.

During the Brand Code Search, the remote ignores keypresses that aren't part of the search.

The search times out after two minutes (the POWER key blinks four times and turns off, and the last programmed code under that device key is retained).

The POWER key blinks four times and turns off when the remote has gone through all the codes. The remote exits the Brand Code Search. If your device hasn't turned off yet, try a different search method.

Testing the Code for Maximum Functionality

1. Try a variety of the device's functions with the remote. If some device features don't work, go to the next step to try a different code.
2. Repeat the Brand Code Search from the beginning. When the device turns off for the first time, don't press the  key, which would store the same code. Instead, with the unit now off, continue to press the POWER key repeatedly until the unit turns back on.
3. Once the unit turns back on, you have found another code that operates the device. Press the  key.
4. Test the key's functionality again by attempting to control a variety of the device's functions. If the code that has been stored controls the majority of the device's functions,

programming is complete. If the code stored does not give maximum functionality, try another code.


Auto Code Search

The Auto Code Search goes automatically through all the codes for the device you're trying to control. When you find the one that operates your device, you can stop the search and store that code.


TIPS:

Each device key is associated with a type of device—the TV is preset to search for TVs, SATELLITE CABLE for satellite receivers or cable boxes, STREAM 1 and 2 for streaming players, DVD B RAY for DVD and Blu Ray players, and AUDIO SOUNDBAR for audio receivers and sound bars. To program a device key for a different type of device, see the Changing a Key's Device Type section. To exit without saving a new code at any point in the Auto Code Search, press the EXIT key.


1. Manually turn on the device you want to control.

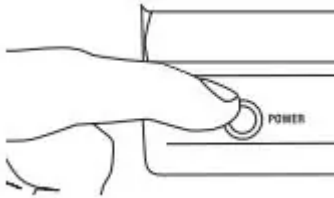

2. Press and hold the device key you want to program. The POWER key illuminates. While you're holding down the device key, use your other hand to press and hold the remote's POWER key at the same time. The POWER key turns off.

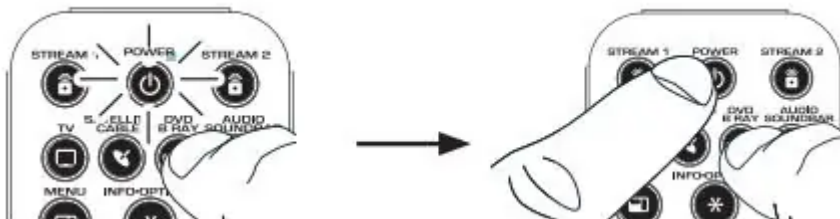

3. Wait until the POWER key comes on and stays on. Then release both keys.

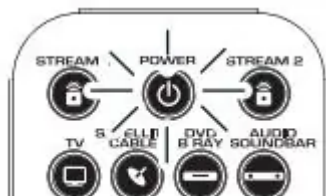

4. Point the remote directly at the front panel of the device you want to control. Press > on the remote and wait 5 seconds. The remote is testing a batch of 10 codes on your device.



Did your device turn off?

YES: Go to step 5.

NO: Press > again. The remote tests the next batch of 10 codes. Keep pressing > every 5 seconds until your device turns off.

5. When your device turns off, press the << key on the remote and wait at least 2 seconds. The remote tries the last of the previous ten codes.



Did your device turn on?

YES: Press the ■ key. You're done! You've programmed this device key.

NO: Press << again. The remote tests the next code in the batch. Keep pressing << every 2 seconds until your device turns back on. When it does, press ■.

Note:

If you accidentally press the << key after your device turns on, press the >> key. Then, wait two seconds to see if your device turns off again.

NOTES:

Throughout the programming of each key, be sure to keep the remote pointed at the IR sensor of the device you are currently programming the remote to control.

Test the remote with the device to make sure the device key is programmed with the correct code for maximum functionality. If some features don't work, try a different code.

See the "Testing the Code for Maximum Functionality" section below for more information.


During the Auto Code Search, the remote ignores keypresses that aren't part of the search.

The search times out after two minutes (the POWER key blinks four times and turns off, and the last programmed code under that device key is retained).

The POWER key blinks four times and turns off when the remote has gone through all the

codes. The remote exits the Auto Code Search. If your device hasn't turned off yet, try a different search method.

Testing the Code for Maximum Functionality

1. Try a variety of the device's functions with the remote. If some device features don't work, go to the next step to try a different code.
2. Repeat the Auto Code Search Method from the beginning. When your device turns off, do not stop searching. Instead, with the unit now off, continue to press the > key every 5 seconds until the unit turns back on.
3. Once the unit turns back on, press the << key on the remote every 2 seconds until your device turns off again. When your device turns off again, press the  key.
4. Test the key's functionality again by attempting to control a variety of the device's functions. If the code that has been stored controls the majority of the device's functions, programming is complete. If the code stored does not give maximum functionality, try another code.

Manual Code Search

The Manual Code Search lets you go one-by-one through all the codes for the device you're trying to control. When you find the one that operates your device, you can stop the search and store that code.


TIPS:

The Manual Code Search method may take a long time because the remote searches through all of the codes in its memory one-by-one. If your brand is listed in the Brand Codes or the Code Lists, first try the Brand Code Search or the Direct Code Entry method.


Each device key is associated with a type of device—the TV is preset to search for TVs, SATELLITE CABLE for satellite receivers or cable boxes, STREAM 1 and 2 for streaming players, DVD B RAY for DVD and Blu Ray players, and AUDIO SOUNDBAR for audio receivers and sound bars. To program a device key for a different type of device, see the Changing a Key's Device Type section.

To exit without saving a new code at any point in the Manual Code Search, press the EXIT key.


1. Manually turn on the device you want to control.

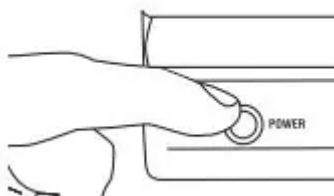


2. Press and hold the device key you want to program. The POWER key illuminates. While you're holding down the device key, use your other hand to press and hold the remote's POWER key at the same time. The POWER key turns off.

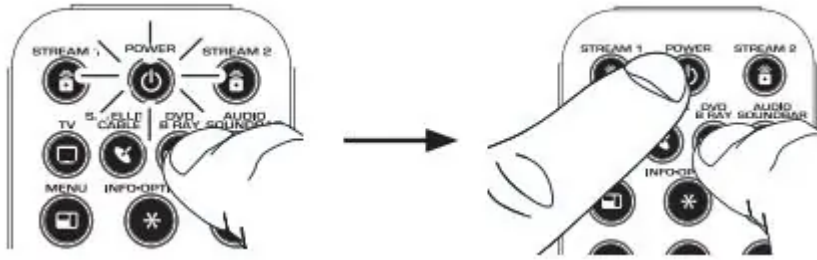

3. Wait until the remote's POWER key comes on and stays on. Then release both keys.

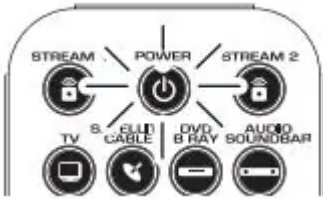

 
4. Point the remote directly at the front panel of the device you want to control. Press POWER on the remote and wait 2 seconds. The remote is testing a single code for your device.



Did your device turn off?

YES: Press the  key to store the code. You're done! You've programmed this device key.

NO: Press POWER again. The remote tests the next code for your device. Keep pressing POWER every 2 seconds until your device turns off. When it does, press .



TIP: Because there are so many codes, you may have to press the POWER key many times—possibly hundreds of times.

NOTES:

Throughout the programming of each key, keep the remote pointed at the IR sensor of the device you are programming the remote to control.



Test the remote with the device to make sure the device key is programmed with the correct code for maximum functionality. If some features don't work, try a different code. See the "Testing the Code for Maximum Functionality" section below for more information.

During the Manual Code Search, the remote ignores keypresses that aren't part of the search.


The search times out after two minutes (the POWER key blinks four times and turns off, and the last programmed code under that device key is retained).

The POWER key blinks four times and turns off when the remote has gone through all the codes. The remote exits the Brand Code Search. If your device hasn't turned off yet, try a different search method.

Testing the Code for Maximum Functionality

1. Try a variety of the device's functions with the remote. If some features of your devices don't work, go to the next step to try a different code.
2. Repeat the Manual Code Search and Entry Method from the beginning. When the device turns off for the first time, don't press the  key, which would store the same code. Instead, with the unit now off, continue to press the POWER key repeatedly until the unit turns back on.
3. Once the unit turns back on, you have found another code that operates the device. Press the  key.
4. Test the key's functionality again by trying a variety of functions. If the code controls the majority of the device's functions, programming is complete. If the code stored does not give maximum functionality, try another code.

Tour of the Remote

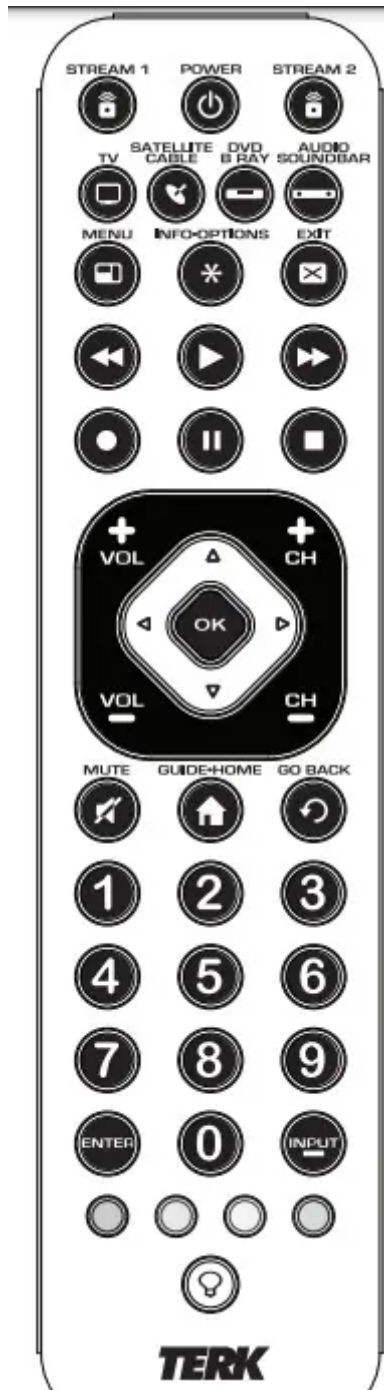

In most cases, the keys on this remote perform the same functions as the keys on your original remotes once you've programmed this remote to operate your components. Many keys on this remote have other functions as well.

 
Illuminated **POWER** key serves as an indicator light to provide feedback.

Device keys (**TV**, **SATELLITE CABLE**, **STREAM 1 and 2**, **DVD B RAY**, **AUDIO SOUNDBAR**) put the remote in the right mode to control your device. **MENU** and **INFO•OPTIONS** access device menu and information screens. **EXIT** exits remote programming; it also performs the same functions as on your original remotes.

GUIDE•HOME puts the remote in guide mode for satellite receivers or cable boxes, and accesses the home screen for streaming players.

Arrow keys and **OK** act as navigation and selection keys in device guides and menu systems.

The **INPUT — (dash)** key has three functions:

- (1) it toggles through all the video sources connected to your TV;
- (2) when the remote is in VCR mode, this button toggles between VCR and the TV input;
- (3) when you're entering digital channel numbers directly, this button lets you separate the main channel number from the sub-channel number (such as 59.1). Backlight key  turns backlighting on/off.

IMPORTANT:;

Because this remote controls more than one device, you must first “tell” the remote which device you wish to operate. That means, if you wish to operate your TV, you must first press the TV key to put the remote in the TV Mode. The remote stays in that device mode until you press a different device key. For example, if your remote is in TV Mode and you want to operate the DVD player, you must press the DVD B RAY key to change device modes.

Advanced Functions

Changing A Key's Device Type

Each device key is associated with a type of device—the TV is preset to search for TVs, STREAM 1 and 2 for streaming players, SATELLITE CABLE for satellite receivers or cable boxes, DVD B RAY for DVD or Blu Ray players, and AUDIO SOUNDBAR for audio receivers or soundbars. To program these keys to control a different kind of device, you have to reassign them first.

Reassigning the DVD B RAY Key to Control a VCR

The DVD B RAY key defaults to control a DVD player. If you want the DVD B RAY key to control a VCR, you must reassign it.

1. Press and hold the DVD B RAY key. The POWER key illuminates. Keep holding down the DVD B RAY key.
2. While holding down the DVD B RAY key, press and release the number 2 key on the keypad. The POWER key turns off.
3. Release the DVD B RAY key. The POWER key blinks two times and then turns off. The DVD B RAY key is now set to control a VCR.
4. Follow the directions in the auto, brand, direct entry, or manual code search to program the DVD B RAY key for your VCR.

Channel Lock

Channel lock automatically sends channel commands, like the CH, GO BACK, and 0–9 number keys, to your satellite receiver, cable box, or digital TV converter when you're in TV mode. This can save you keypresses if you use a device other than your TV to change channels.

To turn channel lock on:

1. Press and hold the device key for the device you use to change channels. While you're holding down this device key, use your other hand to press and hold the remote's CH up key at the same time.
2. Wait until the remote's POWER key comes on and stays on. Then release both keys.
3. Press ENTER to lock channel commands to this device.

To turn channel lock off:

1. Press and hold the TV key. While you're holding down the TV key, use your other hand to press and hold the remote's CH down key at the same time.
2. Wait until the remote's POWER key comes on and stays on. Then release both keys. 3. Press ENTER to start changing channels with your TV.

Code Retrieval

Once you've programmed the remote to control your devices, you may want to record the codes for future reference. If you used the Direct Code Entry method, this is easy. Just find the codes you entered and make a note of them in the boxes below. If you used one of the Code Search methods to program your remote or if you used the Direct Entry method but don't remember the code, you will need to retrieve each device's five-digit code. Retrieving the actual code and writing it down will save you time if you ever need to program the remote again. If the codes are recorded, you can use the Direct Entry method to reprogram your remote to control your devices, which is quick and easy.

1. Press and hold the device key (TV, SATELLITE CABLE, STREAM 1 and 2, DVD B RAY, AUDIO SOUNDBAR) whose code you wish to retrieve. The POWER key illuminates. Keep pressing the device key.
2. While holding the device key down, press and hold the INFO•OPTIONS key. The POWER key turns off. After holding down both keys for three seconds, the POWER key turns back on.
3. Release both keys. The POWER key remains on.
4. Starting with the number 1 key, press and release each number key on the keypad in the following order: 1-9, then 0. The number that causes the POWER key to blink is the first number of the code. As you find each number of the code, write it down for future reference.

Note: All TV codes begin with the number 1; all VCR and DVR codes begin with the number 2; all DVDs, the number 3; all audio devices, the number 4; and all satellite receivers, cable boxes, streaming players and DTV converters, the number 5.

5. Repeat step 4 until you have retrieved all five numbers in the code. After the fifth number is retrieved, the POWER key blinks briefly, then turns off.

TIP: To exit the Code Retrieval Mode at any time, press the EXIT key.

Note: If you press an invalid key during the Code Retrieval process, the remote will not respond. If you do not press a valid Code Retrieval key (TV, SATELLITE CABLE, STREAM 1 and 2, DVD B RAY, AUDIO SOUNDBAR, INFO•OPTIONS, EXIT), Code Retrieval times out after 15 seconds. The POWER key blinks four times, and then turns off.

TV CODE	SATELLITE CABLE CODE
<input type="text" value="1"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>	<input type="text" value="5"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
STREAM 1 CODE	STREAM 2 CODE
<input type="text" value="5"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>	<input type="text" value="5"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
DVD B RAY CODE	AUDIO SOUNDBAR CODE
<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>	<input type="text" value="4"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>

Troubleshooting

Problem	Solutions
<p>The remote does not operate your device.</p>	<ul style="list-style-type: none"> • Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SATELLITE CABLE, STREAM 1 and 2, DVD B RAY, AUDIO SOUNDBAR). This tells the remote which device to operate. • Remove any obstacles between the remote and the device. Make sure you're aiming the remote at the device's IR sensor. • Make sure the batteries are fresh and are properly installed. Replace the batteries with two new CR2032 batteries, if necessary (see the Battery Installation section).
<p>The remote can't be programmed to operate your device.</p>	<ul style="list-style-type: none"> • If you are testing the remote while programming it, you may be too far away from the device or at a wrong angle. There must be an unobstructed path between the remote and the IR sensor on the device. Move closer and make sure you point the remote at the device you're trying to control. • If you're using the Direct Entry programming method to enter the codes for your brand and the unit is still not functioning properly, try the auto, brand, or manual search method. To control combo units, like TV/VCRs or TV/DVDs, you must program the individual corresponding device keys to control each part of the combo unit. Once programmed successfully, the TV key controls the TV functions, and the DVD B RAY key controls the VCR or DVD functions. • Make sure the batteries are fresh and are properly installed.
<p>The remote doesn't perform commands properly.</p>	<ul style="list-style-type: none"> • Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SATELLITE CABLE, STREAM 1 and 2, DVD B RAY, AUDIO SOUNDBAR). This tells the remote which device to operate. • Make sure device is ready (for example, the DVD player has a disc loaded).



	<ul style="list-style-type: none"> • You may have pressed an invalid key for the mode the remote is in. • If you're trying to enter a channel number directly, try pressing the ENTER key after entering the channel number as this is a requirement of certain models and brands. • There is a possibility that a programmed code may only be able to control some of your device features (for example, only turns a device on and off). To confirm that the device key is programmed with the correct code for maximum functionality, test the device. Attempt to control a variety of the device's functions with the remote. If some of the features of your devices don't work, try programming the remote with a different code in the list using the Direct Code Entry Method, until you find the code that allows the remote to control the majority of your device's functions. Different codes can provide different levels of functionality.
<p>The POWER key does not light when you press a key.</p>	<ul style="list-style-type: none"> • You may have pressed an invalid key for the mode the remote is in. • Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SATELLITE CABLE, STREAM 1 and 2, DVD B RAY, AUDIO SOUNDBAR). This tells the remote which device to operate. • Make sure the batteries are fresh and are properly installed. Replace the batteries with two new CR2032 batteries, if necessary (see the Battery Installation section).
<p>Remote backlighting doesn't work.</p>	<ul style="list-style-type: none"> • Press the key to activate backlighting. • If the POWER key still illuminates when you press a key on the remote, but backlighting does not come on for the other keys when you press the key, you need to replace the battery responsible for backlighting (the other battery runs all the other remote functions and is still working). See the Battery Installation section and replace the TOP battery only (leave the bottom battery in). u



	<ul style="list-style-type: none"> • If the POWER key does not illuminate when you press a remote key, replace both batteries. Follow the directions in the battery replacement section.
The remote will not change channels on device.	<ul style="list-style-type: none"> • Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SATELLITE CABLE, STREAM 1 and 2, DVD B RAY, AUDIO SOUNDBAR). This tells the remote which device to operate. • Press the ENTER key after you enter a channel number. • Remove any obstacles between the remote and the device. Make sure to aim the remote at the IR sensor on the device.
The device's menu does not appear on the TV screen.	<ul style="list-style-type: none"> • Make sure you have connected the device to your TV properly and selected the correct input. (See your devices' Owner's Manuals for proper connection procedures.) • Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SATELLITE CABLE, STREAM 1 and 2, DVD B RAY, AUDIO SOUNDBAR). This tells the remote which device to operate. • Menu access isn't supported for all brands. You may need to use your original remote control to access menu functions for some devices.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.