

## Getting to know the appliance

### Parts



- 1 Control panel and display
- 2 Convection fan and element
- 3 Rack holders (4)
- 4 Door gasket
- 5 Door hinges
- 6 Metal tray turntable with bake element below
- 7 Ceramic microwave tray
- 8 Broil element
- 9 Oven vents

### Oven Vents

The oven vents are located above and below the oven cavity as well as at the sides and the top of the appliance frame. Warm air may be released from the top and bottom vents before, during and after cooking. It is normal to see steam escaping from these vents, and

condensation may collect in this area. This area may be warm when the oven is in use. Do not block any vents, since they are important for air circulation.

## Cooling Fan

The cooling fan runs during all cooking modes. The fan can be heard when it is running, and warm air may be felt as it is released from the oven vents. The fan may also run after the oven is off.

## Convection Fan

The convection fan operates during all convection modes. When the oven is operating in a convection mode, the fan turns off automatically when the door is opened.

## Oven light

The oven light turns off to save energy after one minute with the door open. To turn the light back on, close the door and open it again.

## Control panel



## Touch keys

You can activate a function by briefly touching the corresponding touch key. Each time you touch a key a short beep will sound. A long beep will tell you that you have made an invalid input.








<b>Touch key</b>	<b>Function</b>
Panel Lock	Activate/deactivate child lock
Speed Chef	Select Speed Chef programs
Clock	Set time of day
Settings	Enter basic settings menu
Start/Enter	Confirm entered values/Start cooking mode
Clear/Off	Clear entered value/turn appliance off
Sensor Reheat	Select Sensor Reheat programs
Sensor Cook	Select Sensor Cook programs
Auto Defrost	Select Auto Defrost programs
Broil	Set Broil modes (Hi/Lo)
Convection	Set Convection mode
Frozen Foods	Start cooking programs for frozen convenience foods
Popcorn	Cook popcorn
Pizza	Select pizza programs
Beverage	Heat beverages
More Modes	<p>Enter menu for additional modes:</p> <ul style="list-style-type: none"> <li>• Keep Warm</li> <li>• Convection Broil</li> <li>• Melt Butter</li> <li>• Melt Chocolate</li> <li>• Soften Ice Cream</li> <li>• Soften Cream Cheese</li> </ul>
Kitchen Timer	Set the kitchen timer
Power Level	Set power level for microwave operation


Microwave +30 sec	Add 30 seconds to microwave cooking time
+Amount	Can be used to browse through menu options
0 - 9	Use the number keys to enter customized values

### Display elements



The display gives you information on the current settings of your appliance. Blinking display elements indicate that an input is required.



Element	Meaning
	Child lock activated
	Convection
	Microwave
	Speed Chef
	Broiling high level
	Broiling low level
	Auto Defrost
start/enter	Touch Start/Enter key required
000° temp	Temperature is displayed
tbsp/kg/lbs/ cups/oz	Measuring units
hr/min	Kitchen timer value in hours/minutes
min/sec	Programmed cooking time in minutes/seconds
preheating	Appliance is preheating
sensing	Appliance is sensing
Åtimer	Kitchen timer is running

	Shows progress of preheating
Line for free text	Displays program information, prompts required user input

## Accessories

	<p><b>Metal tray turntable</b></p> <p>Food which particularly requires a lot of heat from underneath, such as pizza and chicken nuggets, can be prepared directly on the metal tray turntable.</p> <p>The turntable can turn clockwise or counterclockwise.</p> <p>It is dishwasher safe and cut resistant. You can cut pizza into slices on the turntable itself.</p> <p>Place the metal tray turntable on the drive in the center of the cooking compartment. Ensure that it is properly fitted.</p> <ul style="list-style-type: none"> <li>• Never use the microwave without the metal tray turntable.</li> <li>• The metal tray turntable can support max. 12 lbs.</li> <li>• The metal tray turntable must turn when using all types of heating.</li> </ul>
	<p><b>Wire rack</b></p> <p>The wire rack can be used with the recess facing up  or down .</p> <p>Use it facing down for Speed Chef, Convection, Keep Warm and to fit larger dishes into the oven cavity.</p> <p>Use it facing up (as shown) for Broil and Convection Broil.</p>
	<p><b>Ceramic tray</b></p> <p>Use for microwave cooking.</p> <ul style="list-style-type: none"> <li>• You can place food, like popcorn or potatoes, directly on the ceramic tray.</li> <li>• The ceramic tray can also be used for conventional cooking.</li> </ul>



### Broil pan and grid (optional accessory)

Use for broiling and roasting.


Pan - PAN, BROILER, MINI Part number 00666709

Grid - GRILL, BROILER, PAN, MINI Part number 00666710

### How to install the turntable

Place the turntable with the rollers "A" as shown in the picture, on the carrier "B" in the middle of the cooking compartment floor.


The turntable must sit straight on the carrier.

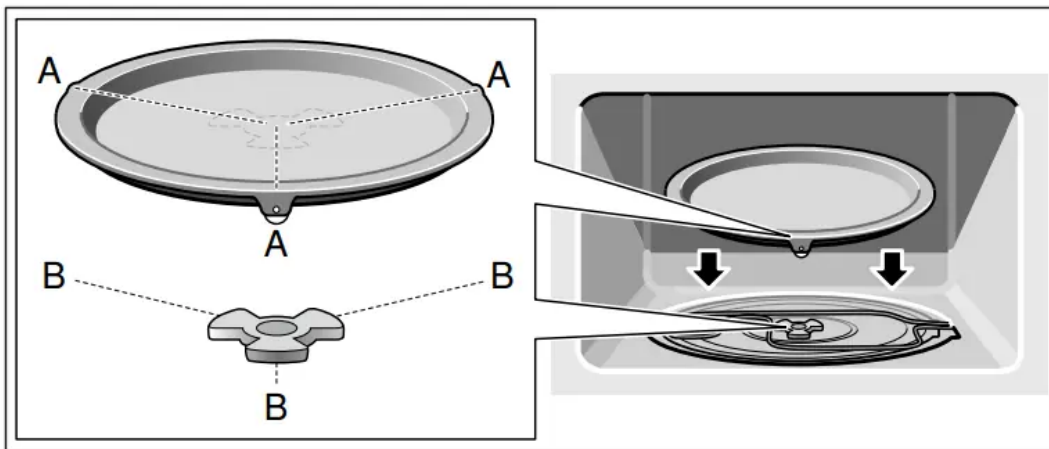

Note: Do not use the appliance if the turntable is not in place. Confirm that all parts are properly seated and that the turntable rotates freely when the microwave is operated.

### Inserting the wire rack

1. Place rack securely in the four plastic supports.

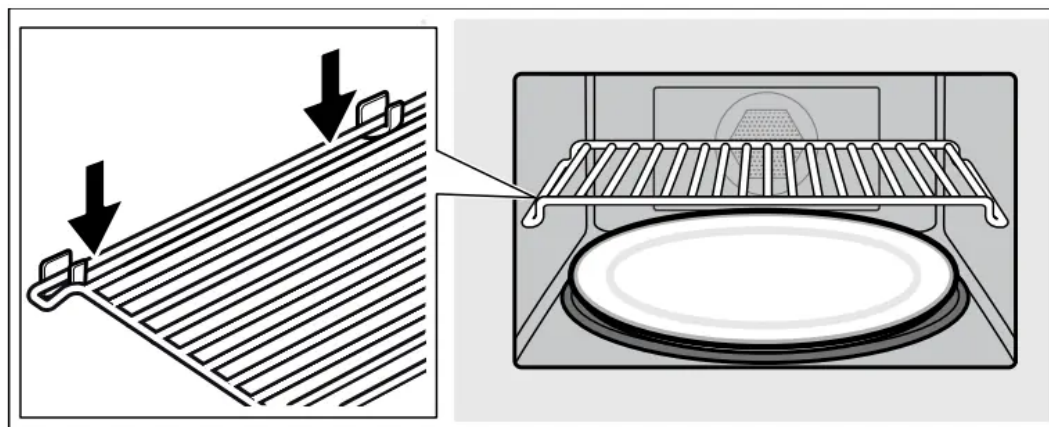

Note: Rack must not touch metal walls or back of microwave.

2. Place food on the rack.

## Before using the appliance for the first time

- Appliance must be properly installed by a qualified technician before use.
- Remove all packing materials from inside and outside the oven.
- While cool, wipe with a clean, damp cloth and dry.
- There may be a slight odor from your new appliance; this is normal and will disappear after a short time.
- Optimum cooking results depend on proper cookware being used.
- Read and understand all safety precautions and Use and Care Manual information

### Setting the clock

Once the appliance has been properly connected, **12:00** will be displayed as the time of day. To set the correct time, proceed as follows:

1. Touch Clock.
2. Enter the correct time using the number keys. Example: To set the clock to 12:41 type in 1 2 4 1.
3. Touch Start/Enter to confirm.

The clock will also be displayed when your appliance is turned off. Please refer to the chapter “Basic Settings” how to hide the clock.

### Heating up the appliance

To remove the new oven smell, heat up the appliance when it is empty and closed. One hour with Convection at 350° F (180 °C) is ideal. Ensure that no packaging remnants have been left in the oven cavity.

1. Touch Convection
2. Enter the numbers 3 5 0 with the number keys.
3. Touch Start/Enter.

The oven light turns on and the appliance starts heating.

### Cleaning accessories

Before using accessories for the first time, thoroughly clean them with hot soapy water and a soft dish cloth.

### Applying the program label


Apply the included program label in the desired language to the side of the oven cavity, as indicated on the leaflet that carries the program label.

# Microwave

## Setting the microwave

The appliance must be turned off.

1. Enter the desired cook time with the number keys. The timer display will fill in from right to left.

Example: To set a microwave time of 20 minutes and 30 seconds, enter the numbers 2 0 3 0. The microwave symbol  lights up and start/enter is blinking on the display.



2. You can start microwave operation with the default power level 10 by touching Start/Enter,

-or -

you can set a different power level. Touch Power Level. **10** and start/enter are blinking in the upper left section of the display



3. Enter the desired power level using the number keys. The entered power level and start/enter are blinking.

4. Touch Start/Enter to start microwave operation. The microwave timer will start to count down.

You can step up the microwave timer at any time during operation by touching Microwave +30 sec.

The appliance turns off and a beep sounds once the microwave timer reaches zero. The appliance turns off and the clock is displayed.

## Change power level

You can change the power level at any time during microwave operation.

1. Touch Power Level. The display shows POWER LEVEL **1 - 10**.
2. Enter the desired power level with the number keys. The entered power level and start/enter are blinking.
3. Touch Start/Enter. Microwave operation continues with the new power level.

## Opening appliance door during operation

Opening the appliance door during operation will interrupt the current mode. Close the appliance door and then touch Start/Enter to resume operation.

## Microwave +30 sec

Use the Microwave +30 sec key to quick-start your microwave at the highest power level. You can touch the key repeatedly to increase the microwave time in increments of 30 seconds.

Touching this key during microwave operation will add 30 seconds to the remaining microwave time.

## Cancel operation

Touch Clear/Off to cancel the active oven mode. The appliance turns off and the clock is displayed.


The cooling fans may continue to run for awhile and then switch off automatically


# Convection

## Setting Convection mode

The appliance must be turned off.

1. Touch Convection.

The convection symbol  lights up. start/enter and the default temperature 325°F (160°C) are blinking on the display. The time of day will be permanently displayed during convection cooking.

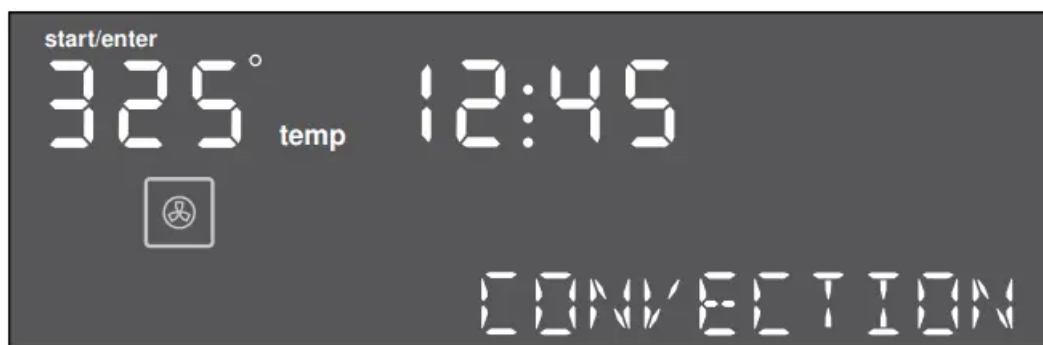

2. Change the temperature using the number keys and touch Start/Enter.

The appliance starts preheating.



The set temperature is reached once the preheat bar has filled up completely and a beep sounds.

To change the temperature during operation, touch Convection. The temperature and start/enter begin to flash. Type in the new temperature using the number keys and confirm with Start/Enter.

### Opening appliance door during operation

Opening the appliance door during operation will interrupt the current mode. When you close the appliance door, operation will be resumed.

### Cancel operation

Touch Clear/Off to cancel the active oven mode. The appliance turns off and the clock is displayed.

The cooling fans may continue to run for awhile and then switch off automatically

## Cleaning and Maintenance

### Cleaning Guide

- For best performance and for safety reasons, keep the oven clean inside and outside. Take special care to keep the inner door panel and oven front frame free of food and grease build-up.

- Never use abrasive scouring powder or pads on the microwave. Wipe the microwave oven inside and out with a soft cloth and warm (not hot) mild detergent solution. Then rinse and wipe completely dry.
- Wipe spatters immediately with a wet paper towel, especially after cooking greasy foods like chicken or bacon.
- Clean your microwave oven weekly or more often, if needed.
- Never operate the microwave oven without food in the oven cavity, unless pre-heating with Convection, Pizza, Frozen Foods and Keep Warm mode; this can damage the magnetron tube or ceramic tray. You may wish to leave a cup of water standing inside the oven when it is not in use to prevent damage if the oven is accidentally turned on.

 

<b>Part</b>	<b>Recommendations</b>
Oven cavity	<p>Keep inside (cavity) of the oven clean. Food particles and spilled liquids can stick to the oven walls, causing the oven to work less efficiently.</p> <p>Wipe up spills immediately. Use a damp, clean cloth and mild soap. DO NOT use harsh detergents or abrasive cleaners.</p> <p>To help loosen baked-on food particles or liquids, heat 2 cups of water (add the juice of 1 lemon if you desire to keep the oven fresh smelling) in a 4 cup measuring glass at High power for 5 minutes or until boiling. Let stand in oven cavity for 1 or 2 minutes.</p> <p>For baked-on grease spatters, wash with hot, soapy water, rinse and dry.</p>
Wire rack	<p>Wash with soapy water. Rinse thoroughly and dry, or gently rub with cleansing powder or soap-filled pads as directed. The wire rack can also be washed in the dishwasher.</p>
Metal turntable tray	<p>Remove metal turntable tray from the oven when cleaning the oven cavity and tray.</p> <p>Wash the metal turntable tray in warm sudsy water or in the dishwasher.</p>
Ceramic tray	<p>Clean with warm, soapy water or in the dishwasher.</p>
Door seal	<p>Wipe with damp cloth.</p>
Door glass	<p>Wash with soap and water or glass cleaner. Use Fantastik® or Formula 409® to a clean sponge or paper towel and wipe clean. Avoid using powder cleaning agents, steel wool pads and oven cleaners.</p> <p>If steam accumulates inside or outside the oven door, wipe with a soft cloth. Steam can accumulate when operating the oven in high humidity and in no way indicates microwave leakage.</p>
Painted surfaces	<p>Clean with hot soapy water or apply Fantastik® or Formula 409® to a clean sponge or paper towel and wipe clean. Avoid using powder cleaning agents, steel wool pads and oven cleaners.</p>

Stainless steel surfaces/ exterior surfaces	Always wipe or rub in the direction of the grain. Clean with a soapy sponge, then rinse and dry, or wipe with Fantastik® or Formula 409® spray on a paper towel. Protect and polish with Stainless Steel Magic® and a soft cloth. Remove water spots with a cloth dampened with white vinegar.
Plastic & Controls	When cool, clean with soapy water, rinse and dry.
Printed areas (words & numbers)	Do not use abrasive cleaners or petroleum based solvents.

## Troubleshooting

If you encounter a problem, it often will merely be something minor. Before you call customer service, consider the suggestions and instructions below:



Problem	Suggestion
Neither the microwave's display nor oven operates.	<ul style="list-style-type: none"> <li>• Properly insert the plug into a grounded power outlet.</li> <li>• Reset the household circuit breaker or replace any blown fuses.</li> </ul>
The oven display works, but the oven will not operate.	<ul style="list-style-type: none"> <li>• Make sure the oven door is closed securely and completely.</li> <li>• Check to see if packing material or other materials are stuck to the door seal.</li> <li>• Check for damage to the oven door.</li> <li>• Press the Clear/Off key twice and attempt to re-enter cooking instructions.</li> </ul>
The power goes off before the cook time has elapsed.	<ul style="list-style-type: none"> <li>• Reset the clock and any cooking instructions.</li> <li>• Reset the household circuit breaker or replace any blown fuses.</li> <li>• Press the Clear/Off key twice and attempt to re-enter cooking instructions.</li> </ul>
The microwave power level switches from power level  to power level  .	If the oven is set to cook for more than 30 minutes at 100% power level, it will automatically reduce the power to a 80% power level after 30 minutes to avoid overcooking.
You see sparks or arcing.	Remove any metallic utensils, cookware or metal ties from the oven cavity. If using aluminum foil, use only narrow strips and allow at least one inch between the foil and the interior oven walls.
The turntable makes noises or sticks.	<ul style="list-style-type: none"> <li>• Clean the underside of the metal tray turntable, and the oven cavity bottom.</li> <li>• Make sure the metal tray turntable is positioned correctly.</li> </ul>

Using your microwave causes TV or radio interference.	This is similar to the interference caused by other small appliances, such as hair dryers. Move your microwave further away from other appliances, like your TV or radio.
The display shows error message E-xx	A malfunction has occurred. Note any error codes that may appear on the display. Disconnect the appliance from the power supply by switching off the fuse in the fuse box and call a qualified after-sales service technician.
The display shows error message E-11	The touch keys do not operate properly. This may be due to condensation on keypad. Clean the control panel with a dry cloth. Disconnect the appliance from the power supply by switching off the fuse in the fuse box and switch it back on after 10 seconds.

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.