

EASYTEAM IRON



Product may vary slightly from what is illustrated.

1. Spray nozzle
2. Fabric select dial
3. Spray button
4. Automatic shutoff light
5. Fabric guide
6. Water tank
7. Soleplate

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

Do not attempt to modify the plug in any way.

TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel or in Latin America by an authorized service center.

HOW TO USE

This product is for household use only.

GETTING STARTED

- Remove any labels, stickers or tags attached to the body or soleplate of the iron.
- Please go to prodprotect/applica to register your warranty

Note: Use ordinary tap water for ironing. Do not use water processed through a home softening system.

Important: For optimum performance, let the iron stand for 90 seconds before beginning to iron.

Tip: If unsure of a garment's fiber, test a small area (on an inside seam or hem) before ironing.

FILLING WATER TANK

1. Tilt the iron and using a clean measuring cup, pour water into opening until the water reaches the MAX level mark on the water tank. Do not overfill.

Note: If you need to add water while ironing, unplug the iron and follow above steps.

SPECIAL FEATURES

AUTOMATIC SHUTOFF IN 2 POSITIONS

- Once the iron reaches appropriate temperature, it will turn off after 30 seconds of inactivity if left on its soleplate. If left vertically on its heel rest, it will shut off after 8 minutes.
- As soon as you pick up the iron, it will start heating again. Wait for iron to reheat completely before resuming operation.

Anti-Drip System

The anti-drip system prevents water spotting at low temperatures.

IRONING WITH STEAM

Smart Steam™ Technology

The Smart Steam™ system automatically generates the right amount of steam for the fabric type selected. Once you select the temperature, the Smart Steam™ technology detects the temperature and adjusts the steam power accordingly

Steam

Use to remove stubborn wrinkles.

1. With the water tank filled to the MAX mark, set fabric select dial to appropriate setting (between 4 and 6) for your fabric.
2. Be sure there is water in the tank. Steam is automatically turned off between settings 0 and 3.
3. When finished ironing, turn the fabric select dial to 0 and unplug the iron.

Important: Always stand the iron on its heel rest when powered on but not in use.

USING SPRAY

Use to dampen tough wrinkles at any setting.

1. Be sure the iron is filled with water.
2. While ironing, press the Spray Mist button to generate the mist at any temperature setting.
3. On first use, pump the spray button several times.

IRONING WITHOUT STEAM

1. Turn the fabric select dial to setting between settings 0 and 3 to iron without steam. The Smart Steam™ system will automatically turn off.
2. To dry iron at higher settings, empty the water from the tank to prevent steaming.

CARE AND CLEANING

This product contains no user serviceable parts. Refer service to qualified service personnel.

CLEANING OUTSIDE SURFACES

1. Make sure iron is unplugged and has cooled completely
2. Wipe soleplate and outer surfaces with a soft cloth dampened with water.
3. Add mild household detergent. Never use abrasives, heavy-duty cleansers, vinegar or scouring pads that may scratch or discolor the iron.
4. After cleaning, steam iron over an old cloth to remove any residue from the steam vents.

STORING YOUR IRON

1. Unplug iron and allow it to cool.
2. Check that fabric select dial is set to 0
3. Store vertically on its heel to prevent water leaking from the soleplate.

NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

Two-Year Limited Warranty

(Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Spectrum Brands, Inc.'s liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished

How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website, or call toll-free 1-800-231- 9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit

- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

IMPORTANT SAFETY INSTRUCTIONS

When using your iron, basic safety precautions should always be followed, including the following:

- **READ ALL INSTRUCTIONS BEFORE USING.**
- Use iron only for its intended use.
- To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
- The iron should always be turned to the minimum (min) setting before plugging or unplugging from outlet. Never yank cord to disconnect from the outlet; instead grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- Always disconnect iron from electrical outlet when filling with water or emptying, and when not in use.
- Do not operate iron with a damaged cord, or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron; take it to a qualified service person for examination and repair, or call the appropriate toll-free number on the cover of this manual. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down or use the surge of steam—there may be hot water in the reservoir. Avoid rapid movement of iron to minimize hot water spillage.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The iron must be used and rested on a stable surface.

- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- Do not operate the iron if it has been dropped, if there are visible signs of damage to the iron or its cord, or if it is leaking. To avoid the risk of electric shock when the iron is used.

SPECIAL INSTRUCTIONS

- To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.
- If an extension cord is absolutely necessary, a cord rated at 15-ampere should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.