


OVERVIEW

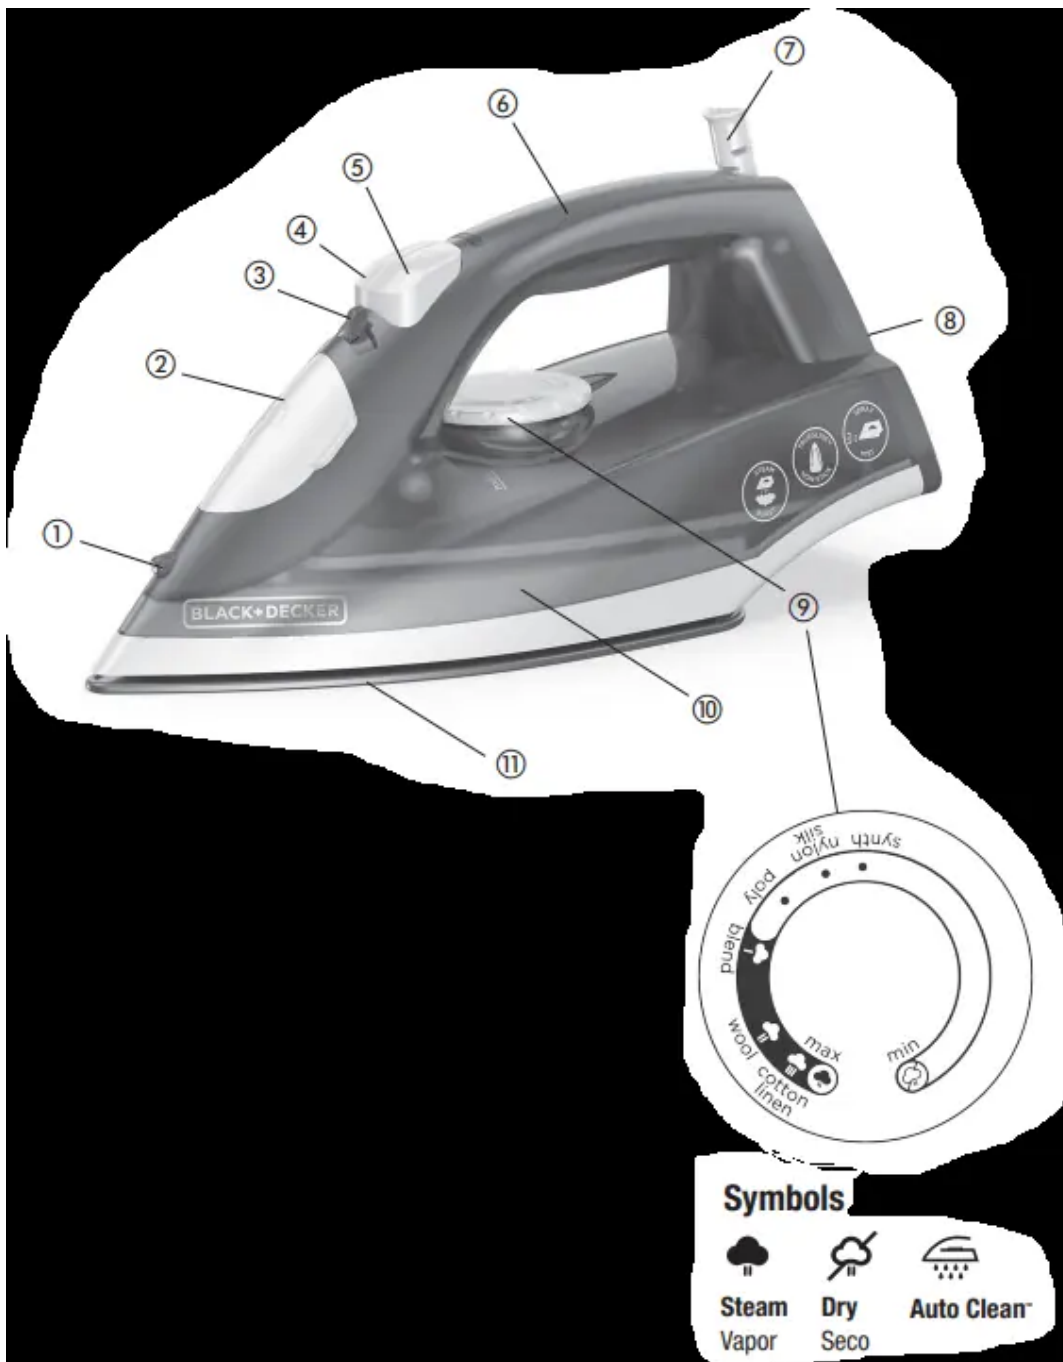

1. Spray nozzle
2. Water-fill opening
3. Steam selector switch/ Auto Clean™
4. Steam surge button
5. Spray mist button
6. Handle

7. Pivoting cord
8. Heel rest
9. Fabric selector dial
10. Water tank
11. TrueGlide™ soleplate

DIAL	SETTINGS GUIDE	
	TEMPERATURE	STEAM
MIN	minimum	no
SYNTH	synthetics	no
NYLON/SILK	nylon and silk	no
POLY	polyester	no
BLEND	blend	yes
WOOL	wool	yes
COTTON/LINEN	cotton and linen	yes
MAX	maximum	yes

HOW TO USE

GETTING STARTED

- Remove any labels, stickers or tags attached to the body or soleplate of the iron, and the plastic band around the power plug.
- Please go to www.prodprotect.com/blackanddecker to register your warranty.

Note: Use ordinary tap water for ironing.

Important: For optimum performance, let the iron stand to preheat for 90 seconds before beginning to iron.

Tip: If unsure of a garment's fiber, test a small area (on an inside seam or hem) before ironing.

FILLING WATER TANK

1. Grasp the water-fill cover and pull it out to expose the water-fill opening. Be careful not to pull too hard as the water-fill cover is attached to the inside of the water-fill opening.

2. Tilt the iron and using a clean measuring cup, pour water into opening until the water reaches the MAX level mark on the water tank. Do not overfill.

- **Important:** Be careful not to overfill the iron. Do not add water beyond the MAX mark on the water tank. This may cause water to spill out of the soleplate.

3. After filling, be sure to push the water-fill cover securely back into the water-fill opening.

4. Plug in the iron.

STEAM IRONING


1. Turn the fabric select dial to appropriate setting for your fabric type. Read garment's label to help you determine fabric type. Be sure there is water in the reservoir.

2. When finished ironing, turn the fabric-select dial to MIN and unplug the iron.

Important: Always stand the iron on its heel rest when powered on but not in use.

SPRAY MIST



Use  to dampen tough wrinkles at any setting.

1. Be sure the iron is filled with water.
2. On first use, pump the spray button a few times.

SURGE OF STEAM

Horizontal Steaming

Tip: Use to remove stubborn creases.

1. With the water tank filled to the MAX mark, set fabric select dial to appropriate setting for your fabric. Read garment's label to help you determine fabric type.
2. Be sure there is water in the tank. Steam is automatically turned off on POLYESTER, SILK/NYLON and SYNTHETIC settings.
3. For best performance, use surge of steam at 5-second intervals.
4. When finished ironing, turn the fabric select dial to MIN and unplug the iron.

Important: Always stand the iron on its heel rest when powered on but not in use.

Vertical Steaming

Tip: Use as a steamer for removing wrinkles from hanging clothes and drapes.


1. Be sure the water tank is filled to the MAX mark.

2. Hang the garment to be steamed on a clothes hanger. (Curtains or drapes can be steamed once they are hung.)
3. Set the fabric select dial to appropriate setting for your fabric type.
4. Hold the iron close to, but not touching, the fabric.
5. Pull the fabric tight in your free hand and press the steam burst button as you move the iron over the fabric.

DRY IRONING

1.



Turn the steam selector switch to dry ().

2. Turn the fabric select dial to appropriate setting for your fabric.
3. When finished ironing, make sure to unplug the iron.

EMPTYING WATER TANK

Important: Always empty the water after each use.

1. Unplug the iron and let it cool.
2. Empty the water tank. Hold the iron over a sink with the tip pointing down. Water will empty out the water-fill opening.

CARE AND CLEANING

This product contains no user serviceable parts. Refer service to qualified service personnel.

CLEANING OUTSIDE SURFACES

1. Make sure iron is unplugged and has cooled completely.
2. Wipe the soleplate and outer surfaces with a soft cloth dampened with water and mild household detergent.
3. Never use abrasives, heavy-duty cleansers, vinegar or scouring pads that may scratch or discolor the iron.
4. After cleaning, steam iron over an old cloth to remove any residue from the steam vents.

AUTO CLEAN™ SYSTEM

Tip: To keep the steam vents free of any buildup, follow these instructions about once a month:

1. Fill the water tank well below the MAX line. Plug in the iron.
2. Turn the fabric select dial to MAX and stand the iron on its heel rest. Allow it to heat.

3. Turn fabric select dial to MIN, unplug the iron and hold over a sink with the soleplate facing down.
4. Press and hold the steam selector switch in the AUTO CLEAN™ position to the far left. Be careful, as hot water and steam will come out of the steam vents. Continue to hold the switch in the AUTO CLEAN™ position until all the water has emptied. If necessary, rock iron side-to-side and front-to-back.
5. When finished, release the switch and water is emptied from the tank. Stand the iron on its heel rest and plug it in. Heat for about 2 minutes to dry out any remaining water.

STORING YOUR IRON

Check that the fabric-select dial is set to MIN.

Unplug the iron and let it cool completely.

Store iron on its heel rest. Storing iron on its soleplate can cause leaks or damage.

NEED HELPS?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

Two-Year Limited Warranty

(Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Spectrum Brands, Inc.'s liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.

- Visit the online service website at www.prodprotect.com/blackanddecker, or call toll-free 1-800-465-6070, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

IMPORTANT SAFETY INSTRUCTIONS

When using your iron, basic safety precautions should always be followed, including the following:

- **READ ALL INSTRUCTIONS BEFORE USING.**
- Use iron only for its intended use.
- To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
- Always turn iron off before plugging or unplugging from the electrical outlet. Never pull on the cord to disconnect the iron from the electrical outlet; instead, grasp the plug and pull on the plug to disconnect the iron.
- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- Always disconnect iron from electrical outlet when filling with water or emptying, and when not in use.
- Do not operate iron with a damaged cord, or if the iron has been dropped, damaged, or is leaking. To avoid the risk of electric shock, do not disassemble the iron; take it to a qualified service person for examination and repair, or call the appropriate toll-free

number on the cover of this manual. Incorrect reassembly can cause a risk of electric shock when the iron is used.

- Close supervision is necessary for any appliance being used by or near children.
- Do not leave iron unattended while connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down or use the surge of steam—there may be hot water in the reservoir. Avoid rapid movement of iron to minimize hot water spillage.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- Do not operate the iron if it has been dropped, if there are visible signs of damage to the iron or its cord, or if it is leaking.
- The iron must not be left unattended while it is connected to the electrical outlet.

SPECIAL INSTRUCTIONS

- To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.
- If an extension cord is absolutely necessary, a cord rated at 15-ampere should be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.