

User manual Washing Machine

CONTROL PANEL

8 Kg. SWT8043, SWT8063E



9 Kg. SWT9043 / 11 Kg. SWT1154DCWA / 12 Kg. SWT1254LCWA



10 Kg. SWT1043



9 Kg. SWT9043A



10 Kg. SWT1023A



PROGRAM SELECTOR KNOB

Turn the Program Selector knob to choose the wash program you want. The table “Your Program Guide” shown on page 16 will help you in selecting the right program.

The Program Selector knob is not a timer. Once you select a wash program, the Program Selector knob will stay at that position for the whole wash cycle.

WATER TEMPERATURES BUTTON

For each wash program your washing machine automatically selects a suitable fill water temperature. If you want to use a different wash water temperature, press the Temperature button repeatedly



The water temp lights will tell you the temperature for each press of the button.

You have four temperatures to choose from Very Hot, Hot, Warm and Cold.

The temperature of warm water will depend on the temperature and pressure of your hot and cold water supplies. The recommended temperature for warm is 35°C.

You can adjust the flow rate of the water supplies to adjust the Warm temperature. All rinse water temperatures are cold.


Always check your label for the washing temperature symbols which the International Care Labelling Code now uses.



NOTE:

If you have a cold water connection ONLY and the hot inlet valve is capped off (refer installation instructions) you must select Cold washes only. To fill detergent, you must follow steps as below:

1. Measure the correct amount of powder detergent by following the recommendations on the package.
2. Mix powder detergent in one litre of hot or warm water.
3. Add the pre-mixed detergent to the wash load.

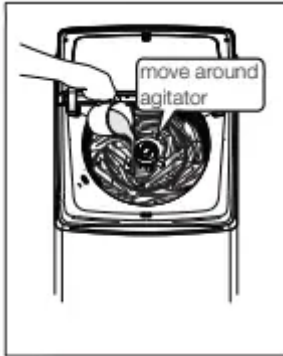

Water Temperatures

Temp.	Descriptions	Hot & Cold water usage proportion	
		Hot valve	Cold valve
Very Hot	for normally soiled white cottons and linen (e.g. teaclothes, towels, tableclothes, sheets...).	100 %	
Hot	for normally soiled, colourfast garments (e.g. shirts, night dresses, pyjamas...) in linen, cotton or synthetic fibres and for lightly soiled white cotton (e.g. underwear).	67 %	33 %
Warm	for delicate items (e.g. net curtains), mixed laundry including synthetic fibres and machine washable, non-shrink.	50 %	50 %
Cold		0 %	100 %


IMPORTANT: Components in the washing machine are designed to be used with water no hotter than 70°C. If your water supply is too hot, you should have a temperature limiting valve fitted by a qualified plumber.

Flood diagnostic is explained on page 32. You should refer to this if you have water pouring onto the floor. The display will show “E30” and you will hear rapid short beep continuously to remind you about this problem.

WATER LEVEL BUTTON

Choose the water level by pressing Water Level button. Use only the amount of water you need for the wash load.

CHOOSE THE WATER LEVEL

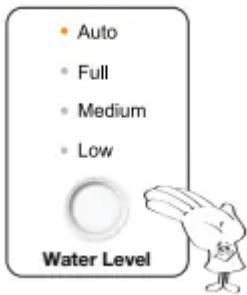


1. Choose the water level by pressing Water Level touchpad. You can select:

- Auto, Full, Medium and Low

(Auto level: the exact water level required to wash your clothes effectively is determined and set for you automatically, ensuring no water is wasted.)

2. Use only the amount of water you need for the wash load.

CHOOSE THE SPIN

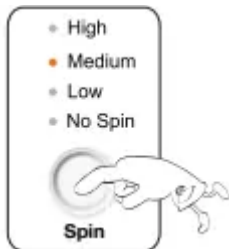


TOUCH THE OPTIONS BUTTON TO SELECT THE SPIN OPTION. Regular, Cold, Bedding, Heavy Duty, Rinse+Spin, Spin, Quick 20, Daily 45, Heavy Duty, Denim(*SWT1023A), Hand Wash, Sportswear (*SWT1023A) : Can select all spin options Delicates : Can select Medium, Low and No Spin.

Note: No spin is effect only to final spin by spin at gentle speed 1 minute only to prevent water drop to floor when moving the clothes out of the drum.

RINSE OPTION BUTTON

Pressing the "Rinse Option" touchpad allows you to change the rinse type. For most washes the machine automatically selects "Deep Rinse" for you.

There are four rinses to choose from... Fast rinse, Eco rinse, Deep rinse and Extra rinse.

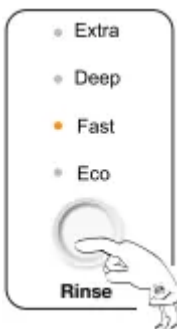

- Extra : Extra rinse, the machine fills twice, giving you two deep rinses.

- Deep : Deep rinse the machine fills once, giving you one deep rinse.
- Eco : Eco rinse is a spray rinse giving you maximum water saving.
- Fast : Fast rinse uses less time then Eco rinse by performing only 3 Eco sprays but the amount of water in each spray is increased.

DISPLAY

The display shows the following information:


MACHINE IN PAUSE MODE



User needs to touch [Start / Pause] button once to pause the appliance.

Under the remaining time is show text < PAUSE> The Start/Pause button LED will blink.

WASH CYCLE IN PROGRESS

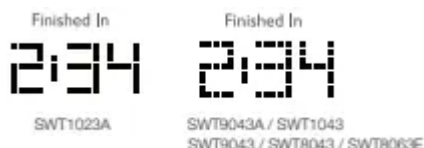

After selecting a program, the duration is displayed in hours and minutes (for example 2:34 which means 2 hour and 34 minutes)

The duration is calculated automatically on the basis of the maximum recommended load for each type of fabric.

After the program has started, the time remaining is updated every minute.

The Start/Pause button LED will always light (not blink) to indicate that now machine is in executing mode.

END OF PROGRAM



When the wash program is completed, the display shows text or <END> .

The Start/Pause button LED will turn Off.




LID LOCK FEATURE



This is a safety feature so as to prevent anyone from opening the door lid when the drum is spinning.

To unlock the lid, user needs to tap [Start / Pause] button once to pause the appliance and the display will turn Off the lid lock icon.

The mechanical lock unlocks when the drum stops spinning.

The Lid Lock indicator  will light up when the feature activate (Except SWT8043, SWT8063E)

ENABLING/DISABLING END OF WASH BEEP

User can also disable the buzzer by pressing the [Water Level] button + [Spin] button down for 3 sec and release.

it will disable power on sound also.

The volume level is set in the factory and cannot be adjusted by the user.

START/PAUSE BUTTON

TO START THE WASH CYCLE / PROGRAM




Press the Start/Pause button to Pause.

Start/Pause to Pause is used to Start, Stop and Continue the wash.

If you have started your wash and you wish to stop it for some reason, press the Start/PauseTo Pause touchpad and hold it for 1.2 seconds to enter pause mode.

FAVOURITE , CHILD LOCK , TIME ADJUST , DELAY END BUTTON


FAVOURITE

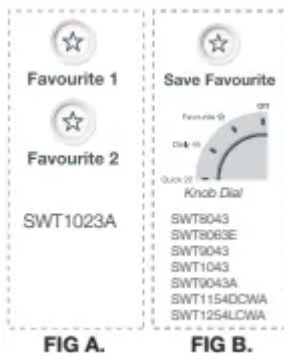


The favourite function is the ability to tailor individual wash features and save them as a custom programme until the next time.

FIG A: Select the Favourite 1 or 2, choose wash method, spin , temperature ,Rinse, then touch and hold the Favourite button for >1.5 seconds .“Beep sound”is activated and the programme is stored for later use with a single button press.

FIG B: Select the Save Favourite, choose wash method, spin , temperature ,Rinse, then touch and hold the Favourite button for >1.5 seconds .“Beep sound”is activated and the programme is stored for later use with select Favourite program on Knob Dial.

The Favourite indicator  will light up when this feature is activated.


CHILD LOCK

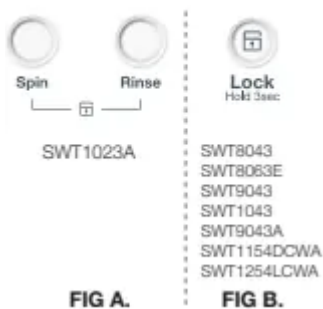

Your appliance is provided with CHILD SAFETY LOCK which permits you to leave the appliance unsupervised with the door closed without having to worry that children might be injured by or cause damage to the appliance.


To Activate the child lock :

FIG A: Hold down the “Spin” and “Rinse” at the same time for 3 seconds.

FIG B: Hold down the “Lock” for 3 seconds. The child lock indicator  will light up when this feature is activated.

To Deactivate the child lock :

FIG A: Hold down the “Spin” and “Rinse” at the same time for 3 seconds.

FIG B: Hold down the “Lock” for 3 seconds, The child lock indicator  will disappear when this feature is deactivated.

When child lock is activated, the door will be locked all the time during the machine is working.

TIME ADJUST

This option allows you to increase/decrease washing time by changing the 3 different levels.

: medium > maximum > minimum



**Time
Adjust**

DELAY END




**Delay
End**


You can set your washing machine to finish your wash at a later time you specify, choosing a delay of between 1 to 19 hours in 1-hour increments. The hour displayed indicates the time when the cycle will finish. After selecting the wash program, tapping on either the [-] or [+] button once will start the delay end and set the 1-19 hours of the end time of the entire wash cycle.

Tapping [+] button increases the end time.

Tapping [-] button decreases the end time.

Press the Start / Pause button

The Delay end indicator  will light up and the clock will begin counting down until it reaches the set time.

NOTE: When indication  appears and blinks after appropriate number of wash cycles are finished, this is to remind user to clean the lint filters. See page 24.

To clear this indication turn the knob to Off position for SWT8043, SWT8063E, SWT9043, SWT1043.



YOUR PROGRAM GUIDE (KNOB DIAL)

Program	Model		Select this program	Recommended				
	SWT1023A	SWT5043A SWT1043 SWT5043 SWT5043 SWT1154DCWA SWT1254LCWA		Water	Temp	Spin	Soak	Rinse
Regular *	<input type="radio"/>	<input type="radio"/>	For normally soiled cotton load at rated load capacity.	Auto	Warm	High	No Soak	Deep/Eco*
Cold	<input type="radio"/>	<input type="radio"/>	For synthetic or mixed fabrics, underwear, coloured garments, non-shirk shirts, blouses.	Auto	Cold	High	No Soak	Deep
Delicates	<input type="radio"/>	<input type="radio"/>	For lingerie, lace, trimmed and embroidered items.	Auto	Cold	Medium	No Soak	Deep
Bedding	<input type="radio"/>	<input type="radio"/>	For bedding fabrics labelled "Machine Washable"	Auto	Hot	High	No Soak	Deep
Heavy Duty *	<input type="radio"/>	<input type="radio"/>	For a heavily soiled cotton wash load.	Auto	Warm	High	No Soak	Deep
Soak & Wash	<input type="radio"/>	<input checked="" type="radio"/>	For normally soiled cotton load.	Auto	Warm	High	No Soak	Deep
Tub Cleaning	<input type="radio"/>	<input checked="" type="radio"/>	Clean the tub.	-	Hot	-	No Soak	-
Rinse+Spin	<input type="radio"/>	<input type="radio"/>	For items that you want to rinse and spin eg. clothes items you have hand washed in a wash tub.	Full	Cold	High	No Soak	Deep
Spin	<input type="radio"/>	<input type="radio"/>	For very wet clothes to remove the water.	-	-	High	No Soak	-
Denim	<input type="radio"/>	<input checked="" type="radio"/>	For a heavily soiled Denim/Jeans wash load.	Auto	Warm	High	No Soak	Deep
Sports Wear	<input type="radio"/>	<input checked="" type="radio"/>	For a Sport ware fabrics labelled "Machine Washable"	Auto	Warm	High	No Soak	Deep
Hand Wash	<input type="radio"/>	<input type="radio"/>	For wool fabric and Hand Wash labelled "Machine Washable"	Auto	Warm	Medium	No Soak	Deep
Quick 20	<input type="radio"/>	<input type="radio"/>	For a very small load of mixed fabrics.	Low	Warm	High	No Soak	Fast
Daily 45	<input type="radio"/>	<input type="radio"/>	For a small load of mixed fabrics.	Auto	Warm	High	No Soak	Deep
Favourite ☆	<input checked="" type="radio"/>	<input type="radio"/>	For using favourite program.	-	-	-	No Soak	-

* "Regular wash, Auto level, Warm, High spin, Eco rinse, Max Time Adjust" is recommended for a full load of normally soiled cottons.

* Heavy Duty has a built-in Soak period of 6 minutes.

WASHING INSTRUCTIONS

These Washing Instructions are of a general nature and you should get good wash results by following them.

However, due to the variables of fabric types, soil levels, detergent types and available program settings you may find some combinations of these which do not always result in the perfect wash.

If for example you see residuals of detergent or soils on some items, please read the section Residues on washed items paragraph.

Over time you will learn what is the best set-up of programs, detergent and load sorting for different load types and soils.

SORT YOUR WASHING INTO SEPARATE WASH LOADS




- Each load of washing should contain clothing which needs the same washing conditions. For example, you should not wash delicate clothes with very dirty work clothes.

- Colour fast and non-colourfast fabrics should be separated. Knowing the type of fabrics you have and how dirty they are will help when you make selections from the wash program options.
- Some fabrics are lint collectors and can pick up lint, dirt and colour from other fabrics which are lint producers. Some examples are listed below:

Lint collectors	Lint producers
- Corduroy	- Towels
- Synthetics	- Nappies
- Permanent press fabrics	- Chenille/ Candlewick

NOTE: Make sure that you wash lint collectors separately from lint producers.

- Never wash whites and coloureds together. Whites may lose their “whiteness” in the wash.
- New coloured items may run in the first wash; they should therefore be washed separately the first time.
- IMPORTANT! Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins).
- Button up pillowcases, close zip fasteners, hooks and poppers.

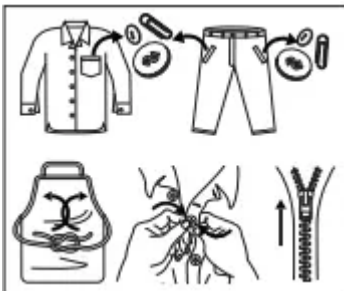

- Tie any belts or long tapes.
- Remove persistent stains before washing.
- Rub particularly soiled areas with a special detergent or detergent paste.
- Treat curtains with special care.
- Wash bras, pantyhose and other delicates in a mesh laundry bag, which you can purchase from your supermarket.




Remove hooks or tie them up in a bag or net.

DAILY USE

STARTING YOUR WASHING MACHINE

1. Connect the mains plug to the mains socket.
2. Turn the water tap on.

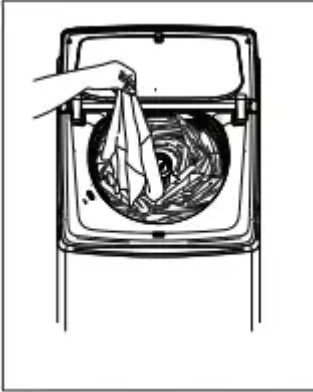

1. Clothes must be loaded evenly around the agitator

For best result load small items first, followed by large items.

For example, a typical load should be loaded using the following sequence : handkerchiefs, wash cloths, undershorts, pillow cases, T-shirts, business shirts, tablecloths, sheets, bath towels.

2. Clothes must not be wrapped around the agitator.
3. The washing machine must not be overloaded. Clothes must be able to move during wash.
4. The load should contain only three or four large items, for example sheets. The rest of the load should be small items. A mixed load of large and small items will wash cleaner than a load of all large items.

ADD THE DETERGENT

When using the washing machine for the first time, check that the dispenser is set for the type of detergent you will use. To do this, proceed as follows:

1. Pull the dispenser drawer forward until it stops.
2. Lift the front of the drawer up and forward to remove it from the runners.




3. Check the position of the flap at the rear of the detergent compartment in the dispenser drawer. (Factory setting is flap up for powder.)
4. Clip the flap down if you intend to use liquid detergent.



5. Refit the dispenser back into its runners. Remember: If you change the type of detergent you use, the position of the flap will need changing. See picture.

6. You are now ready to add detergent. Measure the amount required and pour it into the detergent compartment of the dispenser drawer.

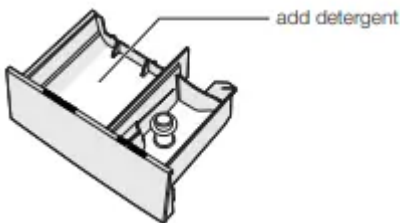

When using liquid detergent, some may leak out of the dispenser into the wash load earlier than expected through small openings in the back of the dispenser.

The openings are to help flushing out of detergent.

7. If you want to use fabric softener, see "Add fabric softener".

8. Close the drawer by pushing it backwards into the top panel of the washing machine when you have finished adding detergent.

ADD FABRIC SOFTENER


Before adding softener to the dispenser, make sure the siphon cap is pushed firmly down onto the spigot in the drawer.

The softener will not siphon out if the cap is incorrectly fitted, is missing or blocked with residue.

You are now ready to add fabric softener.

Measure the correct amount as recommended on the softener package into a cup and then pour it into the softener compartment of the dispenser drawer.


Caution: Do not overfill the fabric softener dispenser.

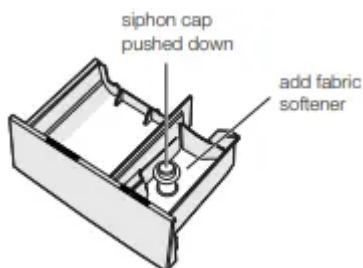

Overfilling and then siphoning out too early can cause softener and detergent to mix resulting in staining problems.

The softener dispenser holds 90ml when filled up to the MAX marker. Any level lower than MAX will function correctly.

Caution: Only use the detergent compartment for detergent and the fabric softener compartment for fabric softener.

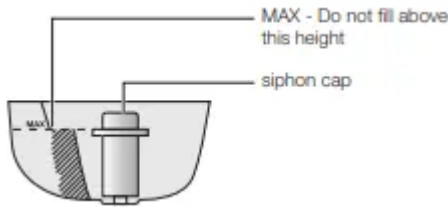

SETTING A PROGRAM



1. Turn the program selector to the required program.

- Your washing machine is now in STAND-BY-MODE and ready to wash your clothes.
- Press the ON/OFF button (SWT1023A)
- The relevant light will light up.
- The buzzer will sound.
- The selector dial can be turned either clockwise or anticlockwise.
- Once you selected a program, the program selected will stay at that position for the whole of the cycle.
- The display shows the program duration.
- If the settings shown on the control panel are what you want to use, press the Start/ Pause button to start your wash.

2. If you want your laundry to be washed with functions different from the one proposed by the machine, press Temperature, Water Level, Spin Time and Rinse Option buttons.

NOTE:

- Different functions can be combined which is dependent on the program selected.
- When these buttons are pressed, the corresponding pilot lights come on.

3. If you want to define the end of the washing program, press the "Delay End" button repeatedly to choose your machine end time.

STARTING A PROGRAM

To start a program, press the Start/Pause button, a default program duration will be displayed on the screen.

NOTE When you select the Drain+Spin program, there will be a delay of at least 2 minutes before the washing machine starts to spin. This delay is a pump out (Drain) period to ensure the bowl is empty of water, which is necessary before spin commences. Even though you may have only put wet clothes into an empty bowl, the delay before spin will still occur to be safe and to protect your washing machine.

INTERRUPTION OF A PROGRAM

If you have started your wash and you wish to stop it for some reason, press the Start/Pause button to enter PAUSE mode. The time remaining is shown then “ PAUSE ”.

Press the Start/Pause again. The program will continue.

CHANGING A PROGRAM

You can turn the Program Selector Knob to a new program position at any time. If you do move the Program Selector Knob the effect will be different depending on the status of the machine at the time you do this, as follows:

- When the machine is in PAUSE mode, moving the Knob to a new position 3 short beeps to remind you that cannot change the program in pause mode.
- When the machine is running, moving the Knob to a new position will result in the machine continuing the wash and 3 beeps to remind you that this option is not allowed.

CHANGING THE OPTIONS

It is possible to change only before start the program.

AT THE END OF THE AUTO OFF PROGRAM

The appliance stops automatically.

The display will show

- SWT1023A : “ FINISHED ”
- SWT1043 / SWT9043 / SWT8043 / SWT8063E / SWT9043A SWT1154DCWA / SWT1254LCWA : “ END ”

and with End sound every 15 second in 2 minutes.

- Turn the Program Selector knob to the position “ Off ” or Press the ON/OFF button (SWT1023A)
- Remove the laundry from the appliance. Make sure that the washing tub is empty.
- Keep the lid ajar, to prevent the mildew and odours.
- Turn off the water tap.

AUTO OFF

After 5 min without any user interaction with the appliance, during the machine is in stand by or after the end of the cycle, the appliance receives no further instructions, it will automatically turned Off.

(for energy savings in conformity with the standards on energy consumption).

All the settings are stored so that when the appliance is turned back on, the program is ready or if the auto-off mode was triggered after the end of the cycle, the user can see that the cycle ended normally, and can restart it.

CARING FOR YOUR WASHING MACHINE

Your washing machine will give you long and trouble-free service, if you follow the instructions in this section. These instructions show you how to care for your washing machine.

WHAT TO DO AFTER YOU HAVE FINISHED YOUR WASHING

1. Turn the Program Selector knob to the position "Off".
2. Switch off the electricity at the power point.
3. Turn off the water taps. This will extend the life of the inlet hoses.
4. Leave lid open for a while. This allows time for moisture inside the washing machine to evaporate and for any odours to disperse.

CLEANING THE LINT FILTER

Lint is a collection of threads and fluff which comes off your clothes during washing. Your washing machine collects this lint in the lint filter. It is important to clean out this lint filter preferably after each wash.


How to clean the lint filter:

(SWT8043, SWT8063E, SWT9043, SWT1043 ,SWT1154LCWA)

1. Remove the Cap Agitator and filter column from the centre of the agitator.



2. Unclip the filter bag from the column.

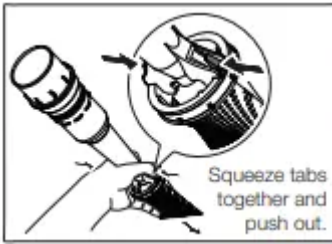


3. Turn the bag inside out and remove the lint.



4. Wash the filter bag and dispenser cup in hot water.

5. Reassemble the filter to the column and place it back in the centre of the agitator.

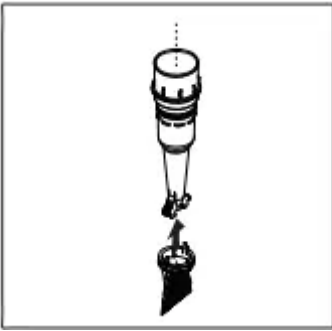


CLEANING THE DISPENSER

The dispenser needs to be cleaned regularly, preferably after each wash. Inspect the dispenser after each wash to see if there is any residue of detergent.

To do this proceed as follows:

- Pull the dispenser drawer forward until it stops.
- Lift the front of the drawer up and forward to remove it from the runners.
- Clean the dispenser drawer with hot water and a brush, eg. an old toothbrush.
- Dry the drawer.
- Before replacing the dispenser back in its recess, clean the inside of the drawer with an old toothbrush.
- Put the dispenser back into its runners and close the drawer.

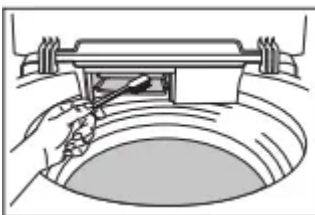

CLEANING YOUR WASHING MACHINE

To clean the inside and outside of your washing machine you should:

1. Wipe the surface with a mild dishwashing detergent and warm water.
2. Wipe dry with a soft cloth.

IMPORTANT: Never use solvents, aerosol cleaners, spray pack cleaners, glass, cleaners, metal polishes, caustic materials, scourers or general household cleaners on or near top panel and lid, control panel or other parts of your washing machine.



CLEANING STAINS IN THE WASHBOWL

Stains in the wash bowl can be caused by:

- metal objects such as bobby pins, dressmaking pins and nails;
- salt;
- body oils and grease from very dirty or sweaty clothes being deposited around the top of the washbowl;
- excessive foam during wash if incorrect or too much detergent is used.

IMPORTANT:

- Check all pockets before loading clothes into your washing machine.
- Don't leave wet clothing (especially swimwear) in the bowl for too long before you wash it.

How To Clean the Stainless Steel Wash Bowl :

1. Wipe with a cleaning product which is marked suitable for stainless steel.
2. Oily deposits can be removed by wiping surfaces with a mild dishwashing detergent and warm water.

IMPORTANT: Never use bleach cleaners or steel wool to clean the stainless steel washbowl.

AVOIDING BUILD UP OF UNDISSOLVED DETERGENTS

If you only wash with cold water, undissolved detergent and body oils will build up in the washing machine. This build-up can cause spotting on your clothes.

To avoid this build-up :

- do not use too much fabric softener with cold water;
- select a hot water wash at least once a month;
- always dissolve the detergent in one litre of warm water.

TROUBLE SHOOTING

DO NOT call for service until you have checked the points listed below.

If you call for service and there is nothing wrong with your washing machine, you will have to pay for the service call.

You will have to pay even when your washing machine is under warranty. Before you call for service, check the points in the table below.

Machine not working.

Power not switched on.

No electricity supply through the power point.

Machine not switched on.

Switch on power point.

Check power point with another appliance.

Press power switch on at the back of a washing machine.

- E10

Water taps not turned on.

Turn on taps.

- EFO

Out of balance switch off

Open lid, redistribute load and close lid.

- Ld

Lid not fully closed.

Close lid.

Machine has washed load but will not spin. Water in washbowl.

- EFO

Out of balance.

Wait a short while, the wash will continue.

Too much suds causing motor temperature overload.

In future, reduce detergent dose or use low sudsing (front load) detergent.

- Ld

Lid not fully closed.

Close lid.

- E20

Drain hose blocked

Check drain hose for blockage.

Will not fill with water.

- E10

Water taps not turned on Inlet hoses blocked.

Turn taps on. Clean tap filters/washers.

Water flowing into washbowl indefinitely.

- E10

Drain hose too low.

Raise drain hose or fit a syphon break.

Refer to installation instructions for correct positioning of hose.

Machine goes out of balance or vibrates excessively when spinning.

- EFO

Machine not level.

Make the machine level.

Levelling feet not adjusted.

Adjust feet to touch the floor.

Clothes not evenly distributed.

Redistribute clothes evenly

Too much water for load size.

Water on floor.

Loose inlet hose connections.

Incorrect water level for size of load.

Condensation from hot water.

Check connections at taps and rear of machine.

Use low water level.

Clothes still dirty after wash program.

Not enough or no detergent.

Check detergent use and rewash clothes.

Too many clothes in load.

Remove some clothes and rewash.

Incorrect wash program or temperature selected.

Reselect program or temperature and rewash.

Incorrect water level selected.

Use a higher water level.

Scraping noise on spin.

Bra wire or other thin items caught between inner and outer washbowls.

If the item is visible, remove it with pliers.

Use a wash bag in future.

Humming, clicking and other noises.

Bowl rotation at start of wash.

Normal noise.

Brake activation when stopping after spin.

Normal noise.

Detergent residue.

Overloaded laundry.

Put appropriate load in washer.

Cold water temperature less than 20°C.

Correct supply water temperature.

Detergent overdosage.

Check detergent use and rewash clothes.

Bad smell or mold on clothes.

Lint filter not cleaned.

Clean lint filter

Machine not working.

- EHO

Power supply not stable.

Wait until the power supply is stable.

OTHER DIAGNOSTIC HELP AND A GUIDE FOR WHEN YOU SHOULD CALL FOR SERVICE

If you are having a problem with your washing machine, make sure you have followed ALL of the instructions on page 31 in the “What to do” column before calling for service.

Not filling with water.

- E10

Make sure both wall taps are on and hose filters are not blocked.

Raise drain hose if water is flowing out of drain hose.

Press Start/Pause to continue the wash.

If problem remains, call Service.

Flood.

- E30

If the water is pouring onto the floor, turn OFF both wall taps.

Wait a few minutes to see if the fault is corrected. If not, call Service.

Draining problem

- E20

Wait a few minutes to see if the fault is corrected. If not, press the Start/Pause touchpad and hold it for 1.2 second to enter pause mode then check the drain hose for blockage.

Press Start/Pause to continue the wash.

If problem remains, call Service.

Loss of water, while washing.

- E10

If water level in wash bowl is low and water is flooding the floor, turn Program Selector Knob to Spin position, then press Start/Pause To Pause.

Should this make things worse, press the power button off (some models) and call Service.

Press Start/Pause to continue the wash.

Water level problem.

- E30

Wait, this fault may clear itself.

If not, turn Program Selector Knob to Spin position, then press Start/Pause to drain the wash bowl.

If this problem is repeated, call Service.

Motor fault.

- E50

Wait, this fault may clear itself.

If not, turn Program Selector Knob to Spin position to drain the wash bowl.

If this problem is repeated, call Service.

Lid can't lock / can't unlock

- E40

If this problem is repeated, call Service.

Power supply not stable.

- E40

Wait until the power supply is stable.

Communication loss.

- E91

turn the machine off and on again

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

