


Getting to know your appliance

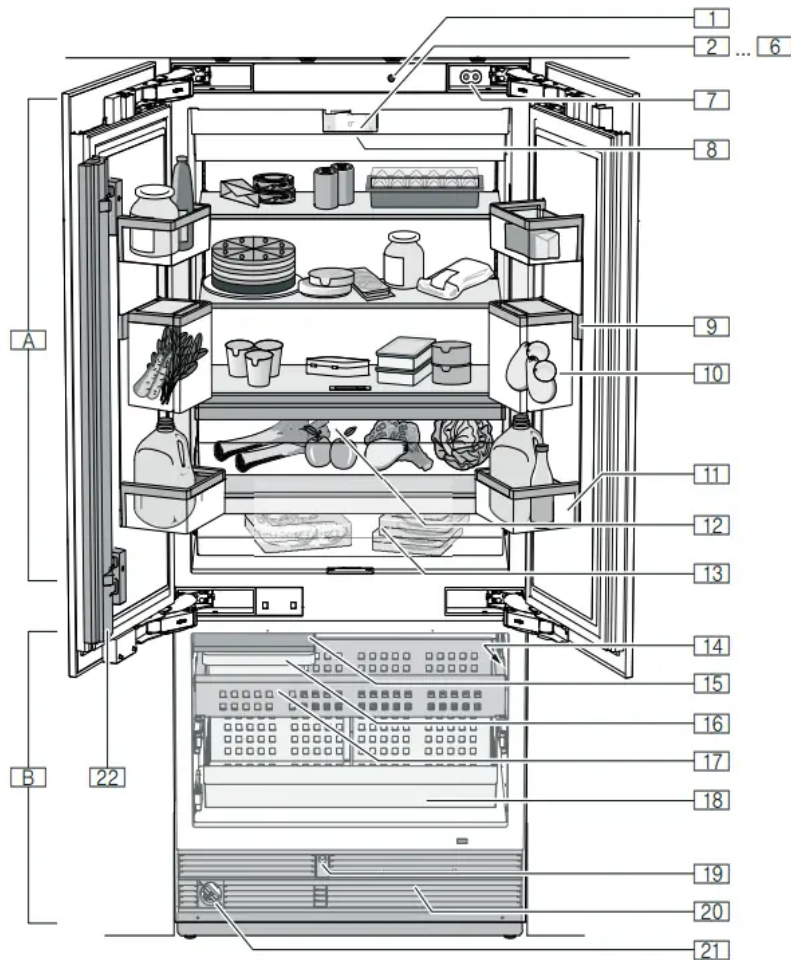

A. Refrigerator compartment

B. Freezer compartment

1. Automatic door opening

2...6. Operating controls

7. Door damper

8. Main On/Off switch

9. Rail for suspending the Produce Bin

10. Produce Bin

11. Storage compartment for large bottles

12. Vegetable container with humidity controller

13. Chill compartment

14. Rating plate
15. Ice maker
16. Ice cube bin
17. Frozen food container
18. Frozen food bin (large)
19. Automatic door opening freezer compartment
20. Ventilation opening
21. Water filter
22. Door pillar with condensation protection

Operating the appliance

Switching the appliance on

1. Press the main On/Off switch. The appliance starts cooling and the light is switched on when the door is open.
2. Set the required temperature. → "Setting the temperature" on page 15

Operating tips

- When the appliance has been switched on, it may take several hours until the set temperatures have been reached. Do not put in any food until the selected temperature has been reached.
- The fully automatic NoFrost system ensures that the freezer compartment remains frost-free. Defrosting is not required.
- The front sides of the housing are partly heated slightly. This prevents condensation in the area of the door seal.
- If the freezer compartment door cannot be immediately re-opened after it has been closed, wait until the resulting low pressure has equalized.

Switching off and disconnecting the appliance

Switching off the appliance

- Press the main On/Off switch. The appliance is no longer cooling.



 





Disconnecting the appliance

If you do not use the appliance for a prolonged period:

1. Turn off the water supply to the appliance and wait 3 hours.
2. Remove groceries.

3. Press the main On/Off switch.
4. Pull out the mains plug or switch off the fuse. The appliance is no longer cooling.
5. Empty the ice cube container and clean the appliance. → "Cleaning" on page 23
6. Leave appliance open.

Setting the language










1. Press  button to open the Settings menu.
2. Use  button to move to the menu item Appliance settings.
3. Press  button.
4. Press  button to move to the menu item Language.
5. Press  button.
6. Use   buttons to move to the required language.
7. Press  button. The display restarts, and the start screen is displayed.

Setting the temperature unit

You can choose between the unit °C and °F.

1 ° means 1 °F

1 °C means 1 °C

1. Press  button to open the Settings menu.
2. Use  button to move to the menu item Appliance settings.
3. Press  button.
4. Use  button to move to the menu item Temperature unit.
5. Press  button.
6. Use   buttons to move to the required unit.
7. Press  button. The unit will be changed.
8. Press  button to exit the menu.

 


Setting the temperature

Recommended temperature

Cooling compartment: +39 °F (+4 °C)

Freezer compartment: 0 °F (-18 °C)

Setting the refrigerator and freezer compartment temperature

1. To open the menu for setting the temperature, press  button.
2. Use  button to select the required compartment.
3. Repeatedly press -/+ button until the display indicates the required temperature.
4. Confirm the selection by pressing  button. If the button is not pressed, the appliance stores the setting and automatically returns to the main screen after a few seconds.

Super cooling

Super cooling cools the refrigerator compartment as cold as possible.




Switch on super cooling, e.g.:

- Before placing large quantities of food into the compartment
- For cooling drinks quickly




Note: When super cooling is switched on, increased operating noises may occur.

After approx. 6 hours, the appliance switches to normal operation.


Switch on super cooling:






 

1. To open the menu for setting the temperature, press  button.
2. Press  button. When super cooling is switched on, the symbol / appears on the display.
3. Confirm the selection by pressing  button. If the button is not pressed, the appliance stores the setting and automatically returns to the main screen after a few seconds.

Switch off super cooling:

1. To open the menu for setting the temperature, press  button.
2. Press  button. When super cooling is switched off, the symbol / disappears from the display.
3. Confirm the selection by pressing  button. If the button is not pressed, the appliance stores the setting and automatically returns to the main screen after a few seconds.










Setting the brightness of the control panel

1. Press  button to open the Settings menu.

2. Use  button to move to the menu item Appliance settings
3. Press  button.
4. Press  button to open the menu item Brightness.
5. Press   buttons to set the required brightness.
6. Press  button. The setting is saved.
7. Press  button to exit the menu.









Switching key press sound on or off

You can switch the sounds generated when pressing keys off and back on again.

1. Press  button to open the Settings menu.
2. Use  button to move to the menu item Appliance settings.
3. Press  button to open the menu item.
4. Press  button to move to the menu item Key press sound.
5. Press  button to open the menu item.
6. Use   buttons to select the required setting.
7. Press  button. The setting is saved.
8. Press  button to exit the menu.

Setting the key volume









 
You can adjust the volume level of the sounds generated when pressing keys.

1. Press  button to open the Settings menu.
2. Use  button to move to the menu item Appliance settings.
3. Press  button to open the menu item.
4. Use  button to move to the menu item Key volume.
5. Press  button to open the menu item.
6. Use   buttons to select the required setting.
7. Press  button. The setting is saved.

8. Press  button to exit the menu.






Setting the signal tone volume

You can adjust the volume level of the signal tones generated e.g. with alarms.

1. Press  button to open the Settings menu.
2. Use  button to move to the menu item Appliance settings.
3. Press  button to open the menu item.
4. Use  button to move to the menu item Signal tone volume.
5. Press  button to open the menu item.
6. Use   buttons to select the required setting.
7. Press  button. The setting is saved.
8. Press  button to exit the menu.

Automatic clean lock

You can use this function to select whether the automatic clean lock is switched on automatically when the door is opened.

1. Press  button to open the Settings menu.
2. Use  button to move to the menu item Appliance settings.
3. Press  button.
4. Press  button to move to the menu item Automatic clean lock.
5. To change the setting, press  button.

Cleaning

Cleaning the display

The change in temperature and humidity can cause the controls to steam up.

Switch the clean lock on before cleaning. → "Clean lock" on page 16

Use a clean micro-fiber cloth for cleaning.

Cleaning the appliance interior

Proceed as follows:

1. Press the main On/Off switch.
2. Take out food and store in a cool location. Place ice pack (if available) on the food.
3. Clean the appliance with a soft cloth, lukewarm water and a little pH-neutral washing-up liquid.
4. Wipe door seal with clear water and dry thoroughly with a cloth.
5. Switch appliance back on and put in food.

Cleaning the equipment

To clean, take the removable parts out of the appliance. → "Equipment" on page 12

Care instructions for stainless steel surfaces

When taking care of and cleaning stainless steel surfaces, use only cleaning agents suitable for stainless steel and a stainless steel cleaning cloth.

You can purchase a suitable stainless steel cleaning cloth from customer service.

To prevent visible scratches, clean the stainless steel surface in the direction of the structure.

Faults – what to do?

Before you call customer service, use this table to check whether you can rectify the fault yourself.

Appliance

Temperature differs greatly from the set value.	
	Switch off appliance for 5 minutes. → "Switching off and disconnecting the appliance" on page 15 If the temperature is too warm, check temperature again after a couple of hours. If the temperature is too cold, check temperature again on the following day.
Displays do not light up.	
The power plug has not been inserted properly.	Connect the power plug.
The fuse has tripped.	Check the fuses.
The power has failed.	Check whether the power is on.

The refrigeration unit is switching on more frequently and for longer.	
The appliance was opened frequently.	Do not open the appliance unnecessarily.
The ventilation openings are covered up.	Remove obstacles.
Large quantities of fresh food have been put in.	Switch on super cooling promptly in advance.

Appliance is not cooling, display and lighting are lit.	
Demo mode is switched on.	Switch demo mode off. → "Switching demo mode on or off" on page 19

The door does not open when pressed.	
A special mode has switched off automatic door opening.	To open the door, reach from below underneath the bottom panel of the unit or switch off special mode. → "Switching Sabbath mode on or off" on page 20
Pull-to-open is switched on.	Switch the appliance to Push-to-open. → "Automatic door opening" on page 18
The opening force is set too high.	Select a lower setting for the opening force. → "Automatic door opening" on page 18
The fuse has tripped.	Check the fuses.
The power has failed.	Check whether the power is on.

Ice maker

The ice maker is not functioning.	
Ice cube production is switched off.	Switch on ice cube production.
Freezer compartment is too warm.	Set the temperature lower. → "Operating the appliance" on page 15
Ice cube container is not properly inserted.	Insert ice cube container fully.
Ice maker without power.	Call customer service. → "Customer service" on page 27
No water supply.	Check water connection and contact technician if necessary.
Low water pressure.	Only connect appliance to pipes with sufficient water pressure.
Kink in water hose.	Turn off water supply, straighten out kink. Replace water hose, if necessary.

Too few or deformed ice cubes, water pressure lower than usual.	
After switching on or removing many ice cubes, there will be too few in the ice cube container.	It takes around 24 hours for an empty ice cube container to fill up.
Ice cube production stops even though the ice cube container is still not full.	Do not store the ice shovel on the ice in the ice cube container. Otherwise, the sensor will not detect the actual fill level of the container.
Low water pressure.	Only connect appliance to pipes with sufficient water pressure.
The water filter is blocked or needs to be replaced.	Replace water filter.
Freezer compartment is too warm.	Set the temperature lower. → "Operating the appliance" on page 15

Water is leaking out of the appliance.	
Water connection is not tight.	<p>Check if the connections are fastened firmly and the water hose is undamaged.</p> <p>If the water hose is damaged, contact customer service and have it replaced. Replacement must be performed by customer service or a similarly qualified person only. Use original parts supplied by the manufacturer only.</p>

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.