


## USING THE OVEN

### Single Wall Oven Controls

Control button shapes are representative; your oven may have alternate button shapes.

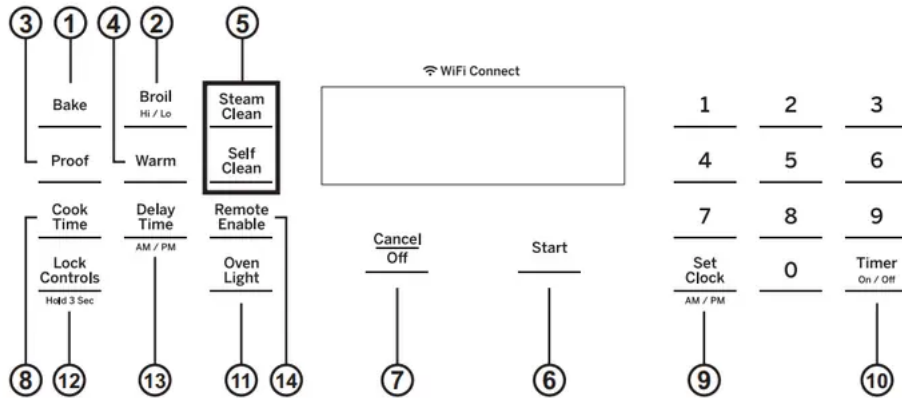


1. Bake: Touch this pad to select the bake function. See the Cooking Modes section for more information.
2. Broil: Touch this pad to select the broil function. See the Cooking Modes section for more information.
3. Proof: Helps yeast bread rise. See the Cooking Modes section for more information.
4. Warm: Keeps hot food warm. See the cooking Modes section for more information.
5. Clean: Your oven has two cleaning modes: Self Clean and Steam Clean. See the Cleaning the Oven section for important information about using these modes.
6. Start: Must be pressed to start any cooking, cleaning, or timed function.
7. Cancel/Off: Cancels ALL oven operations except the clock and timer.
8. Cook Time: Counts down cooking time and turns of the oven when the cooking time is complete. Initiate either a bake or warm mode, but don't press Start. Press the Cook Time pad, use the number pads to program a cooking time in hours and minutes, then press Start.
9. Set Clock: Sets the oven clock time. Press the Set Clock pad and the number pads to program the clock. Press Set Clock to toggle between AM and PM. Press Start to save the time.
10. Timer: Works as a countdown timer. Press the Timer pad and the number pads to program the time in hours and minutes. Press the Start pad. The control will beep with 1 minute remaining and the display will show seconds until the timer counts down to :00. The oven will continue to operate when the timer countdown is complete. To turn the timer off press the Timer pad.

11. Oven Light(s): Turns the oven light (s) on or off. Note that opening a door only turns on the light in that oven.


12. Lock Controls: Locks out the control so that pressing the pads does not activate the controls. Press and hold the Lock Controls pad for three seconds to lock or unlock the control. Locking the controls will cancel active functions other than the timer.

13. Delay Time: Delays when the oven will turn on. Use this to set a time when you want the oven to start. Initiate either a bake or self clean mode, but don't press Start. Press the Delay Time pad and use the number pads to program the time of day for the oven to turn on, use Delay Time to toggle between AM and PM, then press Start. With bake, a cook time may also be programmed if desired. Follow the directions under Cook Time for setting this feature. This can only be used with Bake and Self - Clean. NOTE: When using the delay time feature, foods that spoil easily - such as milk, egg, fish, stuffings, poultry and pork - should not be allowed to sit for more than 1 hour before or after cooking. Room temperature promotes the growth of heat from the bulb will speed harmful bacteria growth.

14. Remote Enable:

- CONNECTING YOUR OVEN 
  - Off - Oven is not connected. Open the app then press and hold Remote Enable pad for 5 seconds to begin the connecting process.
  - Slow flash - Oven is in discovery mode and looking for a network.
  - Rapid flash - An error occurred during the connecting process.
  - Solid - Oven is connected to the network and can be remotely controlled by a connected mobile device when in operation, but it cannot be started remotely.
- REMOTE STARTING YOUR OVEN REMOTE
  - To be able to start the oven remotely, press the Remote Enable pad and the REMOTE icon will turn on in the display. The oven can now be remotely started with a connected device. The REMOTE icon must be lit to start the oven remotely. The REMOTE icon is not required to change the oven settings or to turn the oven off. After using the oven, remember to verify that the REMOTE icon is lit if you wish to start the oven remotely in the future. To disconnect your phone from Remote Enable, press the Remote Enable pad and the Remote icon will turn off.

## Double Wall Oven Controls

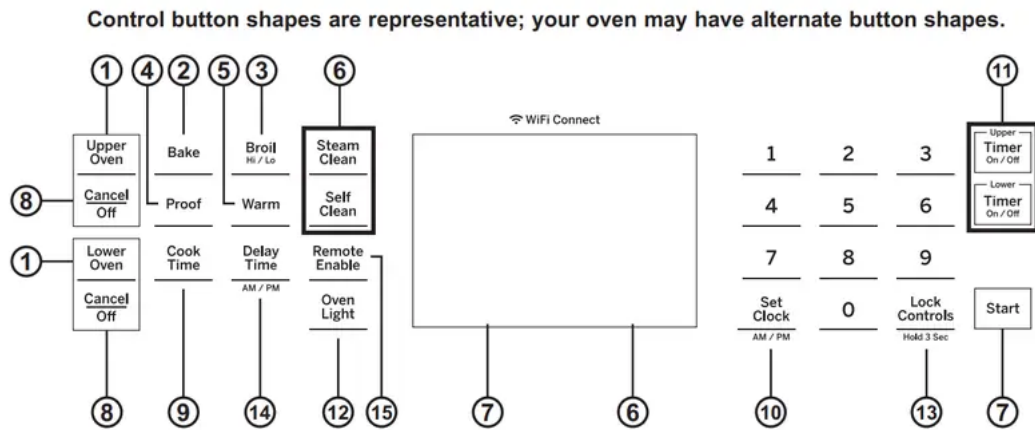

1. Upper Oven and Lower Oven: Designates which oven the controls will operate.
2. Bake: Touch this pad to select the bake function. See the Cooking Modes section for more information.
3. Broil: Touch this pad to select the broil function. See the Cooking Modes section for more information.
4. Proof: Helps yeast bread rise. See the Cooking Modes section for more information. Note that proof cannot be run when running a clean mode in the lower oven.
5. Warm: Keeps hot food warm. See the Cooking Modes section for more information.
6. Clean: Your oven has two cleaning modes: Self Clean and Steam Clean. See the Cleaning the Oven section for important information about using these modes. Note that proof cannot be run when running a clean mode in the lower oven.
7. Start: Must be pressed to start any cooking, cleaning, or timed function.
8. Cancel/Off: Cancels ALL oven operations except the clock and timer.
9. Cook Time: Counts down cooking time and turns off the oven when the cooking time is complete. Initiate either a bake or warm mode, but don't press Start. Press the Cook Time pad, use the number pads to program a cooking time in hours and minutes, then press Start.
10. Set Clock: Sets the oven clock time. Press the Set Clock pad and the number pads to program the clock. Press Set Clock to toggle between AM and PM. Press Start to save the time.
11. Timer: Works as a countdown timer. Press the Timer pad and the number pads to program the time in hours and minutes. Press the Start pad. The control will beep with 1 minute remaining and the display will show seconds until the timer counts down to :00. The oven will continue to operate when the timer countdown is complete. To turn the timer off press the Timer pad.

12. Oven Light(s): Turns the oven light(s) on or off in both Ovens. Note that opening a door only turns on the light in that oven. that oven.

13. Lock Controls: Locks out the control so that pressing the pads does not activate the controls. Press and hold the Lock Controls pad for three seconds to lock or unlock the control. Locking the controls will cancel active functions other than the timer.

14. Delay Time: Delays when the oven will turn on. Use this to set a time when you want the oven to start. Initiate either a bake or self clean mode, but don't press Start. Press the Delay Time pad and use the number pads to program the time of day for the oven to turn on, use Delay Time to toggle between AM and PM, then press Start. With bake, a cook time may also be programmed if desired. Follow the directions under Cook Time for setting this feature. This can only be used with Bake and Self - Clean. NOTE: When using the delay time feature, foods that spoil easily - such as milk, egg, fish, stuffings, poultry and pork - should not be allowed to sit for more than 1 hour before or after cooking. Room temperature promotes the growth of heat from the bulb will speed harmful bacteria growth.

15. Remote Enable:

- CONNECTING YOUR OVEN

- Off - Oven is not connected. Open the app then press and hold Remote Enable pad for 5 seconds to begin the connecting process.
- Slow flash - Oven is in discovery mode and looking for a network.
- Rapid flash - An error occurred during the connecting process.
- Solid - Oven is connected to the network and can be remotely controlled by a connected mobile device when in operation, but it cannot be started remotely.


- REMOTE STARTING YOUR OVEN REMOTE: To be able to start the oven remotely, press the Remote Enable pad and the REMOTE icon will turn on in the display. The oven can now be remotely started with a connected device. The REMOTE icon must be lit to start the oven remotely. The REMOTE icon is not required to change the oven settings or to turn the oven off. To disconnect your phone from Remote Enable, press the Remote Enable pad and the REMOTE icon will turn off. After using the oven, remember to verify that the REMOTE icon is lit if you wish to start the oven remotely in the future.

## Special Features

- There are several different special features on your wall oven. To change the settings of these special features, press the Bake and Broil pads at the same time and hold for

three seconds. "OFFSET" ("OFFSETUP" on double ovens) will appear in the display. For each of the features below, select and edit the feature you

want to change by using the 8 and 2 pads to scroll up and down, the 6 pad to edit (or Save and exit), and the 4 pad to return to the prior menu without saving.

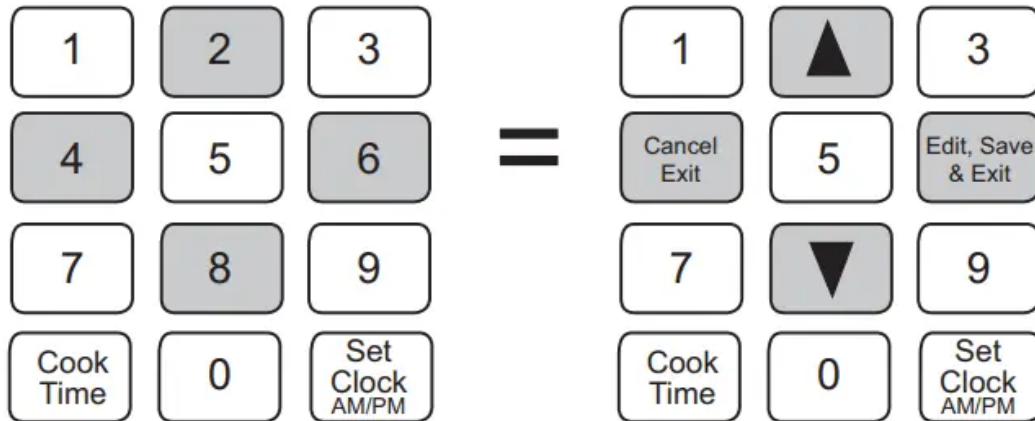
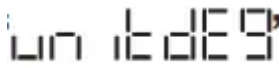




- Adjust the Oven Temperature (**offset**): This feature allows the oven baking temperature to be adjusted up to 35°F hotter or down to 35°F cooler. Use this feature if you believe your oven temperature is too hot or too cold and wish to change it. For double oven models, the upper and lower ovens are adjusted separately. Do not use thermometers, such as those found in grocery stores, to check the temperature setting of


 

your oven. These thermometers may vary 20–40 degrees. Navigate to **offset** " for single ovens, "**offsetUP**" for the upper oven or "**offsetLO**" for the lower oven. Press 6 to edit the offset. "0" or a number between + and - 35 will be displayed. Press 2 to increase, 8 to decrease. -35 to +35 is the available offset range. Press 6 to save and exit. Press 4 to exit without saving.


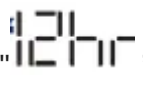
- Sound Volume (**Sound**): This feature allows the oven tone volume to be adjusted. Navigate to "**Sound**" and press 6 to view or change the current setting. Scrolling through allows you to hear each volume level.

- End of Timer Signals (**Endtone**): This is the tone that signals the end of a timer. The tone can be continuous "**contbEEP**" or one repeating beep "**bEEP**". A continuous setting will continue to sound a tone until a button on the control is pressed. Navigate to "**Endtone**" and press 6 to view or change the current setting.


- Fahrenheit or Celsius Temperature Display (): The oven control is set to use Fahrenheit temperatures (F), but you can change it to use Celsius temperatures. Navigate to  and press 6 to view or change the current setting.

- Clock Display (): This feature turns the clock on or off in the display. Navigate to  and press 6 to view or change the current setting.

- Clock Configuration (): This feature specifies how the time of day will be displayed or if no time of day will be displayed. You can select a standard 12-hour clock () or 24-hour military time display (). Navigate to " " and press 6 to view or change the current setting.

- 12-Hour Shutoff (): When this feature is turned on, the oven will automatically turn off after 12 continuous hours of use. Navigate to  and press 6 to view or change the current setting.

- Sabbath**

- Sabbath mode disables the oven lights (the oven light will not turn on when the door is opened), all sounds (the control will not beep when a button is pressed), Broil, Warm, Proof, Cook Time, Timer, Clock, and Delay Time functions. Sabbath mode can only be used with Bake. This feature conforms to the Star - K Jewish Sabbath requirements.
- Press and hold the Bake and Broil pads for 3 seconds to enter special features. Press the 8 and 2 pads to scroll up and down until  appears in the display. Use the 6 pad to view and edit the current setting, 2 and 8 to change the setting, and 6 again to Save, 4 to exit the Special Features and Start Sabbath mode. (Alternately, use the 4 pad to return to the prior menu




from the Sabbath menu without saving). A ] will appear in the display and the clock will not display.

- Note that if you have a double wall oven, when you place the control into Sabbath mode, both ovens are now in Sabbath mode and available for cooking.
- Once in Sabbath mode, at any time you can press Bake, use the number pads to enter a temperature between 170F and 550F, and press Start. No Sound will be given when the keys are pressed. At a random time between 30 seconds and 1 minute, ][, will appear in the display indicating the oven is running.
- Note that both ovens of a double wall oven can be used in Sabbath mode. Each oven can be programmed to a different temperature and each oven must be programmed separately by selecting the oven before starting the bake mode.
- If you need to adjust the temperature, press Bake, use the number pads to enter a new temperature between 170F and 550F, and press Start.
- To turn the oven off, press Cancel/Off at any time. The oven will immediately turn off and ][ will change to ] indicating that the oven has turned off.
- Note that each oven of a double wall oven must be turned off separately.
- To exit Sabbath mode, make sure that the oven is turned off. Press and hold the Bake and Broil pads for 3 seconds to enter special features then press 2 or

8 to scroll to “SABBAATH”, 6 to edit, 2 or 8 to change setting to Off, 6 to save settings, 4 to exit from Special Features menus. The clock will return to the display when Sabbath mode is off.

- NOTE: If power outage occurs during Sabbath mode the unit will remain in Sabbath mode but off when power is restored.
- If you wish to use the Cook Time feature to bake in the oven and then have the oven automatically turn off, you will need to press the Cook Time button, enter a cooking time duration, and press Start. Then enter special features to start Sabbath mode as detailed above.

## Oven Racks

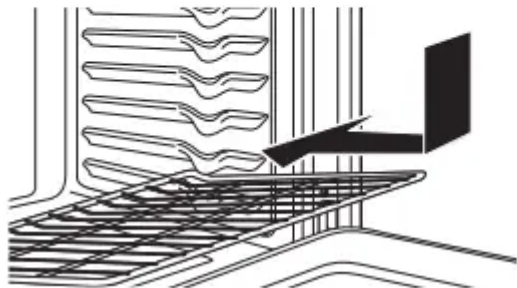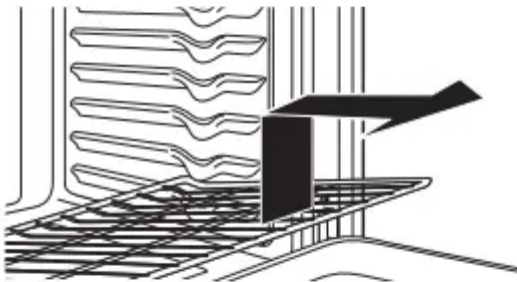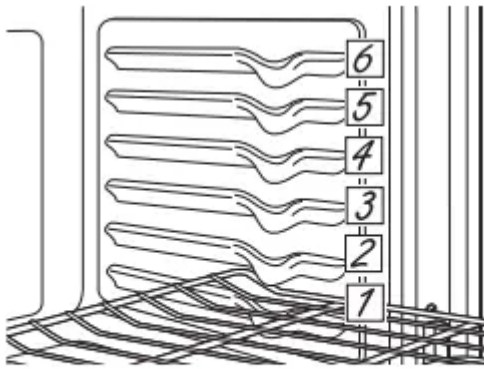

- Your oven has six rack positions. Recommended rack positions for various types of foods are provided in the Cooking Guide. Adjusting rack position is one way to impact cooking results. For example, if you would prefer darker tops on cakes, muffins, or cookies, try moving food one rack position higher. If you find foods are too brown on top try moving them down next time.
- When baking with multiple pans and on multiple racks, ensure there is at least 1½” between pans to allow sufficient space for air to flow.
- To avoid possible burns, place the racks in the desired position before you turn the oven on.

## Traditional Flat Racks

- When placing and removing cookware, pull the rack out to the bump (stop position) on the rack support.
- To remove a rack, pull it toward you, tilt the front end up and pull it out.

- To replace, place the curved end of the rack (stop-locks) onto the oven supports, tilt up the front of the rack and push the rack in.
- Racks may become difficult to slide, especially after a self-clean. Put some vegetable oil on a soft cloth or paper towel and rub onto the left and right edges of the racks.

## Aluminum Foil and Oven Liners

- CAUTION: Do not use any type of foil or oven liner to cover the oven bottom. These items can trap heat or melt, resulting in damage to the product and risk of shock, smoke or fire. Damage from improper use of these items is not covered by the product warranty.
- Foil may be used to catch spills by placing a sheet on a lower rack, several inches below the food. Do not use more foil than necessary and never entirely cover an oven rack with aluminum foil. Keep foil at least 1 - ½" from oven walls to prevent poor heat circulation.

## Cookware

### Cookware Guidelines

- The material, finish, and size of cookware affect baking performance.
- Dark, coated and dull pans. Pans that absorb heat more readily than light, shiny pans. Pans that absorb heat more readily can result in a browner, crisper, and thicker crust. If using dark and coated cookware check food earlier than minimum cook time. If undesirable results are obtained with this type of cookware consider reducing oven temperature by 25° F next time.
- Shiny pans can produce more evenly cooked baked goods such as cakes and cookies.
- Glass and ceramic pans heat slowly but retain heat well. These types of pans work well for dishes such as pies and custards.
- Air insulated pans heat slowly and can reduce bottom browning.
- Keep cookware clean to promote even heating.

## Cooking Modes

Your new oven has a variety of cooking modes to help you get the best results. These modes are described below. Refer to the Cooking Guide section for recommendations for specific foods.

Remember, your new oven may perform differently than the oven it is replacing.

- Bake: The bake mode is for baking and roasting. This mode uses heat primarily from the lower element but also from the upper element to cook food. When preparing baked goods such as cakes, cookies, and pastries always preheat the oven first. Follow recipe recommendations for food placement. If no guidelines are provided center food in the oven. To use this mode press the Bake pad, enter a temperature, and then press Start.

- **Proof:** Proof mode is designed for rising (fermenting and proofing) bread doughs. Press the Proof pad and then press Start. Cover dough well to prevent drying out. Bread will rise more rapidly than at room temperature. Not that for double wall ovens, proof can not be run when running a clean mode in the other oven.
- **Warm:** Warm mode is designed to keep hot foods hot for up to 3 hours. To use this mode, press the Warm pad then press Start. Cover foods that need to remain moist and do not cover foods that should be crisp. Preheating is not required. Do not use warm to heat cold food other than crisping crackers, chips or dry cereal. It is also recommended that food not be kept warm for more than 2 hours.
- **Broiling Modes**
  - Always broil with the door closed. The broil element in this oven is very powerful. Monitor food closely while Broiling. Use caution when Broiling on upper rack positions as placing food closer to the broil element increases smoking, spattering, and the possibility of fats igniting. For best performance center food below the broil heating element. Broiling on rack position 6 is not recommended.
  - Try broiling foods that you would normally grill. Adjust rack positions to adjust the intensity of the heat to the food. Place foods closer to the broil element when a seared surface and rare interior is desired. Thicker foods and foods that need to be cooked through should be broiled on a rack position farther from the broiler or by using Broil Hi
- **Broil Hi:** The Broil Hi mode uses intense heat from the upper element to sear foods. Use Broil Hi for thinner cuts of meat and/or foods you prefer less done on the interior. To use this mode press the Broil pad once and then press Start. It is not necessary to preheat when using this mode.
- **Broil Lo:** The Broil Lo mode use less intense heat from the upper element to cook food thoroughly while also producing surface browning. Use Broil Lo for thicker cuts of meat and/or foods that you would like cooked all the way through. To use this mode press the Broil pad twice and then press Start. It is not necessary to preheat when using this mode.

## CARE AND CLEANING

### Oven

Be sure electrical power is off and all surfaces are cool before cleaning any part of the oven.

### Control Panel

## Control Panel

- It's a good idea to wipe the control panel after each use. Clean with mild soap and water or vinegar and water, rinse with clean water and polish dry with a soft cloth.
- Do not use abrasive cleaners, strong liquid cleansers plastic scouring pads or oven cleaners on the control panel - they will damage the finish

## Oven Exterior

- Do not use oven cleaners, abrasive cleaners, strong liquid cleansers, steel wool, plastic scouring pads, or cleaning powders on the interior or exterior of the oven. Clean with a mild soap and water or vinegar and water solution. Rinse with clean water and dry with a soft cloth. When cleaning surfaces, make sure that they are at room temperature and not in direct sunlight.
- If stain on the door vent trim is persistent, use a mild abrasive cleaner and a sponge-scrubber for best results.
- Spillage of marinades, fruit juices, tomato sauces and basting liquids containing acids may cause discoloration and should be wiped up immediately. Let hot surfaces cool, then clean and rinse.

## Stainless Steel Surfaces (on some models)

- Do not use a steel wool pad, it will scratch the surface
- To clean the stainless steel surface, use warm sudsy water or a stainless steel cleaner or polish. Always wipe the surface in the direction of the grain. Follow the cleaner instructions for cleaning the stainless steel surface.
- Cleaners with oxalic acid such as Bar Keepers Friend Soft Cleanser™ will remove surface rust, tarnish and small blemishes. Use only a liquid cleanser free of grit and rub in the direction of the brush lines with a damp, soft sponge.
- To inquire about purchasing cleaning products including stainless steel appliance cleaner or polish, see the Accessories and Consumer Support sections at the end of this manual.

## Oven Interior

- The interior of your new oven can be cleaned manually or by using Steam Clean or Self Clean modes.
- Spillage of marinades, fruit juices, tomato sauces and basting liquids containing acids may cause discoloration and should be wiped up immediately. Let hot surfaces cool, then clean and rinse
- **Manual Cleaning:** Do not use oven cleaners, strong liquid cleansers, steel wool, or scouring pads on the interior of the oven. Clean with a mild soap and water, or vinegar and water solution. Rinse with clean water and dry with a soft cloth. When cleaning surfaces, make sure that they are at room temperature

- **Steam Clean Mode**

- Steam clean is intended to clean small spills using water and a lower cleaning temperature than Self-Clean.
- To use the Steam Clean feature, wipe grease and soils from the oven. Pour one cup of water into the bottom of the oven. Close the door. Press the More option, then select Steam Clean, and press Start to the right of the screen. The oven door will lock. You cannot open the door during the 30 minute steam clean as this will decrease the steam clean performance. At the end of the steam clean cycle the door will unlock. Wipe out any excess water and any remaining soil.
- NOTE: Water in the bottom of the oven may be hot right after finishing the cycle.

- **Self Clean Mode**

- Read Self-Cleaning Oven Safety Instructions at the beginning of this manual before using Self Clean Mode. Self clean uses very high temperatures to clean the oven interior. The oven door will lock when using this feature. Before operating the self clean cycle, wipe up grease and soils from the oven. Remove all items from the oven other than enameled (dark color) racks. Shiny or silver racks, the meat probe, and any cookware or other items should all be removed from the oven before initiating a self clean cycle. Close the door. If using a double oven, select which oven you would like to clean. Select the More option, then Self Clean, Choose a 3, 4, or 5 hour cycle and select the illuminated Start pad to the right of the screen. For heavily soiled ovens. the maximum 5 hour clean time is recommended. If you wish to use the default time. press Start immediately after selecting Self Clean. The oven will show that the door has locked and display the amount of time remaining in the cycle. Press the illuminated Cancel pad to the right of the screen if you wish to stop the cycle. The oven will turn off automatically when the self clean cycle is complete. The door will stay locked until the oven has cooled down. After the oven has cooled down wipe any ash out of the oven.
- IMPORTANT: The health of some birds is extremely sensitive to the fumes given off during the self-cleaning cycle of any range. Move birds to another well-ventilated room.

### **Flat Racks**

- Flat racks that are enameled, not shiny, can be left in the cavity during self clean, or can be washed with warm, soapy water.
- Racks may be more difficult to slide, especially after a self-clean. Put some vegetable oil on a soft cloth or paper towel and rub onto the left and right edges.

## Oven Light

**WARNING - SHOCK OR BURN:** Before replacing oven light bulb, disconnect the electrical power to the oven at the main fuse or circuit breaker panel. Failure to do so may result in electric shock or burn.

**CAUTION BURN HAZARD:** The glass cover and bulb should be removed when cool. Touching hot glass with bare hands or a damp cloth can cause burns.

1. Disconnect power at the main fuse or circuit breaker panel.
2. Remove oven racks.
3. Slide a flat blade screwdriver or butter knife between the metal housing and the glass light cover. **NOTE:** on some models there is a metal clip visibly holding the glass. The tool needs inserted between the metal housing and the clip holding the glass.
4. Support the glass light cover with two fingers to prevent the cover from falling to the bottom of the oven.
5. Gently twist the screwdriver blade or butter knife to loosen the glass light cover. Be careful not to chip the oven coating.
6. Remove the glass light cover.
7. Remove the bulb by firmly grasping and sliding the bulb straight out until the two prongs have cleared the ceramic holder.
8. Do not touch the glass of the new replacement bulb with your fingers. It will cause the bulb to fail when it lights. Grasp the replacement bulb with a clean towel or facial tissue with the prongs facing down. Align the two prongs in the ceramic holder, pressing gently until the bulb is securely in the ceramic socket.
9. Slide the protective lens into the holder and push until the clips snap into the housing.
10. Reconnect power.

## Oven Door

### Oven Door Removal

**NOTE:** Door removal is not a requirement for installation of the product but is an added convenience.

To remove the door:

1. Open the oven door as far as it will go.
2. Remove hinge bracket (if present) from front frame and set aside. The hinge bracket must be replaced for proper door functionality when door is reinstalled.
3. Push both hinge locks down toward the door frame to the unlocked position. This may require a flat-blade screwdriver. **DO NOT LIFT THE DOOR BY THE HANDLE!**

4. Place hands on both sides of the door and close the oven door to the removal position (approximately 1'-2" [2.5 cm-5.1 cm] from the closed position).
5. Lift the door up and out until the hinge arms clear the slots. NOTE: The oven door is very heavy. Be sure you have a firm grip before lifting the oven door off the hinges. Use caution once the door is removed. Do not lay the door on its handle. This could cause dents or scratches.

### Replacing the Oven Door

NOTE: The oven door is heavy. You may need help lifting the door high enough to slide it into the hinge slots.

Do not lift the door by the handle.

1. Lift the oven door by grasping each side.
2. With the door at the same angle as the removal position (approximately 1"-2" [2.5 cm-5.1 cm] from the closed position), seat the notch of the hinge arm into the bottom edge of the hinge slot. The notch of the hinge arm must be fully seated into the bottom of the slot.
3. Fully open the door. If the door will not fully open, the indentation is not seated correctly in the bottom edge of the slot.
4. Push the hinge locks up against the front frame of the oven cavity. to the locked position.
5. Replace hinge bracket (if present). The hinge bracket must be replaced for proper door functionality.
6. Close the oven door.



## TROUBLESHOOTING TIPS

Problem	Possible Cause
<b>My new oven doesn't cook like my old one. Is something wrong with the temperature settings?</b>	Your new oven has a different cooking system from your old oven and therefore may cook differently than your old oven.
<b>Food does not bake properly</b>	Oven controls improperly set.
	Rack position is incorrect or rack is not level.
	Incorrect cookware or cookware of improper size being used.
	Oven temperature needs adjustment.

	Ingredient substitution	
<b>Food does not broil properly</b>	Oven controls improperly set.	
	Improper rack position being used	
	Food being cooked in a hot pan.	
	Cookware not suited for broiling.	
	Aluminum foil used on the broiling pan and grid has not been fitted properly and is not recommended.	
	In some areas the power (voltage) may be low.	
<b>Oven temperature too hot or too cold</b>	Oven temperature needs adjustment.	
<b>Oven does not work or appears not to work</b>	A fuse in your home may be blown or the circuit breaker tripped.	
	Oven controls improperly set.	
	Oven is in Sabbath Mode.	
<b>“Crackling” or “popping” sound</b>	This is the sound of the metal heating and cooling during both the cooking and cleaning functions.	
<b>Why is my range making a "clicking" noise when using my oven?</b>	Your range has been designed to maintain a tighter control over your oven's temperature. You may hear your oven's heating elements "click" on and off more frequently than other ovens to achieve better results during baking, broiling, and self-clean cycles.	
<b>Clock and timer do not work</b>	A fuse in your home may be blown or the circuit breaker tripped.	
<b>Sometimes the oven takes longer to preheat to the same temperature</b>	Cookware or food in oven	
	Number of racks in oven	
<b>Oven light does not work</b>	Light bulb is loose or defective.	
	Pad operating light is broken.	

**Warning**



<b>Oven will not self-clean</b>	The temperature is too high to set a self-clean operation.	
	Oven controls improperly set.	
<b>Excessive smoking during clean cycle</b>	Excessive soil or grease..	
<b>Excessive smoking during broiling</b>	Food too close to burner element.	
<b>Oven door will not open after a clean cycle</b>	Oven too hot.	
<b>Oven not clean after a clean cycle</b>	Oven controls improperly set.	
	Oven was heavily soiled.	
 <b>flashes in the display</b>	The self-clean cycle has been selected but the door is not closed.	
 <b>is on when you want to cook</b>	The oven door is locked because the temperature inside the oven has not dropped to the locking temperature.	
<b>“F— and a number or letter” flash in the display</b>	You have a function error code.	
	If the function code repeats	
<b>Display goes blank</b>	A fuse in your home may be blown or the circuit breaker tripped.	
	The clock is turned off.	
	Oven is in Sabbath Mode.	
<b>Power outage, clock flashes</b>	Power outage or surge	

This content is compiled from multiple sources and is provided for reference purposes only. It may not be



<b>“Burning” or “oily” odor emitting from the vent</b>	This is normal in a new oven and will disappear in time.	
<b>Strong odor</b>	An odor from the insulation around the inside of the oven is normal for the first few uses.	
<b>Fan noise</b>	A cooling fan may automatically turn on.	
<b>My oven door glass appears to be "tinted" or have a "rainbow" color. Is this defective?</b>	No. The inner oven glass is coated with a heat barrier to reflect the heat back into the oven to prevent heat loss and keep the outer door cool while baking.	
<b>Oven will not work remotely</b>	Router issues, no wireless signal, etc.	
	Oven is not connected	

complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

