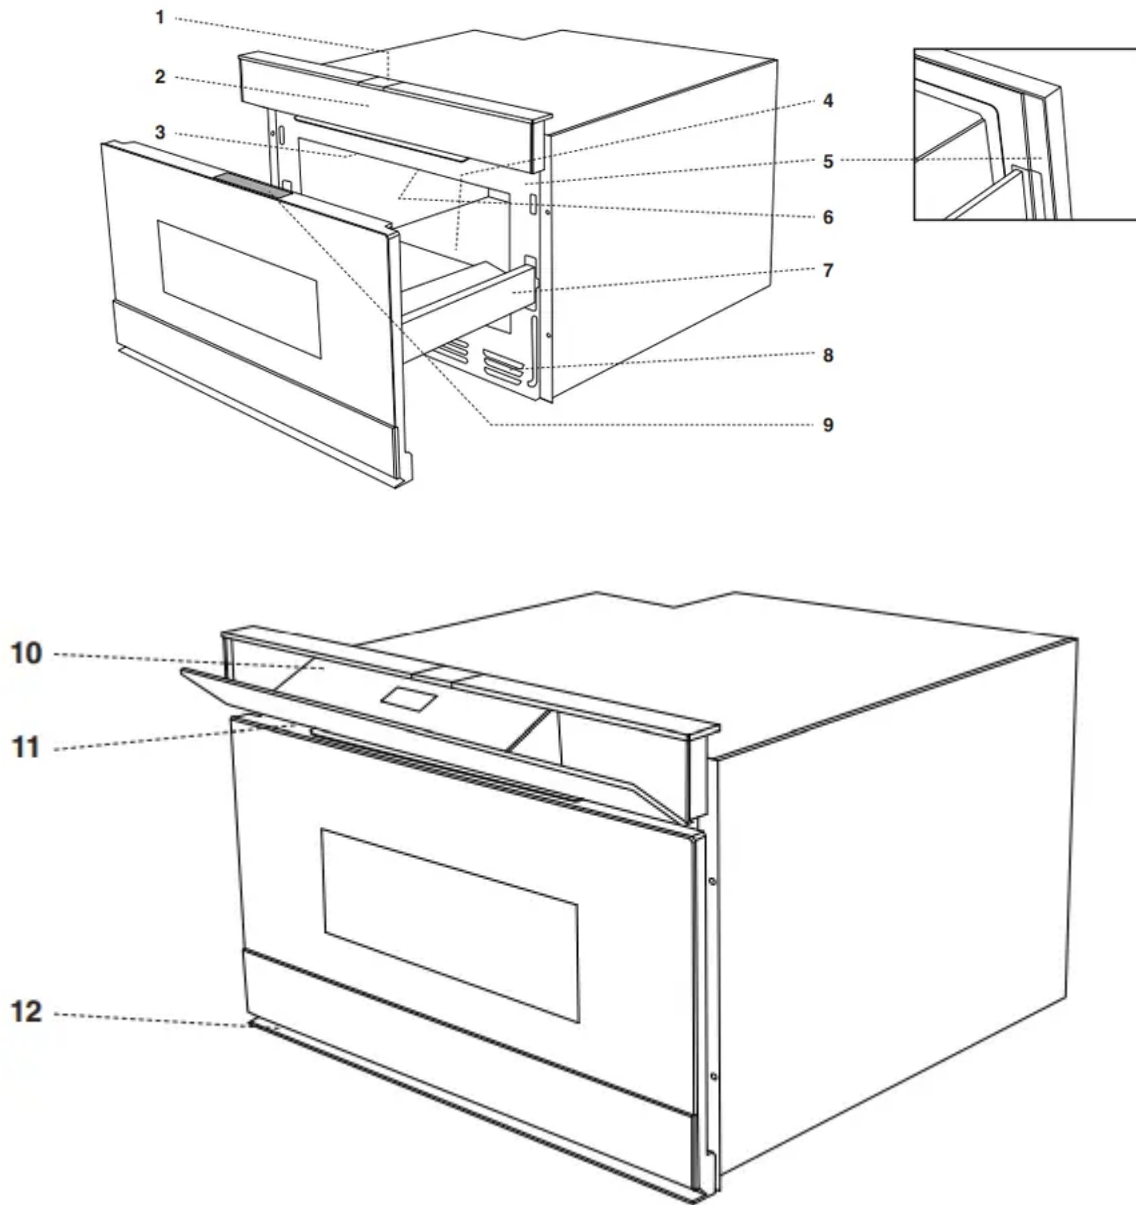


PART NAMES



1. Easy Wave blue LED Indicator
2. Hidden control panel
3. Waveguide cover DO NOT REMOVE
4. Name plate: open the Microwave Drawer fully. The label is beyond the back wall of the microwave cavity facing up from the flat surface.
5. Drawer sealing surfaces
6. Drawer light
7. Microwave Drawer guides
8. Vent

- 9. Menu label
- 10. Keysheet
- 11. Easy Wave Open
- 12. Built-In Flush Mount

The keysheet is hidden behind the control panel door on the top front face of the unit. To open, push in on the control panel. The panel will release and gently float to open. To close, push the panel upward to the closed position. The panel will be secured by magnetic latches in both open and closed positions.

KEYSHEET



Numbers next to the keysheet illustration indicate pages on which there are feature descriptions and usage information.

MENU LABEL

DEFROST		SENSOR COOK			MORE MENUS					
1	Ground Meat	1	Baked Potatoes	7	Longer Fresh Vegetables	Melt	1	Butter	7	Beverage Reheat
2	Steaks/Chops	2	Sweet Potatoes	8	Steamer Bag		2	Chocolate	8	Hot Water
3	Boneless Poultry	3	Fish/Seafood	9	Frozen Vegetables	Soften	3	Ice Cream	9	Hot Cereal
4	Bone-in Poultry	4	Brown Rice	10	Ground Meat		4	Cream Cheese		
5	Roast	5	White Rice	11	Frozen Entrees	Warm	5	Syrup		
6	Casserole or Soup	6	Quick Fresh Vegetables				6	Dessert Topping		

TLAB-B1356MIRRO

BEFORE OPERATING

Before operating your new Microwave Drawer make sure you read and understand this operation manual completely.

Before the Microwave Drawer can be used, follow these steps:

1. Plug in the Microwave Drawer.

ENJOY YOUR MICRO- WAVE TOUCH CLEAR will appear

 
2. Touch the STOP/CLEAR pad. : will appear.

3. Set clock.





TO SET THE CLOCK

1. Touch TIMER/SETTINGS pad twice. The display shows



2. Touch number pads for correct time of day and touch START/+30 SEC pad.

This is a 12 hour clock. If you attempt to enter an incorrect clock time,  will appear in the display. Touch the STOP/CLEAR pad and re-enter the time.

If the electrical power supply to your Microwave Drawer should be interrupted, the display will intermittently show  after the power is reinstated. If this occurs during cooking, the program will be erased. The time of day will also be erased. Simply touch STOP/CLEAR pad and reset the clock for the correct time of day

Note: The Microwave Drawer can be programmed with the drawer open except for START/+30 SEC.

STOP/CLEAR

STOP/CLEAR Touch the STOP/CLEAR pad to:

1. Erase if you make a mistake during programming.
2. Cancel timer.
3. Stop the Microwave Drawer temporarily during timed cooking.
4. Return the time of day to the display.
5. Cancel a program during cooking, touch twice for timed cooking.

OPEN OR CLOSE MICROWAVE DRAWER

Press the OPEN/CLOSE pad on the control panel or wave twice on top left side of the drawer to open the microwave. The Easy Wave only works to open the microwave, not close. The Microwave Drawer also can be closed by gently pushing on the drawer. Do not pull the drawer by hand, except in the case of emergency, such as a power failure. If necessary, push or pull slowly.

EASY WAVE OPEN ON/OFF

Easy Wave Open is default OFF when plugged in. The function must activate from within the Timer/Settings Menu. The blue light on the center of the panel will illuminate once Easy Wave Open has been activated. When Control Lock is activated, the Easy Wave Open function is off.

To use the Easy Wave Open functions, simply wave your hand in front of the sensor twice in consecutive motions. This can be either up and down or side to side motions.

EASY WAVE OPEN ON

1. Touch TIMER/SETTINGS pad 8 times. The display shows

EASY WAVE OVEN ON ? TOUCH START

2. Touch START/+30 SEC pad. The display shows

EASY WAVE OVEN ON

3. When activated, a blue LED indicator is illuminated on top to indicate that the function is on.

EASY WAVE OPEN OFF

1. Touch TIMER/SETTINGS pad 8 times. The display shows

EASY WAVE OVEN OFF ? TOUCH START

2. Touch START/+30 SEC pad. The display shows

EASY WAVE OVEN OFF

MICROWAVE DRAWER COOKING

TIME COOKING

Your Microwave Drawer can be programmed for 99 minutes 99 seconds (99.99). Always enter the seconds after the minutes, even if they are both zeros.

Suppose you want to cook for 5 minutes at 100%.

1. Enter cooking time **5 0 0** **5.00** **TOUCH** **START**
OR **TOUCH** **POWER** **LEVEL**

2. To cook at 100% power (High), touch START/+30 SEC pad.

TO SET POWER LEVEL

There are eleven preset power levels.

Using lower power levels increases the cooking time, which is recommended for foods such as cheese, milk and long slow cooking of meats. Consult a microwave cookbook or recipes for specific recommendations.

Suppose you want to defrost for 5 minutes at 30%.

1. Enter defrost time **5 0 0** **5.00**
2. Touch POWER LEVEL pad 8 times.
3. Touch START/+30 SEC pad.

TOUCH POWER LEVEL PAD NUMBER OF TIMES FOR DESIRED POWER	APPROXIMATE PERCENTAGE OF POWER	COMMON WORDS FOR POWER LEVELS
POWER LEVEL x 1	100%	High
POWER LEVEL x 2	90%	
POWER LEVEL x 3	80%	
POWER LEVEL x 4	70%	Medium High
POWER LEVEL x 5	60%	
POWER LEVEL x 6	50%	Medium
POWER LEVEL x 7	40%	
POWER LEVEL x 8	30%	Med Low / Defrost
POWER LEVEL x 9	20%	
POWER LEVEL x 10	10%	Low
POWER LEVEL x 11	0%	

SENSOR SETTINGS

Sharp's Sensor is a semi-conductor device that detects the vapor (moisture and humidity) emitted from the food as it heats. The sensor adjusts the cooking times and power levels for various foods and quantities.

USING SENSOR SETTINGS:

1. After the Microwave Drawer is plugged in, wait 2 minutes before using any sensor setting.
2. Be sure the exterior of the cooking container and the interior of the Microwave Drawer are dry. Wipe off any moisture with a dry cloth or paper towel.
3. The sensor works with foods at normal storage temperature. For example, popcorn would be at room temperature.
4. Any sensor selection can be programmed with More or Less Time Adjustment.
5. More or less food than the quantity listed in the charts should be cooked following the guidelines in any microwave cookbook.
6. During the first part of sensor use, the food name will appear on the display. Do not open the Microwave Drawer or touch STOP/CLEAR during this part of the cycle. The measurement of vapor will be interrupted. If this occurs, an error message will appear. To

continue cooking, touch the STOP/CLEAR pad and cook manually.

When the sensor detects the vapor emitted from the food, the remainder of cooking/reheating time will appear. The Microwave Drawer may be opened when the remaining time appears on the display. At this time, you may stir or season food, as desired.

7. Except for Popcorn, if the sensor does not detect vapor properly when cooking other foods, ERROR will be displayed, and the microwave will turn off.
8. Check food temperature after cooking. If additional time is needed, continue to cook manually.
9. Each food has a cooking hint. Touch the TIMER/ SETTINGS pad when the HELP indicator is lighted in the display

COVERING FOODS:

Some foods work best when covered. Use the cover recommended in the charts for these foods. You may refer to the hints by touching the TIMER/SETTINGS pad.

1. Casserole lid.
2. Plastic wrap: Use plastic wrap recommended for microwave cooking. Cover dish loosely; allow approximately 1/2 inch to remain uncovered to allow steam to escape. Plastic wrap should not touch food.
3. Wax paper: Cover dish completely; fold excess wrap under dish to secure. If dish is wider than paper, overlap two pieces at least one inch to cover.



Be careful when removing any covering to allow steam to escape away from you.

SENSOR

POPCORN, REHEAT, COOK

You can cook or reheat many foods and don't need to calculate cooking time or power level.

 



Suppose you want to cook baked potatoes.

1. Touch Cook pad once. 
2. See Menu Label. Select desired food by touching number pad. Ex: Touch  for baked potatoes.
3. Touch START/+30 SEC pad.

Note: To heat or cook other foods or foods above or below the quantity allowed on the chart, cook manually.

DEFROST

Use this feature to defrost the foods shown in the DEFROST CHART below.

1. Touch DEFROST pad. 
2. See Menu Label. Select desired food by touching the number pad. Ex: Touch  for steaks/chops. 
3. Enter weight by touching number pads. 
4. Touch START/+30 SEC pad.
The oven will stop so that the food can be checked.
5. After the first stage, open the Microwave Drawer. Turn steak over and shield any warm portions. Close the Microwave Drawer. Touch START/+30 SEC pad.
6. After the second stage, open the Microwave Drawer. Shield any warm portions. Close the Microwave Drawer. Touch START/+30 SEC pad.
7. After defrost cycle ends, cover and let stand as indicated in the chart below.

Note:

- Defrost can be programmed with More or Less Time Adjustment.
- To defrost other foods or foods above or below the weights allowed on the DEFROST CHART, see MANUAL DEFROST below.
- Check foods when oven signals. After final stage, small sections may still be icy. Let stand to continue thawing. Do not cook until all ice crystals are thawed.
- Shielding prevents cooking from occurring before the center of the food is defrosted. Use small smooth strips of aluminum foil to cover edges and thinner sections of the food.

MANUAL DEFROST

If the food that you wish to defrost is not listed on the DEFROST CHART or is above or below the limits in the AMOUNT column on the DEFROST CHART, you need to defrost manually.

You can defrost any frozen food, either raw or previously cooked, by using POWER LEVEL at 30%. Follow the exact 3-step procedure found under TO SET POWER LEVEL. Estimate defrosting time and touch POWER LEVEL pad eight times for 30% power.

For either raw or previously cooked frozen food the rule of thumb is approximately 4 minutes per pound. For example, defrost 4 minutes for 1 pound of frozen spaghetti sauce.

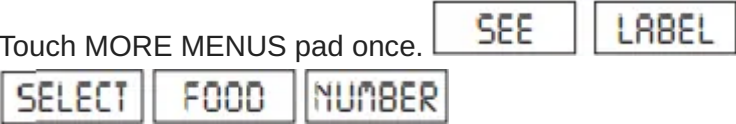
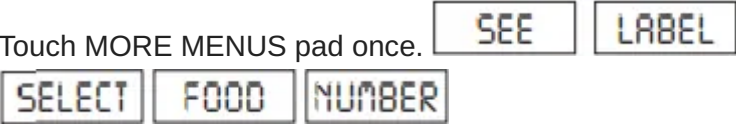
Always stop the oven periodically to remove or separate the portions that are defrosted. If food is not defrosted at the end of the estimated defrosting time, program the oven in 1 minute increments on POWER LEVEL 30% until totally defrosted.

When using plastic containers from the freezer, defrost only long enough to remove from the plastic in order to place in a microwave-safe dish.

MORE MENUS

MELT / SOFTEN / WARM

These features automatically compute the correct heating time and microwave power level for melting, softening and warming foods shown in the chart below.

1. Touch MORE MENUS pad once. 

2. See Menu Label. Select desired food by touching number pad. Ex: Touch 2 for chocolate.
3. Repeat touching same number pad to select quantity. Ex: Touch 2 two more times for 1 square.
4. Touch START/+30 SEC pad.

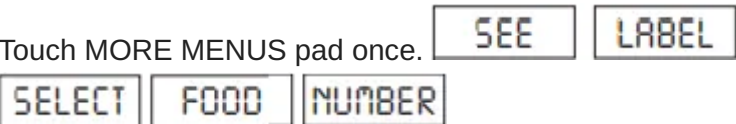
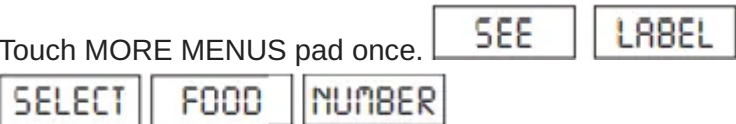
Note:

- Melt/Soften/Warm can be programmed with More or Less Time Adjustment.
- To melt, soften or warm other food or foods above or below the quantity allowed on the MELT/SOFTEN/WARM CHART, use manual operation.

BEVERAGE REHEAT / HOT WATER / HOT CEREAL

These features enable you to reheat coffee or tea to restore to a more suitable drinking temperature or to make instant coffee, tea or hot cereal.

Suppose you want to make 2 cups of coffee.

1. Touch MORE MENUS pad once. 

2. See Menu Label. Select desired selection by touching number pad. Ex: Touch 8 to make coffee.
3. Repeating touching same number pad to select quantity. Ex: Touch 8 two more times for 2 cups of coffee.
4. Touch START/+30 SEC pad.

Note:

- BEVERAGE REHEAT/HOT WATER/HOT CEREAL can be programmed with More or Less Time Adjustment.

 
- Should you attempt to enter more or less than the allowed amount, an error message will appear in the display.

OTHER FEATURES

TIMER / SETTINGS

If the electrical power supply to your Microwave Drawer should be interrupted, the display will

intermittently show 

 after the power is reinstated. If this occurs, the SETTINGS option you input will be erased. Simply touch STOP/CLEAR pad and reset.

TIMER



1. Touch TIMER/SETTINGS pad 3 times.
2. Enter time.
3. Touch START/+30 SEC pad.

To cancel timer, touch STOP/CLEAR.



AUDIBLE SIGNAL ELIMINATION

At the end of timed cook, beeps will sound. The audible signal can be turned off if you prefer quiet operation.

TO TURN SOUND OFF

1. Touch TIMER/SETTINGS pad 4 times 
2. Touch START/+30 SEC pad. The display shows 



TO RESTORE SOUND

1. Touch TIMER/SETTINGS pad 4 times 
2. Touch START/+30 SEC pad. The display shows 

END OF COOKING REMINDER

At end of timed cooking, the microwave will signal every 10 seconds for the first minute; then every 3 minutes until STOP/CLEAR pad is touched, up to one hour.

TO TURN REMINDER OFF

1. Touch TIMER/SETTINGS pad 5 times. The display shows 
2. Touch START/+30 SEC pad. The display shows 

TO TURN REMINDER SIGNAL BACK ON

1. Touch TIMER/SETTINGS pad 5 times. The display shows

REMIND SIGNAL ON ? TOUCH START

2. Touch START/+30 SEC pad. The display shows

REMIND SIGNAL ON

AUTO START

If you wish to program the Microwave Drawer to begin cooking automatically at a designated time of day, follow this procedure.

1. Touch TIMER/SETTINGS pad 6 times. The display shows

AUTO START TOUCH START

2. Touch START/+30 SEC pad.

ENTER START TIME

3. Enter start time.

4:30 TOUCH SETTINGS

4. Touch TIMER/SETTINGS pad.

ENTER COOKING TIME

5. Touch the number pads to enter cooking time.

20.00

TOUCH START OR TOUCH POWER LEVEL

Touch POWER

LEVEL pad repeatedly until the desired power level is reached.

TOUCH START

6. Touch START/+30 SEC pad.

DEMONSTRATION MODE

TO SELECT DEMO MODE

1. Touch TIMER/SETTINGS pad 7 times. The display shows

DEMO ON ? HOLD START 3 SEC

2. Hold START/+30 SEC pad for 3 seconds. The display shows

DEMO ON

TO CANCEL DEMO MODE

1. Touch TIMER/SETTINGS pad 7 times. The display shows

DEMO OFF ? TOUCH START

2. Touch START/+30 SEC pad. The display shows

DEMO OFF

Note:

- Microwave Drawer doesn't heat in Demo Mode.
- Display counts down quickly.


STANDBY MODE

This microwave will go into standby mode after a period of inactivity. The backlight of the display will automatically dim after 3 minutes if the unit has not been in operation. If the display is in standby mode, simply touch the control panel or open/close the door to return the backlight to maximum brightness.

CONTROL LOCK

The Control Lock prevents unwanted drawer operation such as by small children. The Microwave Drawer can be set so that the control panel and the automatic door mechanism are deactivated or locked.

TO LOCK

Touch STOP/CLEAR pad and hold for 3 seconds. The display shows 

TO UNLOCK

Touch STOP/CLEAR pad and hold for 3 seconds. The display shows



The Control Lock is canceled when the electrical power supply to your oven is interrupted. Set the Control Lock again when power to the oven is restored.

HELP

Each setting of Popcorn, Reheat, Cook, Defrost and Beverage has a cooking hint. If you wish to check, touch TIMER/ SETTINGS whenever HELP is lighted in the Interactive Display for these and other manual operation hints.

+30 SEC

+30 SEC allows you to cook for 30 seconds at 100% by simply touching the +30 SEC pad. You can also extend cooking time in multiples of 30 seconds by repeatedly touching the +30 SEC pad during manual cooking.

Note:

- To use +30 SEC, touch pad within 3 minutes after cooking, closing the drawer or touching the STOP/CLEAR pad.
- +30 SEC cannot be used with Sensor settings, REHEAT or DEFROST.

MORE OR LESS TIME ADJUSTMENT

Should you discover that you like any of the REHEAT or DEFROST settings slightly more done, touch the POWER LEVEL pad once after touching your selection. The display will show

MORE

For slightly less done, touch the POWER LEVEL pad twice after touching your selection. The display will show

LESS

EASY WAVE OPEN BLUE LED INDICATOR

OFF 

- Out of the box
- Control Lock
- User selects OFF
- Drawer is at full open position

BLUE LED ON 

- Easy Wave Open is active
- On when fully closed
- On when cooking

 

BLUE LED FLASHING 

- Drawer is opening - flashing 0.5 seconds off, 0.5 seconds on

 
MULTIPLE SEQUENCE COOKING

Your Microwave Drawer can be programmed for up to 4 automatic cooking sequences, switching from one power level setting to another automatically.

Sometimes cooking directions tell you to start on one power level and then change to a different power level. Your Microwave Drawer can do this automatically.

1. First enter cooking time. Then touch POWER LEVEL pad once for 100% cooking or repeat touching POWER LEVEL pad for a lower power level.
2. Enter second cooking time. Repeat touching POWER LEVEL pad for desired level. You can follow this procedure up to 4 times.  
3. Touch START/+30 SEC pad.

Note:

- If POWER LEVEL pad is touched once,  will be displayed.
- If 100% is selected as the final sequence, it is not necessary to touch the POWER LEVEL pad.
- If you wish to know power level during cooking, simply touch the POWER LEVEL pad. As long as your finger is touching the POWER LEVEL pad, the power level will be displayed.

AUTO-TOUCH GUIDE

OTHER FEATURES

TIMER/SETTINGS

Check operation manual for specific details.

Touch TIMER/SETTINGS pad.

2 times for Clock.

3 times for Timer.

4 times for Sound on/off.

5 times for End of cooking reminder on/off.

6 times for Auto start.

7 times for Demo mode on/off.

8 times for Easy wave open on/off.


STANDBY MODE

This microwave will go into standby mode after a period of inactivity. Simply touch the control panel or open/close the door to return the backlight to maximum brightness.

 
 
CONTROL LOCK

The Control Lock prevents unwanted oven/drawer operation such as by small children. The Microwave Drawer can be set so that the control panel is deactivated or locked.

To Lock

Touch STOP/CLEAR pad and hold for  3 seconds.

To Unlock

Touch STOP/CLEAR pad and hold for   3 seconds.

MICROWAVE DRAWER

SET CLOCK

1. Touch TIMER/SETTINGS pad twice.
2. Touch number pads for correct time of day and touch START/+30 SEC pad.

If the electrical power supply to your range should be interrupted, the display will

intermittently show:

ENJOY	YOUR	MICRO-	WAVE	TOUCH	CLEAR
AND	TOUCH	CLOCK			

TIME COOKING

High Power Cooking

1. Enter cooking time by touching number pads. (Ex: 5 minutes)

5.00	TOUCH
------	-------

START	OR	TOUCH	POWER	LEVEL
-------	----	-------	-------	-------

2. Touch START/+30 SEC pad.

Variable Power Cooking

1. After step 1 above, touch POWER LEVEL pad until desired power level is in the display.
2. Touch START/+30 SEC pad.

SENSOR

Sensor automatically computes the correct time and power level to cook foods on the Menu Label perfectly.

1. Touch COOK pad once.

SEE	LABEL	SELECT	FOOD	NUMBER
-----	-------	--------	------	--------
2. See Menu Label. Select desired food by touching number pad. Ex: Touch 1 for baked potatoes.
3. Touch START/+30 SEC pad.

+30 SEC

Touch START/+30 SEC for 30 seconds at 100% microwave power or to add 30 seconds during manual cooking. Continue to touch for additional 30 seconds.

DEFROST

Use this feature to defrost the foods shown on the Menu Label.

1. Touch DEFROST pad.

SEE	LABEL	SELECT	FOOD	NUMBER
-----	-------	--------	------	--------
2. See Menu Label. Select desired food by touching the number pad. Ex: Touch 2 for steaks/chops.

STEAKS	CHOPS	ENTER	WEIGHT
--------	-------	-------	--------
3. Enter weight by touching number pads.

 



1.0Lb

4. Touch START/+30 SEC pad.
5. Microwave will stop to allow food to be turned over, shielded and/or removed. Close the Microwave Drawer. Touch START/+30 SEC pad.

MORE MENUS

 


 

MELT / SOFTEN / WARM

Use these features to melt, soften or warm the foods shown on the Menu Label.

1. Touch MORE MENUS pad once. 
2. See Menu Label. Select desired food by touching the number pad. Ex: Touch  for chocolate 
3. Repeat touching same number pad to select quantity. Ex: touch  two more times for 1 square.
4. Touch START/+30 SEC pad.

BEVERAGE REHEAT / HOT WATER / HOT CEREAL

Use this feature for coffee, tea or hot cereal to reheat.

1. Touch MORE MENUS pad. 
2. See Menu Label. Select desired food by touching the number pad. Ex: Touch  for hot water. 
3. Repeat touching same number pad to select quantity. Ex: touch  two more times for 2 cups. 
4. Touch START/+30 SEC pad.

CLEANING AND CARE

EXTERIOR

The outside surface is precoated metal and glass. Clean the outside with mild soap and water; rinse and dry with a soft cloth. Do not use any type of household or abrasive cleaner.

STAINLESS STEEL SURFACE

The exterior should be wiped often with a soft damp cloth and polished with a soft dry cloth to maintain its beauty. There are also a variety of products designed especially for cleaning and shining the stainless exterior of the oven. We recommend that the cleaner be applied to a soft cloth and then carefully used on the stainless exterior rather than sprayed directly on to it. Follow package directions carefully.

 

FRONT SIDE OF THE DRAWER

Wipe the window on both sides with a soft damp cloth to remove any spills or splatters. Metal parts will be easier to maintain if wiped frequently with a soft damp cloth. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the drawer surface.

TOUCH CONTROL PANEL

If desired, the touch pads may be deactivated before cleaning. See the Control Lock information. Wipe the panel with a cloth dampened slightly with water only. Dry with a soft cloth. Do not scrub or use any sort of chemical cleaners. Close drawer and follow directions for turning Control Lock off. Touch STOP/CLEAR.

INTERIOR

Before cleaning the Microwave Drawer, touch and hold the STOP/CLEAR button for 3 seconds to lock the control pad and the automatic door mechanism. The drawer can be locked in either the open or closed position. The display will show . This will prevent the drawer from accidentally opening or closing during cleaning. After cleaning, touch and hold the STOP/CLEAR button for 3 seconds to turn the lock off. The display will show .

Cleaning is easy because no heat is generated to the interior surfaces; therefore, there is no baking and setting of spills or splattering. To clean the interior surfaces, including drawer sealing surfaces, wipe with a soft damp cloth. DO NOT USE ABRASIVE OR HARSH CLEANERS OR SCOURING PADS. For heavier soil, use mild soap; wipe clean with a soft damp cloth. Do not use any chemical oven cleaners.

MICROWAVE DRAWER GUIDES

Remove the food crumbs from the Microwave Drawer guides. Wipe with a soft dry cloth in order to keep the Microwave Drawer opening and closing smoothly.

WAVEGUIDE COVER

ATTENTION The waveguide cover, located on the inside top of the Microwave Drawer area, is made from mica, so it requires special care. Keep the waveguide cover clean to assure good microwave performance. Carefully wipe with a soft damp cloth any food splatters from the surface of the cover immediately after they occur. Built-up splashes may overheat and cause smoke or possibly catch fire. Do not remove the waveguide cover.

ODOR REMOVAL

Occasionally, a cooking odor may remain in the Microwave Drawer. To remove odor, combine 1 cup water, grated peel and juice of one lemon and several whole cloves in a 2-cup glass

microwave-safe measuring cup. Boil for several minutes using 100% power. Leave in the Microwave Drawer until water cools. Wipe interior with a soft cloth.

BEFORE YOU CALL FOR SERVICE

Please check the following before calling for service. It may save you time and expense.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Part or all of Microwave Drawer does not operate.	Power cord of Microwave Drawer is not completely connected to the electrical outlet. Power outage. Fuse/circuit breaker at home doesn't work. Microwave Drawer is in Demo Mode	Make sure the power cord is tightly connected to the outlet. Check house lights to be sure. Call your local electric company for service. Replace the fuse or reset the circuit breaker. See DEMONSTRATION MODE section
Food in Microwave Drawer is not heated.	No power to the appliance. Drawer controls improperly set. Drawer is in Demo Mode	See SOLUTION for PROBLEM 1. Check if the controls have been properly set. See DEMONSTRATION MODE section
Microwave Drawer light does not work.	Light bulb is loose or burned out.	Call for service.
Touch controls will not operate.	Control Lock is on	See CONTROL LOCK section
Display flashes.	Power failure.	Touch Clear pad and reset the clock. If the Microwave Drawer was in use, you must reset the cooking function.
Steam from the vent	During microwaving, water vapor may come from the left side of the vent (when facing the microwave).	

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

