

User manual shaver

Features

ComfortCut Blade System

Shaving Unit



Protective Cap


Individually
Floating
Heads


Shaving Unit
Release Button
• Hair Chamber
captures shaven
hair

Electronic
On/Off Button

Shaver Head
Replacement Indicator

LED Charge
Indicator
• Battery Charge, Full,
Low & Quick Charge
Indicator

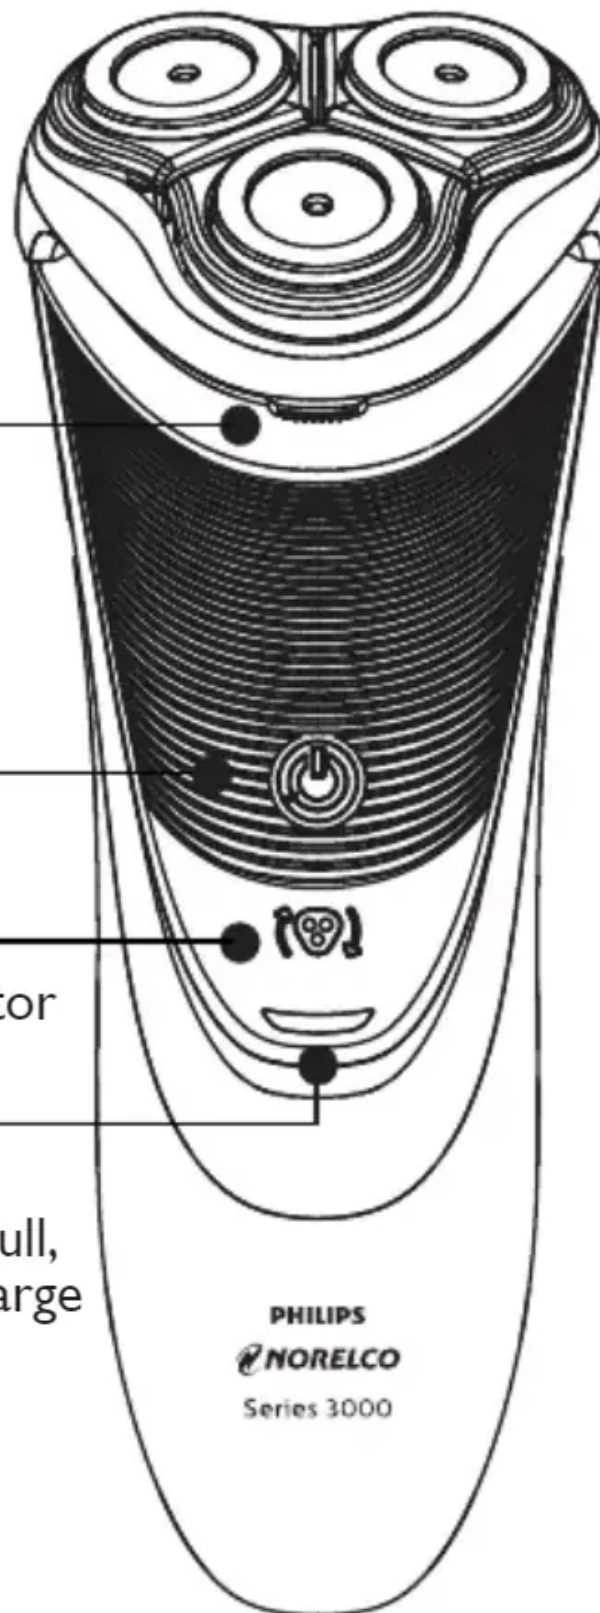

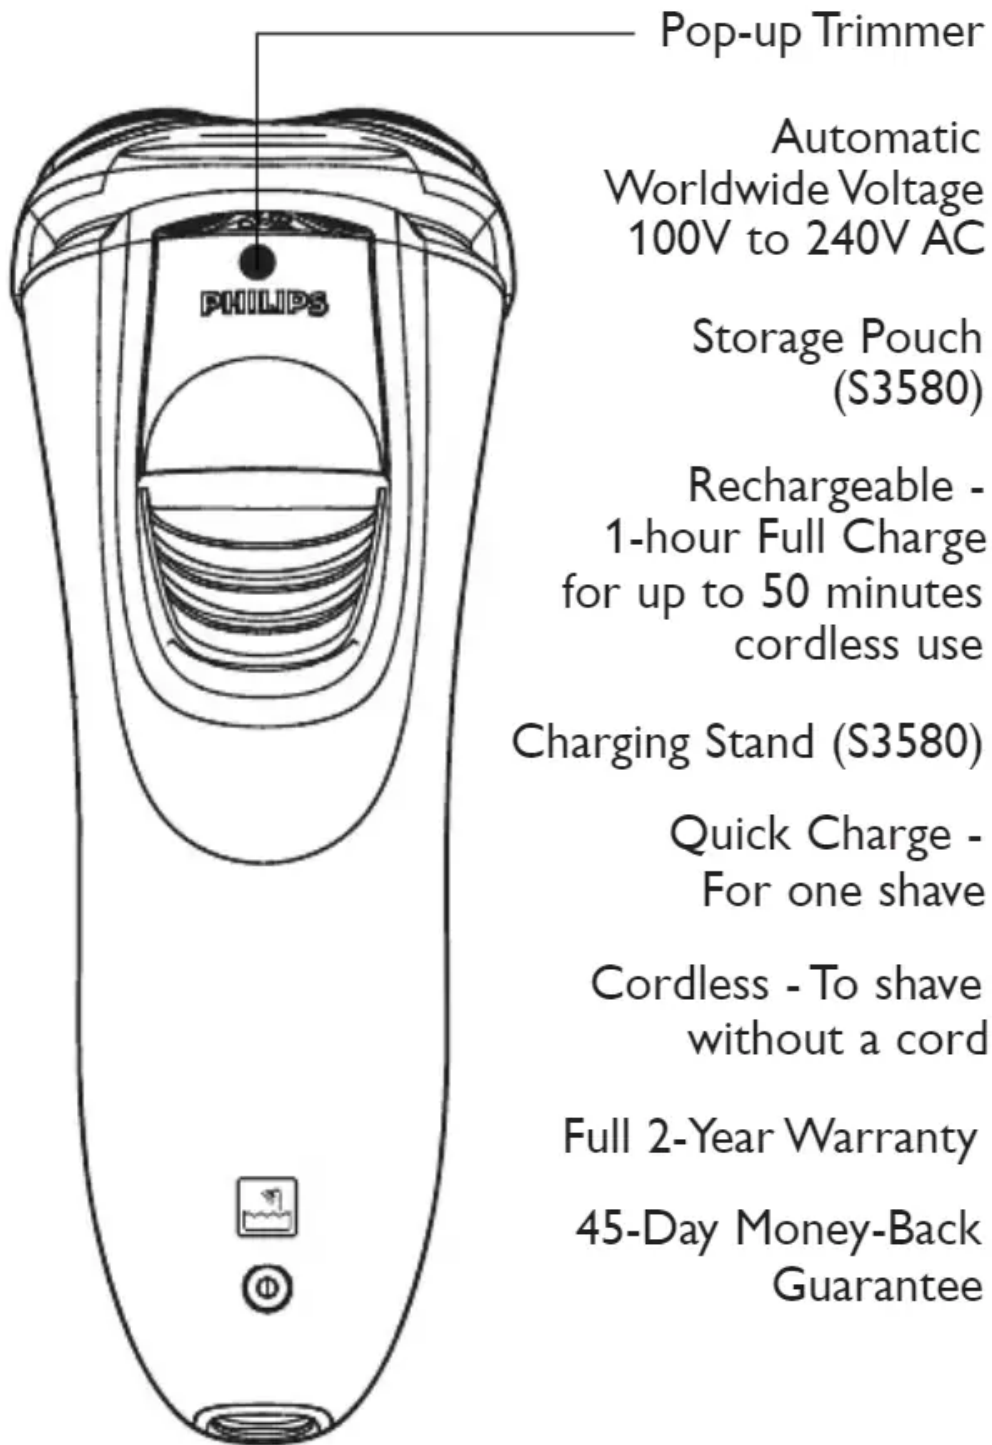

Pop-up Trimmer

Automatic
Worldwide Voltage
100V to 240V AC

Storage Pouch
(S3580)

Rechargeable -
1-hour Full Charge
for up to 50 minutes
cordless use

Charging Stand (S3580)

Quick Charge -
For one shave

Cordless - To shave
without a cord

Full 2-Year Warranty

45-Day Money-Back
Guarantee

LED Multi-Purpose Display

The display provides the following information


- Charging Indicator: When the shaver is charging, the charging light blinks green




- Full Charge Indicator: When the battery is fully charged, the charging light lights up green continuously. After approximately 30 minutes the charging light goes off to save energy



- Low Battery Indicator: When the battery is almost empty (5 or less shaving minutes left), the charging light blinks orange. When you turn the shaver OFF the charging light continues to blink orange for a few seconds

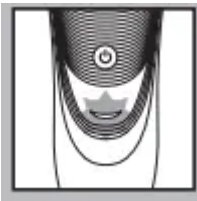

- Quick Charge Indicator:
 - When you charge the empty battery, the charging light alternately blinks orange and green. After approximately 5 minutes, the charging light blinks green.
 - The shaver now contains enough energy for a 5-minute shave.
- Shaver Head Replacement Indicator: Once a year, depending on your shaving behavior the shaver head replacement symbol will light up orange continuously, as a reminder to replace the shaver heads

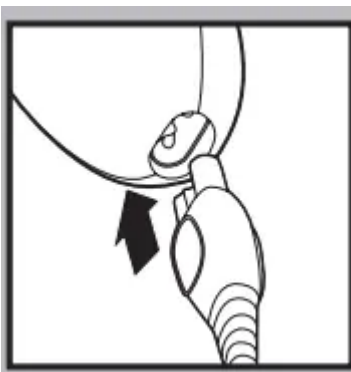

Before First Use

- Charge the shaver before you start using it (see 'Charging').

Important

- Only use the power cord provided to charge the shaver.
- The power plug transforms 100-240V AC to less than 24V DC

Charging


- Charging or recharging at temperatures below 40°F/4,5°C or higher than 95°F/35°C adversely affects life time of batteries.
- If the shaver is subjected to a major change in temperature, pressure or humidity, let it acclimatize for 30 minutes before using.
- Charging or recharging requires one full hour.
- A fully charged shaver has a cordless shaving time of up to 50 minutes.
- The shaving time may be less than 50 minutes as a result of your shaving behavior, cleaning habits or beard type.
- When charging shaver for the first time or after a long period of non-use, charge until the charging light lights up continuously.
- Do not charge shaver in a pouch.

Charging with a Cord


1. Connect cord directly to shaver and connect the charging plug into any 100V to 240V AC outlet. Use only the power cord provided.



- An adaptor plug may be necessary for charging plug usage in some foreign countries. Use an attachment plug adaptor of the proper configuration for the power outlet. The charging plug will automatically convert to work on 100V to 240V AC systems.
- The display on the shaver will indicate shaver is charging.

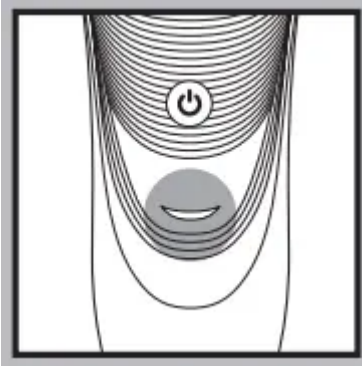


2. Charging and recharging requires a full 1 hour. A fully charged shaver has a cordless shaving time of up to 50 minutes.

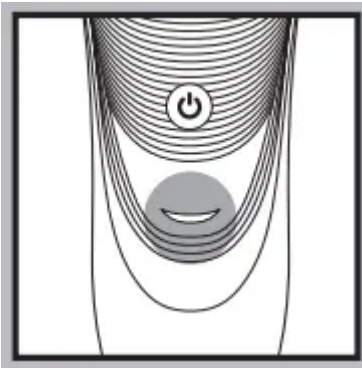

- When the battery is fully charged, the charging light lights up continuously. After approximately 30 minutes, the charging light goes out to save energy.


Charging in Charging Stand

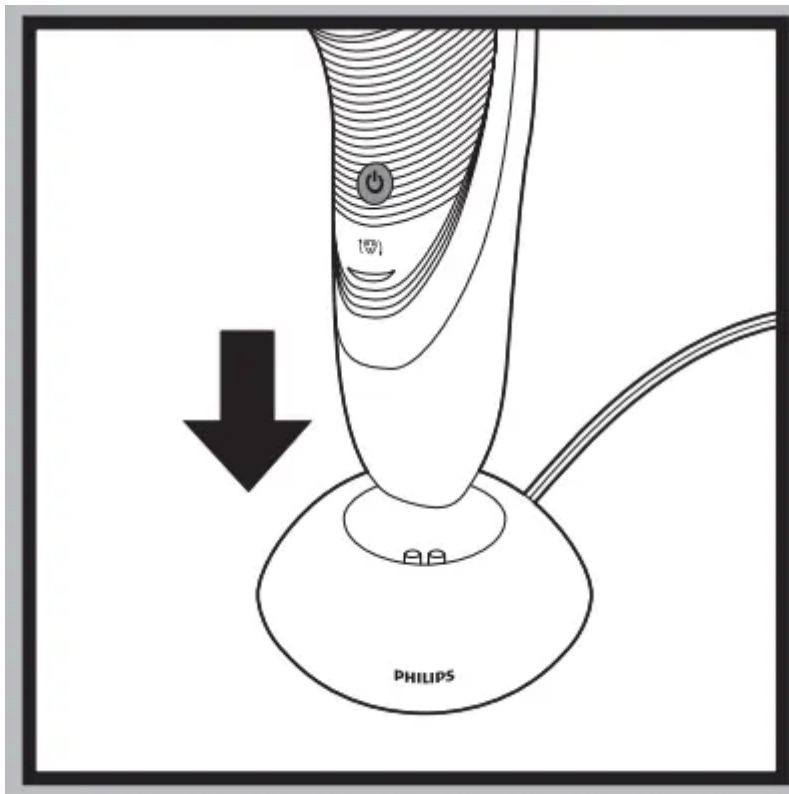

- Always place razor in stand in an upright position making sure charging contacts in bottom of stand fit into recess in bottom of razor.
- Always remove razor from stand by lifting straight up. Do not tilt razor


1. Place razor in charging stand and connect the small plug of cord to charging stand. Connect the charging plug into any 100V to 240V AC outlet. Use only the power cord provided

- An adaptor plug may be necessary for charging plug usage in some foreign countries. Use an attachment plug adaptor of the proper configuration for the power outlet. The charging plug will automatically convert to work on 100V to 240V AC systems.
- The display on the razor will indicate razor is charging.

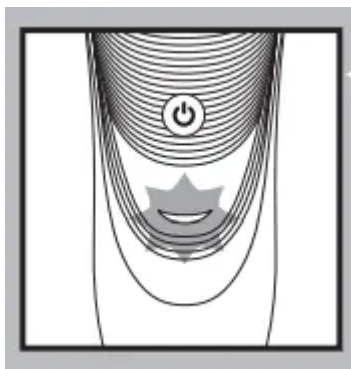

2. Charging and recharging requires one hour. A fully charged razor has a cordless shaving time of up to 50 minutes

- When the battery is fully charged, the charging light lights up continuously. After approximately 30 minutes, the charging light goes out to save energy

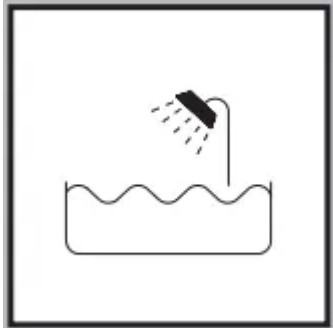

Recharging

1. Recharging requires 1 hour.

- Recharge when the charging light on the shaver display blinks orange

Quick Charge


- When you charge the empty battery, the charging light alternately blinks orange and green. After approximately 5 minutes, the charging light blinks green. The shaver now contains enough energy for a 5-minute shave.

Put It To The Test & Shaving Tips

- 21 Day Trial and Conversion Process. It is a fact that your skin and beard need time to adjust to a new shaving system.
- Use your new shaver exclusively for 3 weeks to fully enjoy the closeness of a Philips Norelco shave.
- At first you may not get as close a shave as you expect, or your face may even become slightly irritated. This is normal since your beard and skin will need time to adjust. Invest 3 weeks and you'll soon experience the full joy of your new shaver.
- Stick with it! If you alternate shaving methods during the adjustment period, it may make it more difficult to adapt to the Philips Norelco shaving system
- If you are still not convinced after 21 days, Philips Norelco will refund you the full purchase price as long as the request is received within 45 days of purchase

How To Shave With An Electric Shaver

- This symbol on the shaver indicates that the shaver can be used in both the bath and shower

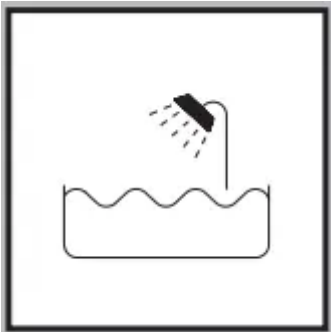

- For hygienic reasons, the shaver should only be used by one person.
- The shaver will not operate while power cord is connected to an electrical outlet.
- Use this shaver for its intended household use as described in this manual.
- Shaving with a clean face gives the best results


Dry Shaving

1. Turn shaver ON by pressing the on/off button once. Shave against the direction of beard growth using circular movements.



2. Stretch your skin with your free hand so blades can lift and cut whiskers. Gently press shaver to skin so the floating heads can follow the contours of your face. DO NOT press too hard. Too much pressure can pinch the skin into the combs
3. Turn shaver OFF by pressing the on/off button once.
4. Clean the shaver after each use (see chapter 'Cleaning').

5. Put the Protective Cap on the shaver to protect shaver heads

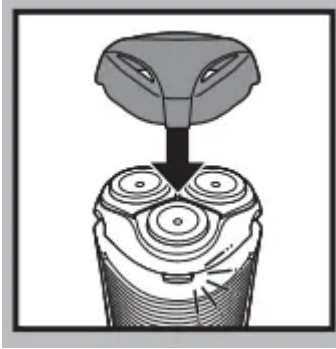

Wet Shaving

You can also use the shaver on a wet face with shaving foam or gel.

1. Apply some water to your skin



2. Apply shaving foam or gel to your skin. Do not use thick shaving cream or shaving oil.




3. Rinse the shaving unit under the tap to ensure that the shaving unit glides smoothly over your skin.
4. Press the on/off button once to switch on the shaver

5. Move the shaving heads in circular movements over your skin



NOTE: Rinse the shaver under the tap regularly to ensure that it continues to glide smoothly over your skin.


6. Turn shaver OFF. Dry your face and thoroughly clean the shaver after each use (see chapter 'Cleaning').
7. When shaver is thoroughly dry, put the Protective Cap on the shaver to protect heads.

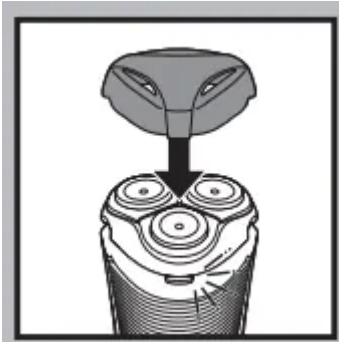

Trimming


To groom sideburns and moustache:

1. Turn shaver ON.
2. Push down spring-release trimmer switch. The trimmer can be activated while the shaver is running.

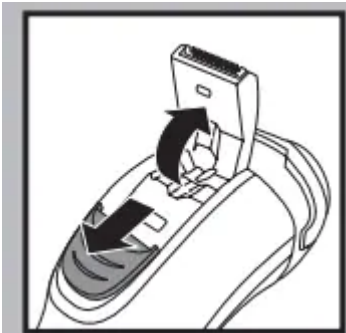

3. Hold trimmer and make downward strokes with gentle pressure

4. Close trimmer by pressing trimmer down.

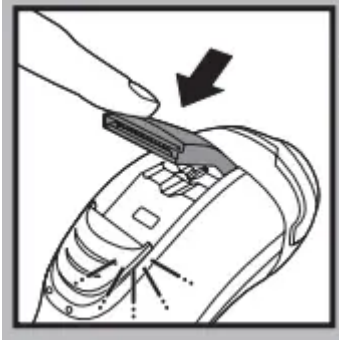

5. Turn shaver OFF

Cleaning

- Always clean your shaver after each use.
- Always switch shaver OFF, unplug and remove power cord before cleaning.
- Never clean, remove or replace head assembly while motor is on.
- Do not apply pressure to combs. Do not touch shaver heads with hard objects as this may dent or damage precision-made slotted combs.
- Do not use shaver if combs are damaged or broken. Facial injury may occur.
- Do not use compressed air, abrasives, scourers or aggressive liquids such as gasoline or acetone to clean the shaver.


Cleaning the Shaving Unit

The shaver heads may be quickly cleaned after each use by rinsing with hot water: Water from the tap should be on a hot setting, BUT BE CAREFUL TO TEST WATER FIRST SO AS NOT TO BURN OR SCALD HANDS.

- Regular cleaning guarantees better shaving results.
 - Do not immerse shaver in water.
 - While rinsing shaver heads, water may drip out of the base of shaver. This is a normal occurrence.
1. Always turn shaver OFF, unplug from outlet and remove power cord from shaver.
 2. Press the Release Button to open the shaving unit



3. Clean inside shaver heads and hair chamber by running under hot water.

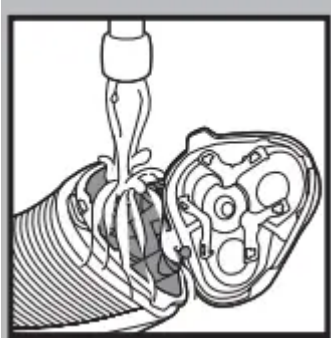

4. Clean outside of shaving unit by running under hot water.



5. Close the shaving unit and shake off excess water. Be careful not to hit the shaving unit against anything while shaking off excess water.

6. Open shaving unit again and leave open to air dry

NOTE: Do not wipe or dry the shaving heads with a towel or tissue. This could damage the shaving heads

- If you used foam or gel to shave, make sure to rinse all of it off to prevent residue build-up from clogging shaving heads.
- If the shaving unit becomes detached from the shaver, you can easily reattach it


Extra-thorough Cleaning Method

Do not mix up the cutters and combs as the shaving performance may be adversely affected for several weeks before optimal shaving performance is restored


1. Turn shaver OFF, remove the charging plug from the outlet and power cord from the shaver
2. Press the Shaving Unit Release Button to open the Shaving Unit




3. Pull the shaving unit off the shaver

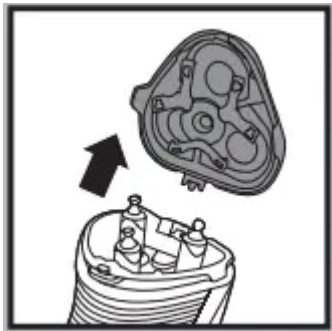

4. Turn the lock counterclockwise to unlock (A) and remove the retaining frame (B).

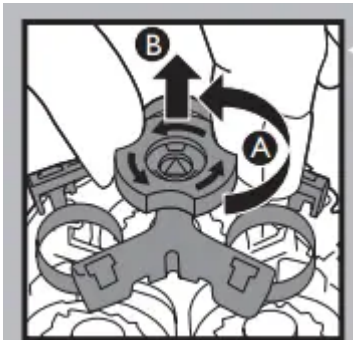

5. Remove and clean one set of cutters and combs at a time

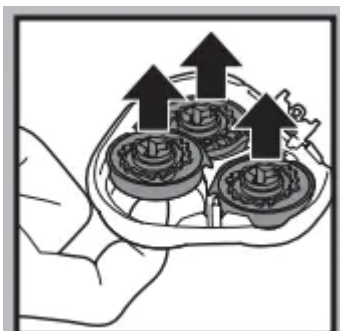

6. Separate the cutter from the comb and clean both parts under warm tap water. Do not clean more than one cutter and comb at a time, since they are all matching sets. If you accidentally interchange the cutters and combs, it could take several weeks before optimal shaving performance is restored.




7. Put the shaving head back into the shaving unit. Make sure the projections of the shaving head fits exactly into the recesses.




8. Repeat the process for the other two sets of cutters and combs

9. Replace the retaining frame (A) and turn the lock clockwise until it locks into place (B).

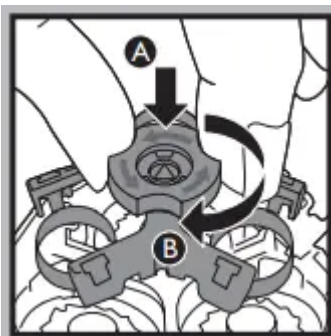

10. Insert the notch of the shaving unit into the slot in the top of the shaver and then close the shaving unit.

NOTE: If the shaving unit does not close smoothly, make sure you inserted the shaving heads properly and that the retaining frame is locked

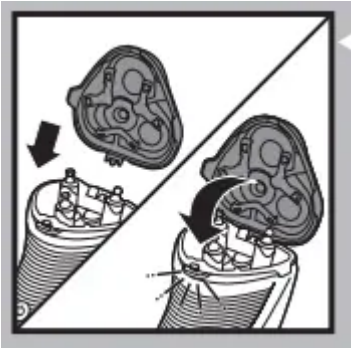


11. Put the Protective Cap on shaver to protect heads.

After Each Use: Trimmer

1. Push down spring-release trimmer switch



2. Turn shaver ON and rinse trimmer under warm tap water.

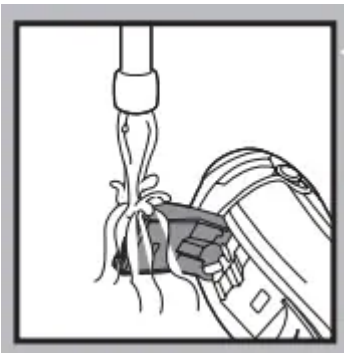

3. Turn shaver OFF and close the trimmer

4. Lubricate the trimmer teeth with one drop of mineral oil every 6 months



Replacing the Shaver Heads

- Replace the shaver heads once a year for optimal shaving results.
- Replace damaged or worn shaver heads with model SH30 Philips Norelco shaver heads only.

Shaver Head Replacement Indicator


The shaver head replacement indicator symbol will light up orange continuously to remind you to replace your shaver heads.




1. Turn shaver OFF, remove the charging plug from the outlet and power cord from the shaver.
2. Press the Shaver Head Release Button to open the shaving unit.




3. Pull the shaving unit off the shaver

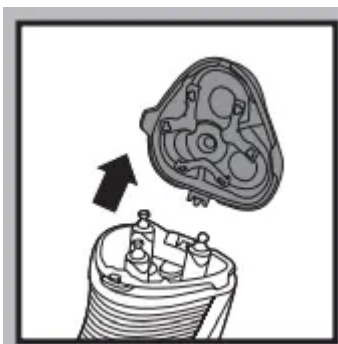


4. Turn the lock counterclockwise to unlock (A) and remove the retaining frame (B).

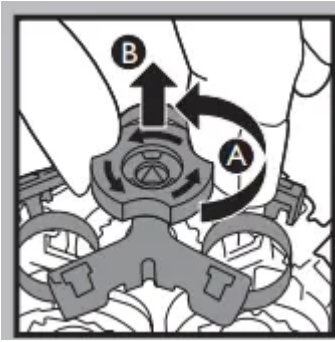

5. Remove the shaver heads and place the new shaver heads in the shaving unit. Make sure the projections of the shaving heads fit exactly into the recesses.

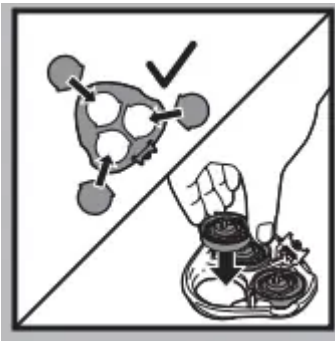

6. Replace the retaining frame (A) and turn the lock clockwise until it locks into place (B).

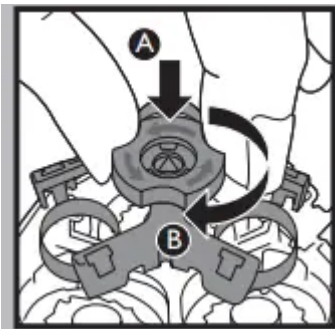


7. Insert the notch of the shaving unit into the slot in the top of the shaver and then close the shaving unit




NOTE: If the shaving unit does not close smoothly, make sure you inserted the shaving heads properly and that the retaining frame is locked

8. Press and hold the on/off button for at least 5 seconds to reset. The orange shaver head replacement indicator symbol will go out.

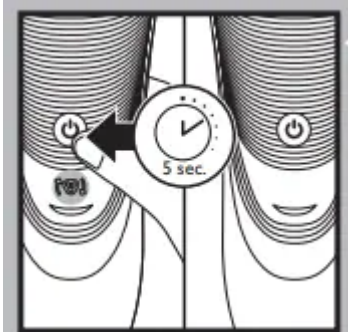

Storage

- The shaver can be placed in the storage pouch (S3580) for safe storage.
- Be sure shaver is turned off. Remove cord from outlet and shaver before storing in a safe, dry location where it will not be crushed, banged, or subject to damage.
- Do not wrap power cord around shaver when storing.
- Store cord in a safe location where it will not be cut or damaged.
- Do not place or store shaver where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.
- Put the Protective Cap on shaver to protect heads.

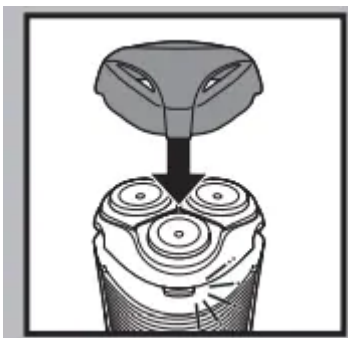

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

