

FEATURES

- Works with a TV, DVD or Blu-ray player, set-top box, and streaming device
- Programming by popular brand names for quick and easy setup
- Extensive code library for less common brands and devices
- Premium design, materials, and construction for rugged use

INSTALLING BATTERIES

- Insert two AA batteries (not included) into the remote. Make sure that the + and - symbols match the + and -symbols in the battery compartment. **Note:** To set up your remote, follow the setup steps below, in order, and STOP as soon as your remote works correctly.

PROGRAMMING YOUR REMOTE

There are three ways to set up your remote:

- Use “Setup method A: Popular brands” for pre-set popular brands.
- Use “Setup method B: Direct code entry” if your device's direct code is located on the back page.
- Use “Setup method C: Code search” to perform a code search for your device.

Note: This remote comes pre-set for Insignia

TVs and DVD players, DIRECTV set-top boxes, and AppleTV streaming.

If the remote control does not work with your device, use method B or C to change the setup.

Setup method A: Popular brands

1. Turn on your target device.
2. Press and hold **SETUP** until your remote's LED blinks twice.
3. Press the mode button for the type of device you want to set up (TV, DVD, STB, STREAM). The LED stays lit.
4. Press digit 0 - 3 to select the device that you wish to set up:
 - 0 - STB/cable/streamer
 - 1 - TV
 - 2 - DVD/VCR

3 - Audio/receiver/sound bar

5. Find your device type and brand in the tables below, then press and hold its number until your device turns off. Release the button when your device turns off and the remote's LED blinks twice. Setup for that device is complete.


Note: If your brand does not appear in the table below, use "Setup method B: Direct code entry" or "Setup method C: Code search."

#	TV	BLU-RAY/DVD
1	Insignia	Insignia
2	LG	LG
3	Panasonic	Panasonic
4	Philips, Magnavox	Philips, Magnavox
5	Samsung	Pioneer
6	Sharp	Samsung
7	Sony	Sharp
8	TCL	Sony
9	Toshiba	Toshiba
0	VIZIO	Yamaha



#	SET-TOP BOX	AUDIO
1	AT&T	Bose
2	Bell	Denon
3	Comcast, Xfinity	LG
4	Cox Communications	Onkyo
5	DIRECTV	Panasonic
6	DISH Network	Philips
7	Frontier Communications, Verizon	Pioneer
8	Rogers	Samsung
9	Shaw	Sony
0	Spectrum	Yamaha

Setup method B: Direct code entry

1. Turn on your target device.
2. Press and hold SETUP until your remote's LED blinks twice.
3. Press the mode button for the type of device you want to set up (TV, DVD, STB, STREAM). The LED stays lit.
4. Enter the first 5-digit code for your brand from the code list (see "TV CODE LIST" on page 12).
5. Press the  (power) button to test your device. If your device turns off and the remote's LED blinks twice, setup is complete.
6. If the device does not turn off, repeat steps 2-5 using the next code for your brand or use "Setup method C: Code search."

Setup method C: Code search

1. Turn on your target device.
2. Press and hold SETUP until your remote's LED blinks twice.
3. Press the mode button for the type of device you want to set up (TV, DVD, STB, STREAM). The LED stays lit.
4. Press digit **0 - 3** to select the device that you wish to set up:

0 - STB/cable/streamer

1 - TV

2 - DVD/VCR

3 - Audio/receiver/sound bar


5. Press and hold **OK** until your device turns off. Release the button when your device turns off and the remote's LED blinks twice. Setup for that device is complete.

USING YOUR REMOTE


1. Press the mode button (**TV**, **DVD**, **STB**, **STREAM**) for the type of device you want to control.
2. Press the buttons applicable to that type of device.

WATCH TV MODE

While watching TV in STB and STREAM mode, you can:

- Use your remote's volume and input buttons to control the TV. The rest of the buttons control the device you've added to STB or STREAM mode.
- Press  (power) once to turn your set-top box on or off.

OR

- Press and hold  (power) for two seconds to turn both your set-top box and your TV on or off.

To turn off watch TV mode:

1. Press and hold **SETUP** until your remote's LED blinks twice.
2. Press **STB** or **STREAM** twice. The LED blinks four times. Watch TV mode is turned off and your remote will not control your TV.

To turn on watch TV mode after turning it off:

1. Press and hold **SETUP** until your remote's LED blinks twice.
2. Press **STB** or **STREAM** twice. The LED blinks twice. Watch TV mode is turned back on and your remote controls your TV again.

LOCKING AND UNLOCKING VOLUME CONTROLS

To lock the volume of all four modes to one device, turn off watch TV mode. See "Watch TV mode" for instructions.

Locking volume controls to one device

1. Press and hold **SETUP** until your remote's LED blinks twice.
2. Press 9, 9, 3.
3. Press the mode button for the type of device you want to set up (TV, DVD, STB, STREAM). The LED blinks twice to confirm.

Two blinks = Success

One long blink = Failure

Unlocking volume controls

1. Press the mode button (TV, DVD, STB, STREAM) for the device you want to unlock the volume for.
2. Press and hold **SETUP** until your remote's LED blinks twice.
3. Press 9, 9, 3, then press Vol Down ▼.

OR

To unlock the volume for all devices, press 9, 9, 3, then press Volume Up [▲].

If you want to lock the channel of all four modes to one device, deactivate Watch TV mode as described above.

Locking channel controls to one device

1. Press and hold **SETUP** until your remote's LED blinks twice.
2. Press **9, 7, 3**, then press **CH ▲**.
3. Press the mode button for the type of device you want to set up (**TV, DVD, STB, STREAM**). The LED blinks twice to confirm.

Two blinks = Success

One long blink = Failure


Unlocking channel controls


1. Press and hold **SETUP** until your remote's LED blinks twice.
2. Press **9, 7, 3**, then press **CH -**.


RESETTING REMOTE TO FACTORY DEFAULTS

1. Press and hold **SETUP** until your remote's LED blinks twice.
2. Press **9, 7, 7**.

REMOTE OVERVIEW

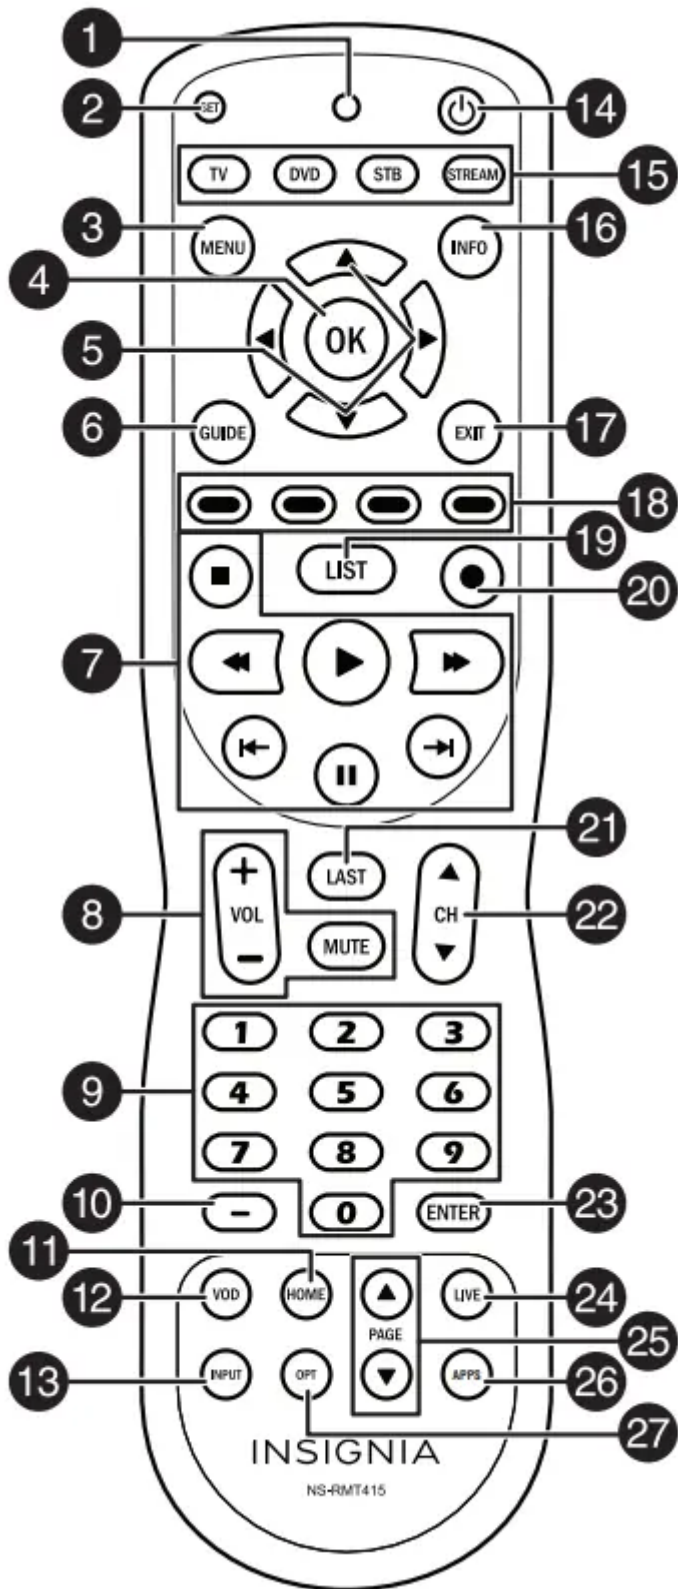

#	ITEM	DESCRIPTION
1	LED	Lights when buttons are pressed
2	SET	Programs the remote
3	MENU	Displays the main menu
4	OK	Confirms a selection
5		Navigate through menu items
6	GUIDE	Displays the program guide
7	Control buttons	Controls playback
8	VOL + /- and MUTE	Raises or lowers the volume and mutes the sound
9	Numbers	Enter channel numbers
10	Delimiter (-)	Enters a digital sub-channel number (for example 4.1)
11	Home	Opens the HOME menu
12	VOD	Press to order Video-on-demand or Pay-per-view

13	Input	Selects INPUT/SOURCE to be displayed (for example HDMI 1)
14	 Power	Turns devices on and off
15	TV, DVD, STB, STREAM	Press to control a TV, DVD, set-top box, or streaming device
16	INFO	Displays info on the current program
17	EXIT	Exits the current menu
18	Red, green, yellow, blue	Shortcut keys in some menus
19	LIST	Displays a LIST of current TV programs

#	ITEM	DESCRIPTION
20	● Record	Starts or stops recording
21	LAST	Return to the last channel
22	CH + / -	Changes the channel
23	ENTER	Confirms selections
24	LIVE	Return to live TV after watching a recording or streamed content
25	PAGE ▲▼	Scrolls up/down a page in menus
26	APPS	Opens a smart device's app menu
27	OPT	Opens the options menu



TROUBLESHOOTING

PROBLEM	SOLUTIONSOLUTION
The LED does not turn on when a key is pressed.	<ul style="list-style-type: none">• Replace the batteries.• Make sure that your batteries are installed correctly. The + and -symbols should match the symbols inside the battery compartment.
The LED turns on, but the remote does not control my device.	<ul style="list-style-type: none">• Make sure that your remote is programmed to your device.• Make sure that your remote is set to the correct mode (TELEVISION or TV/DVD/STB/STREAM).
I have tried all of the codes for my device's brand, but none of them work.	<ul style="list-style-type: none">• Use <i>Setup Method C: Code Search</i>.

LEGAL NOTICES

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.