

Shortcuts Instructions

You can use shortcuts on the remote control for fast operation. Refer to the “ Quick Setup Guide ” for more information.

Turning your TV on or off

To turn your TV on or off:

1. Plug the AC power cord into a socket outlet of AC power supply.
2. When the TV is powered on, press the [Ⓢ] button on the remote control, to turn TV on or off.

NOTES

- When your TV is in standby mode, it is still consuming power. To completely disconnect power, please remove the mains plug from the mains socket.
- If your TV does not receive an input signal for several minutes, it automatically goes into standby mode.

Selecting the Input Source

Select the Input Source depending on the video device you have connected to your TV.

To select the input source:

1. Turn on your TV, then press the [INPUT] button on the remote, the list of Source appears.
2. Press the [< / >] buttons to select the input source.
3. Press the [OK] button to confirm your selection.

Live TV

Channel search guide

When you select DTV as input, if no TV channels were saved before, you will be prompted to do a channel search. Before channel tuning could start, you must specify the tune mode, Antenna or Cable. You can also go to Full setting menu-> channel to change the channel settings.

Launch Live TV

After channel tuning is done for the first time, the screen will display Live TV operating tips, including: how to start the channel list, how to start the PVR / T.Shift, how to start channel info and so on.



NOTE This feature ‘View recent channel’ is only applicable to some locations.

EPG

It provides convenience to check TV programs that will be available in the next 7 days. The information displayed by the EPG is made available by the commercial television networks for digital channels only. The EPG also provides a simple way to program the recording of your favorite programs and a reminder function which can switch channel automatically at scheduled time so that you do not miss programs of interest. (The availability and amount of programme information will vary, depending on the particular broadcaster).

Press the [EPG] button on the remote control to display channel information on program guide list.

Watch

- When a current program is selected, press the [OK] button to watch it in full screen mode.

PVR/Reminder

Press the [a / v] buttons to select the channels. Press the [< / >] buttons to select program based on the time schedule.

Press the [OK] button on the remote control to select PVR or Reminder. Press the [a / v] buttons to change and set a different options.

- Select and set Start time/Stop time:

Press the [< / >] buttons to move to the position you want to set and then press the [0-9] buttons to input the desired numbers.

- Repeat: You can select from Once, Everyday and Weekly.

NOTES

- Reminder is only available for programmes that haven't been aired yet.
- A storage device must be attached to the television for recording purposes.
- The TV will record the program even in standby mode.

Page Up/Down

Press the [CH+/CH-] buttons to move programme listing page up/down.

Schedule

Press the [RED] button to view a list of scheduled reminders and recordings.

CH.List

Press the [GREEN] button on the remote control jump to the Channel List Selection right away.

24+

Press the [YELLOW] button to select the next day programmes.

24-

Press the [BLUE] button to select the yesterday programmes.

PVR/T.Shift

PVR

The PVR enables the user to easily record the digital television content for later viewing. The function is to be used in DTV source only. The format of storage disk must be FAT32 or NTFS. This option does not commerce if the data storage device has not been connected.

There are two options for recording, the first option is to use Electronic Program Guide (EPG), the second option is to press the [v] button to select PVR or T.Shift.

Press the [■] button to stop record and a *.PVR file will be saved. The files can be played back in Media.

T.Shift

This option allows the user to watch a live broadcast (DTV only) with a delay. Since the function record temporary the program onto a hard disk only. Please connect a hard disk and the storage capacity of not less than 1G. Otherwise the recording will not commerce.

Press the [T.shift] button on the remote control to display the menu, press the [II] button to pause the live broadcast and press the [▶] button to play. Press the [◀◀] button to watch reverse and press the [▶▶] button to watch advance playback rapidly. Press the [■] button to exit the function and watch the current broadcast.

NOTES

- When connecting a hard disk, always connect the mains adapter of the connected device to the power supply.
- If a USB 1.1 or USB2.0 device requires more than 500mA or 5V, the USB device may not be supported. Exceeding the max supported current may result in damage or data loss.

- The maximum supported storage space of the hard disk is 1T.
- If you want to store the video streaming of a DTV program, the transfer rate of the USB storage device must not be less than 5MB/s.
- The PVR function is not supported for analogue channels.
- The PVR functions are disabled for channels locked with Channel Lock or scrambled channels (CI module or password needed).

Menu

How to use the Menu

1. Press the [⚙️] button to open the Quick Setup menu.
2. Press the [➤] button to view the full menu settings.
3. In each menu, you can:
 - Press the [A / v] buttons to select an item
 - Press the [OK] button to enter the submenu
 - Press the [← / →] buttons to adjust the value
 - Press the [BACK] button to return to the previous menu
4. Press the [EXIT] button to exit the menu.

NOTE The menus in the user manual may vary slightly from the actual screen.



Using the Picture Menu

The picture setting allows the user to optimize the output quality picture of the TV.



Picture Mode

For setting up the picture mode and improving the TV picture quality.

If you'd like to configure the settings for your picture, select the correct picture mode from the following options: Standard, Dynamic, Natural, Theater, Game, Sport.

Brightness

Adjust the Brightness level to generate lighter or darker images.

Contrast

Adjust the Contrast level to increase or decrease how bright images appear.

Color

Adjust the color intensity of the picture for a more vibrant image.

Aspect Ratio

Adjust the Aspect Ratio to stretch or zoom in on your picture. You can choose from the following settings: Normal, Zoom, Wide, Cinema, 1:1 PIXEL MAP, Panoramic, Direct or Auto.

Backlight

Some models have a Dynamic Backlight Control setting that you can turn 'Off' and set to 'High' or 'Low'.

Partial support local dimming models show only Local Dimming menu.

The Backlight option can set the overall brightness of the screen.

Advanced Picture Settings

Adjust advanced picture settings based on your viewing preference.

- Display: Adjust advanced picture settings in the component source.

 
- **Overscan:** Change the video size settings to slightly crop the edges of the displayed image.
- **Tint:** Adjust the colors from a green to magenta tint to view the natural skin tones of people on the screen.
- **Sharpness:** Adjust how sharp or soft edges of images appear.
- **Noise Reduction:** Improve how clear the picture appears by reducing noise.
- **Adaptive Contrast:** Automatically darken dark areas and lighten light areas of images to see more details.
- **Color Temperature:** Select a preset color temperature.
- **White Balance:** Adjust the intensity of red, green and blue lights to view the true colors of all images in the picture.
- **Color Tuner:** Adjust the Hue, Saturation and Brightness of color settings.

Restore Default Picture Settings

Restore all the picture settings in the current picture mode to the factory default values.

Using the Sound Menu

The sound setting allows the user to optimize the output audio sounds of the TV.

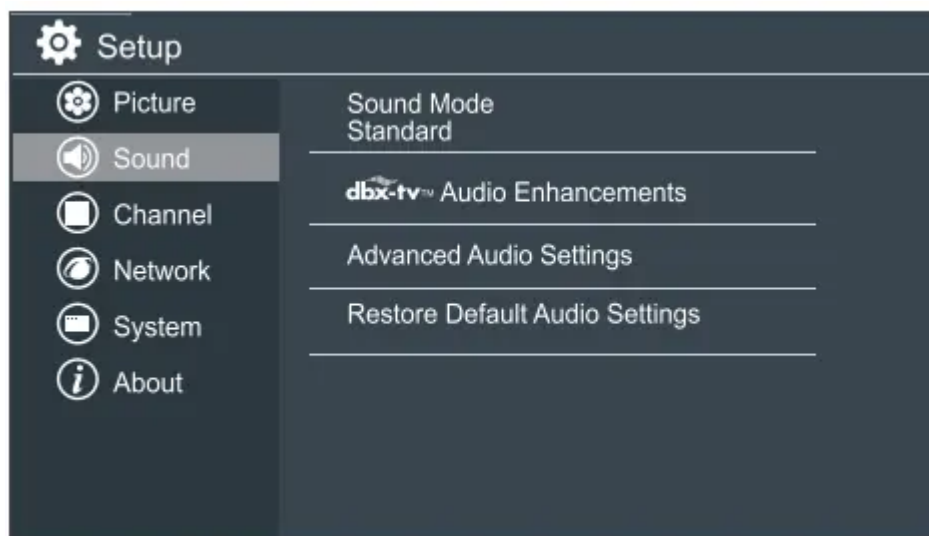

Sound Mode

Select a preset sound mode to suit the type of content you are listening to: Standard, Theatre, Music, Speech and Late Night.

dbx-tv Audio Enhancements

Total Technology™ delivers the best possible audio experience from your TV.

Total Sonics™ Total Sonics: Optimizes overall sound quality by increasing bass, making dialog clear and natural, and widening the sound field.

Total Surround™ Total Surround: Provides surround sound experience with psycho-acoustic processing to place sounds beside, behind, and above the viewer. For best results use with Total Sonics.

Total Volume™ Total Volume: Maintains consistent loudness levels from wide dynamic range programs, too-loud commercials, and channel or input changes.

Advanced Audio Settings

Tune the audio settings and quality of the TV.

Equalizer: Boost the volume at different frequencies.

Lip Sync: Synchronize the displayed image with the audio output.

Balance: Adjust the left and right speaker strength to optimize audio for a specific location.

Digital Audio Out: Select the digital audio output format that best suits the audio device type. For example, choose RAW (which is uncompressed audio in RAW form) if you have 5.1 Channel Surround Sound Speaker set up. Choose PCM if you have an amplifier that does not support Dolby Digital technology.

Digital Audio Delay: Adjust the digital audio output delay time to sync sound from an external speaker with the images on the TV.

TV Speaker & ARC: Select the TV speaker or an external speaker for sound output.

 
Audio Out: Change the way audio is sent through the type of device that's connected to your TV Audio Out port. You can select Variable or Fixed. Audio out variable: The remote control can control the headphone. Audio out fixed: The remote control can not control the headphone.

Audio Type: Select the normal or visually impaired to change AudioType of your TV.

Restore Default Audio Settings

Restore all of the audio settings in current audio mode to the factory default values.

Using the Channel Menu

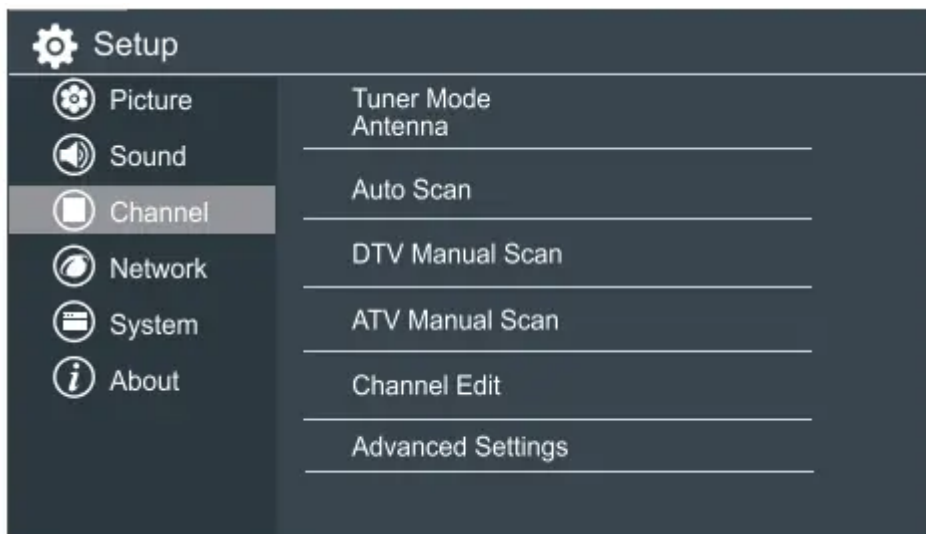

Tuner Mode

Select Tuner Mode if you receive TV channels over the air (antenna) or through a cable set top box. The input will be used during a channel scan.

Auto Scan

Automatically scan for channels to view programming from your TV source.

DTV Manual Scan

Allow you to make manual fine tuning adjustments of the channel under DTV mode.

When the DTV Manual Scan screen pops, select Adjust and then press the [\wedge / \vee] buttons to select the desired Channel Number. Select Start to commence the search of that channel. When the signal has been tuned, signal strength will be displayed on the screen.

ATV Manual Scan

Allows you to make manual fine tuning adjustments if the channel reception is poor under ATV mode.

Frequency: Input the channel frequency which you desired.

Picture System: Select the Picture System: Auto, SECAM, PAL, NTSC.

Sound System: Select the sound system: B/G, D/K, L, L', M, I(L only for SECAM).

Channel Edit

Display the Channel List: Click to check the need to display or hide the Channel List.

Edit the channels:

- Delete/undo: Press the [RED] button to delete the selected channel or resume the channel from the list of deleted channels.

- Move: Press the [GREEN] button to move the selected channel.
- Rename: Press the [YELLOW] button to rename the selected channels.

Advanced Settings

 
Common Interface: View the CI card Information.

CI Card PIN: Set the CI CAM pin.

CAM Profile Search: Operate Profile Search.

NOTE CI card does not support the market does not have the options.

Using the Network Menu

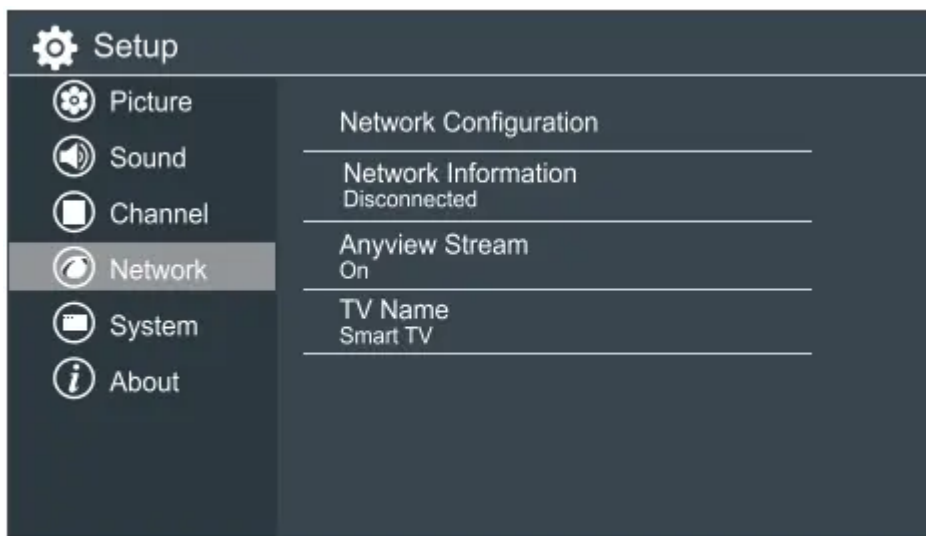

Network Configuration

You can set the TV network by selecting Network Configuration and press the [OK] button to enter the submenu. Click to check the Accept EULA.

Connection Type: Ethernet

Choose a wired network connection to access the Internet.

Ethernet: Display the network connection status.

IP Setting Mode: Configure the IP setting for your network connection.

Connection Type: Wireless

Choose a wireless network connection to access the Internet.

Advanced Settings: Configure the advanced wireless network settings for the TV.

Available Networks: Select an available network to connect. And you can also add wireless network or refresh wireless network.

Connection Type: Off

Turn off the Internet connection.

Network Information

View information about your network connection.

 
Anyview Stream

Share video, music or other content from compatible device on to your TV screen.

TV Name

Choose a name for your TV. The name will be shown to devices that are available for sharing data.

Using the System Menu

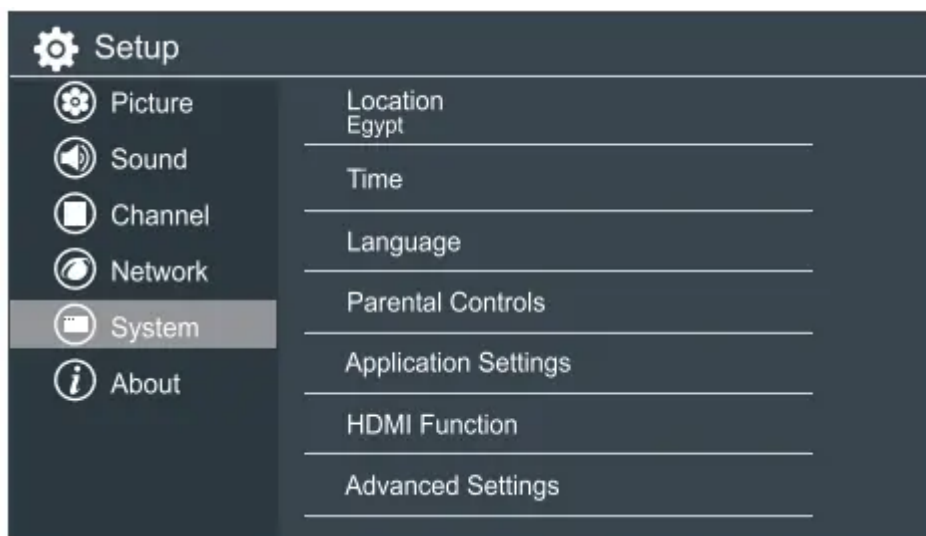

Location

Choose the location from where you will watch your TV.

Time

Set the current time based on your location

Time Zone: Select your location time zone.

Time Format: Set the time to display in a 12 or 24-hour format.

Daylight Savings: Change time automatically when daylight saving time applies, or set the clock forward 1 hour manually.

Date/Time: Set the Date and Time.

Power on Timer: Enable the Power On Timer to Off, Once or Daily.

Power off Timer: Enable the Power Off Timer to Off, Once or Daily.

Sleep Timer: Set the Sleep Timer to automatically turn the TV Off within a specified time: Off, 10 Minutes, 20 Minutes, 30 Minutes, 40 Minutes, 50 Minutes, 60 Minutes, 90 Minutes and 120 Minutes.

Language

Adjust the default language settings for the TV.

Parental Controls

Turn On Parental Controls to block children from being able to view certain programs. Then you can create pin.

Locks: Enable or disables all locks. All selected locks can be turned off for parental viewing and easily turned on again.

Block Time: Block certain channels and programs during certain periods of time.

Channel Block: Block programs by channels when you turn On the Parental Controls feature.

Program Block: Block certain programs when your turn On the Parental Controls feature.

Input Block : Block content from devices that are connected to certain TV ports.

Change PIN: Change your PIN that you use to access Parental Controls. If you want to change your parental control password, first enter the new password then enter the same password again.

NOTE If you forget your password, call the Consumer Electronics Care Center or reset your TV back to the factory settings.

Restore Parental Control Defaults: Restore Parental Control back to the factory default setting.

Application Settings

Only for the part of the default built-in application models, this menu you can adjust the settings applied.

HDMI Function

Configure how to control CEC-enabled devices with your TV remote.

CEC&MHL Control: Allow HDMI devices to control each other.

Device Auto Power Off: Automatically turn off HDMI CEC devices when the TV is turned off.

TV Auto Power On: Allow the TV to turn On with CEC-enabled devices.

Device Connect: Allow CEC-enabled devices to communicate with each other when connected through an HDMI cable.

CEC Device Lists: View a list of all CEC-enabled devices.

NOTE

HDMI cables must be used to connect HDMI CEC-compatible devices to your TV.

The HDMI CEC feature of the connected device must be turned on.

If you connect an HDMI device that is not HDMI CEC-compatible, all the HDMI-CEC control features do not work.

Depending on the connected HDMI device, the HDMI-CEC Control feature may not work.

Advanced Settings

Access the Advanced Settings menu.

Menu Timeout: Set the amount of time that you'd like for the menu to display :10s, 20s , 30s , 60s or Off.

Use Mode: Set the TV to use in Home or Store Mode.

PVR & T.Shift: Set the disk partition and storage space size where you want to store your PRV/T.shift contents. (Since the function record temporary the program onto a hard disk only.)

PVR time setting: Set PVR recording time in advance or in delay.

Start in advance: Set PVR recording time in advance.

Delay ending: Set PVR recording time in delay.

Subtitle Mode: Allows you to select the subtitle mode.

 
Input Labels: Edit the input labels.

Default LiveTV Source: Select the default input on the remote control Live TV.

Setup Wizard: Use the Setup Wizard for instructions to help you set up your TV.

Power Indicator: Set the Power Indicator light to stay On or Off in standby mode.

NOTE The Power Indicator function is only applicable to the products which support it.

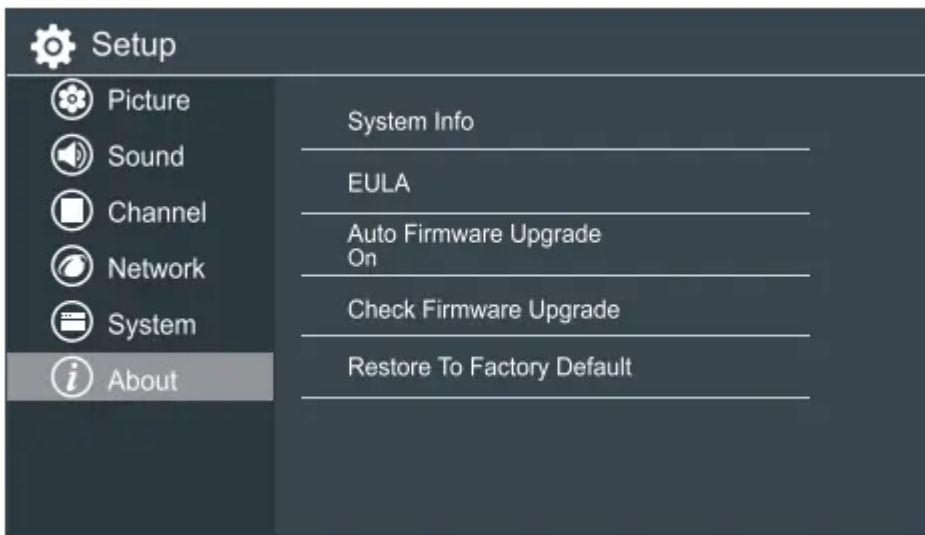

System Info

View system information.

EULA

Accept EULA.

Help to improve the user experience of products.

Auto Firmware Upgrade

Set your TV to automatically receive the latest firmware.

Check Firmware Upgrade

Check to ensure that your TV has received the latest firmware.


Restore To Factory Default

Restore your TV back to the factory default.

 
Advanced Features

Getting familiar with the Home screen

The simple design of the Home screen menu makes it easy to navigate. It accesses Premium, My Apps, Media or Inputs.

To access the Home screen, press the [] button on your remote control and use the arrows buttons to make your selection.

NOTE The menus are only for reference, may vary slightly from the actual screen.

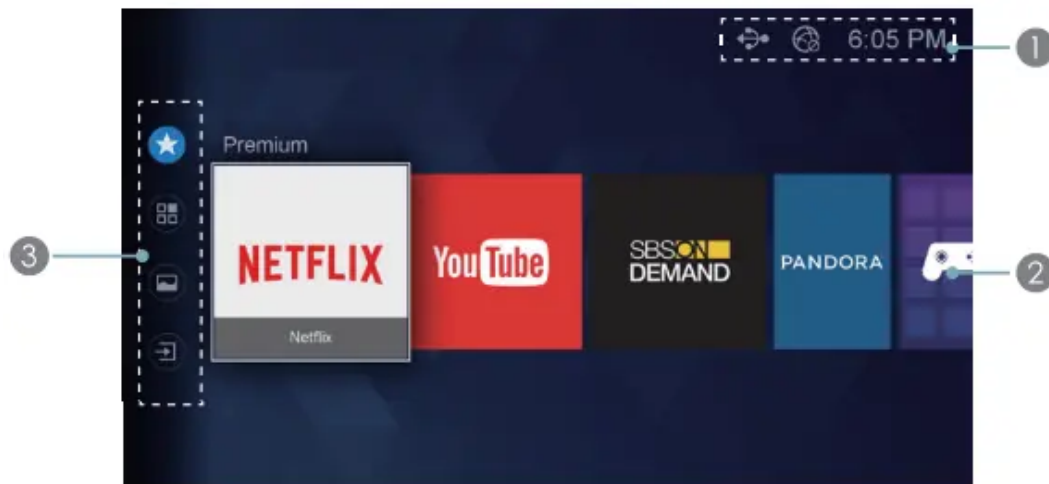

1. Indicators and Icons on the top of the Home screen

You can always view the current time in the top right corner of the Home screen.

If your TV is connected to the Internet through a wireless connection or an Ethernet cable, then an icon will display in the top right corner of the screen. This location makes it very convenient for you to determine if you still have Internet connectivity as you use the TV.

In addition, if you have connected a device (such as a thumb drive) to a USB port and your TV recognizes it, then a device icon will also display in the same area.

2. The Premium applications appear on the Home screen

When you access the Home screen, you can enter Premium, the recommended applications display on the screen. You can quickly enter these applications what you want.

3. The navigation bar appear on the Home screen

Press the [^ / v] buttons to select icons of the navigation bar, you can enter to Premium, My Apps, Media and Inputs.

LiveTV

To view broadcast programs, press the [jy] button on your remote.

Viewing Channel information

As you use the [CH+/CH-] button on your remote to scroll through channels, an information banner appears on the top of the screen.



The information banner displays the following information:

1. Channel number
2. Lock status
3. Input
4. Program name
5. Show identification
6. Channel name
7. Current date and time
8. Prompt
9. Beginning and end time of the next program
10. Start/Stop time progress bar of the current program
11. More info

If you are watching a particular channel, you can also press the up arrow button of your remote to view channel information.

Viewing a channel list


After you have done an automatic channel scan (if you're using an Antenna) or are receiving your channels through a cable provider, you can view your list of channels by pressing [OK] on your remote.

You will see the channel list display on the right side of the screen.

Creating a 'Favorites' list

To quickly access your most-watched channels, you can create a 'Favorites' list.

To create your 'Favorites' list:

1. Press the  button on your remote.
2. Select Channel > Channel Edit > FAV > Edit
3. Using the [\wedge / \vee] buttons of your remote, select a channel and press [RED].

FAV list will appear the channel as confirmation that it has been successfully added.

Viewing your 'Favorites' list

To view channels that you've added to your Favorites list simply press [OK] on your remote to call out the Channel list.

The channel list appears on the right side of the screen and heart-shaped icons are shown next to the channels that make up your Favorites list.

Apps

Premium

The recommended apps appear in the Premium section.

My Apps

Numerous factory-installed apps are available for you to choose from for your entertainment preferences.

Opera TV Store

Opera TV Store contains cloud-based apps optimized for your TV. The apps range from Video, Music, Social Networking, Games and News Information.

To begin using Opera TV Store, you simply need to accept the End-User License Agreement and then select the app that you want to use.

TV Browser

The TV Browser allows you to surf the Internet on your TV and provides quick access to the Google™ search engine.

To view a website or search using the TV Browser:

1. Using the Navigation buttons on your remote, navigate to TV Browser icon.
2. Press [OK] on your remote. The browser window displays.
3. Using the navigation buttons on your remote, navigate up to the URL bar to place your cursor there.
4. Press [OK] on your remote to bring up the on-screen keyboard.
5. Type the website address or search term on the text field.
6. Press the [Blue] special function button towards the top of the remote (under the number pad). The website address or search term you've typed populates in the URL bar window.
7. Select the forward arrow (to the right of the URL bar) and press [OK] on your remote to load the page or start the search.

Installing an App

Even though your TV has numerous factory-installed apps, there may be others that you'd like to download.

To install an app:

1. From the Home screen, click on the My Apps icon.
2. Navigate to Opera TV Store.
3. Navigate to the Search tab at the top of the screen.

4. Begin typing the name of the app. As you begin typing the first two to three letters the Opera Store suggests words to quicken your search time.
5. Use the navigation buttons of your remote to select the app. A page displays that shows a written description of the app.
6. Click on Open or Add to Favorites.

Removing an App

You can only delete apps that you've downloaded to the TV. Factory-installed apps can not be deleted.

To delete an app:

1. From the My Apps screen, use the directional arrows on the navigation buttons of your remote to select the app that you want to remove.
2. Press the [Red] on your remote control. A dialog message displays that asks if you're sure you want to remove the app.
3. Press [OK] on your remote.

A confirmation message displays and the icon is removed from the My Apps list.

NOTE: If an app is deleted, the information related to that app is also removed.

Moving App Icons around

Select the app you want to move, then press the [Green] on your remote control and press [A / v / < / >] to change order.

NOTE

- Apps may be updated without prior notice, please take the actual as standard.
- Some applications may not be available, depending on your TV series and the area you are.

Customizing the name of your TV

If you have several TV's in your home then you may want to customize the name of your TV. By giving your TV a name, it will make it easier for you to identify it when connecting devices to the TV to stream or mirror content.

To customize the name of your TV:

1. Press the [0] button on your remote to open the Quick Setup menu.
2. Go to Full menu settings > Network > TV Name.
3. Select User Input and press [OK] to bring up the keyboard and begin typing the name.
4. When you are finished, power off the TV and power it back on for the change to take effect.

Media

Media is a central location for you to upload and view or listen to different types of content (for example, your photos, music and movies) through the following methods:

- A USB thumb drive or hard drive
- Compatible mobile phone, tablet or other personal device: You can stream movies, pictures and photos that are stored on Compatible personal device and play or view the content on your TV.

When you connect your thumb drive or other personal device to the TV, the TV automatically detects it and displays a device icon in the top right corner of the Home screen.

Panels that appear on the Media screen

The Media screen displays four panels: All, Picture, Video, Music.

File formats that may be supported

NOTE: Due to differences in programming tools and other factors, some of the file formats that are listed may or may not be supported.

Medium	File Format
Videos	AVI, MP4, MKV
Picture	JPG, BMP, PNG, GIF
Music	MP3

Viewing Videos

While viewing videos you will see a number of icons appear at the bottom of the screen. You can use the navigation buttons of your remote to select these icons that will control the video.

Browsing Content

To browse through content based on the type that you wish to access:

1. Navigate to the appropriate menu tab on the left side of the screen and select All, Picture, Video or Music. The library of items displays on the right side of the screen.
2. Navigate to the right side of the screen and click on the name of the folder that contains your content.
3. Make your selection to play or view the content.

If you want to close out of the Media center, then press the [EXIT] button on your remote.

Viewing Pictures as a Slideshow

To view pictures in a slideshow:

1. Navigate to the Pictures tab.

2. Click on Start the Slideshow.


The slideshow of your pictures begins to play. To stop the slideshow, press the [OK] button on your remote and press it again to restart it.

Using Anyview Cast to mirror content from your device to the TV screen

The Anyview Cast is an app that enables you to share (or cast) a video, audio or image from your Android-based device to the TV.

From your tablet or phone

To mirror content from your tablet to the TV:

1. From the TV Settings, go to Setup > Network and turn on the Anyview Stream setting.
2. Press the  button on your remote and select the Input > Anyview Cast.
3. Turn on your Android-based device and go to Settings > Display > Cast Screen.

NOTE: Some Android-based devices may not support casting.

4. Find your TV in the list of devices that displays and select it.
5. Wait for the 'Creating Connection' progress bar to complete on the TV screen and the video or image will display in a moment.

Software updates for your TV

The software (also referred to as firmware) is part of what powers your TV. We will provide software updates to continuously enhance your TV and correct any issues that may impact your user experience; therefore, we recommend that you keep your TV connected to the Internet to automatically receive updates when they are available.

You can choose to receive updates automatically or check for software updates and install them manually.

Checking for updates automatically

In order for your TV to receive software notification updates automatically, it must be turned 'On' and connected to the Internet. The Auto Firmware Upgrade setting (which enables your TV to receive the updates automatically) is turned to 'On' by factory default. If you turn the Auto Firmware Upgrade setting 'Off', it will disable this functionality of your TV.

NOTE While your TV is on and checking for updates, the program that you are watching will not be interrupted.

Disabling the Auto Firmware Upgrade feature

If you do not want your TV to automatically check for updates and to receive notifications when they are available, then:

1. Using your remote, press the [0] button.
2. Go to About > Auto Firmware Upgrade and turn the feature 'Off

By doing this, you will have to manually check to see if you have the latest software update.

Checking for the latest firmware

To manually check for the latest firmware:

1. Using your remote, press the [0] button.
2. Go to About > Check Firmware Upgrade.

Manually installing software updates

If you have not kept your TV connected to the Internet or you turned the Auto Firmware Upgrade feature 'Off then you'll need to manually install the software.

If the Check Firmware Upgrade screen shows that an updated package is available, then:

1. From the Check Firmware submenu, select Download upgrade pack.
2. Follow the rest of the steps that display.

freeview

What is FreeviewPlus?

FreeviewPlus is a new television service delivered via broadband providing a state of the art Electronic Program Guide (EPG) and seamless access to catch-up TV across the free-to-air networks with the simple press of a button.

How does it work?

First ensure the TV is connected to internet and an antenna system. Then when you're watching TV, you'll briefly see a prompt at the top left of the screen. Press the 'Green' button on your remote to launch Freeview Plus. More information about FreeviewPlus can be found on <http://www.freeview.com.au/>

NOTE FreeviewPlus service only available in Australia territories.

Other Information

Troubleshooting

If the TV does not operate as usual or appears to be faulty please read carefully this section. Many operational issues can be resolved by users.

It is also advisable to unplug the TV from the AC socket on the wall for 60 seconds or more, then reconnect and start again. This simple procedure helps in restoring stable conditions for electric circuits and firmware of the unit.

Please contact Manufacturer Customer Care if the problem is unresolved or you have other concerns.



SYMPTOMS	POSSIBLE SOLUTIONS
No sound or picture.	<p>Check if the power cord is plugged into a powered AC outlet.</p> <p>Check to see if LED light is red. If illuminated, power to TV is OK.</p>
I have connected an external source to my TV and I get no picture and/or sound.	<p>Check for the correct output connection on the external source and for the correct input connection on the TV.</p> <p>Make sure you have made the correct selection for the input mode for the incoming signal.</p>
When I turn on my television, there is a few second delay before the picture appears. Is this normal?	<p>Yes, this is normal. That is the TV searching for previous setting information and initializing the TV.</p>
Picture is normal, but no sound.	<p>Check the volume settings.</p> <p>Check if Mute mode is set "on".</p>
Sound but no picture or black and white picture.	<p>If black and white picture first unplug TV from AC outlet and replug after 60 seconds.</p> <p>Check that the Color is set to 50 or higher.</p> <p>Try different TV channels.</p>
Sound and picture distorted or appear wavy.	<p>An electrical appliance may be affecting TV set. Turn off any appliances, if interference goes away, move appliance farther away from TV.</p> <p>Insert the power plug of the TV set into another power outlet.</p>
Sound and picture is blurry or cuts out momentarily.	<p>If using an external antenna, check the direction, position and connection of the antenna.</p> <p>Adjust the direction of your antenna or reset or fine tune the channel.</p>
Horizontal/vertical stripe on picture or picture is shaking.	<p>Check if there is interfering source nearby, such as appliance or electric tool.</p>

<p>The plastic cabinet makes a “clicking” type of sound.</p>	<p>“Click” sound can be caused when the temperature of the television changes. This change causes the television cabinet to expand or contract, which makes the sound. This is normal and the TV is OK.</p>
<p>Remote control does not work</p>	<p>Confirm that TV still has power and is operational.</p> <p>Change the batteries in the remote control.</p> <p>Check if the batteries are correctly installed.</p>
<p>Smart Television with wireless network capability Wi-Fi fail to join a local network.</p>	<p>Configure the local wireless router or access point for WPA-PSK security before attempting to connect the TV to the Wi-Fi network.</p> <p>Follow instruction in the User Manual of the television to setup a wireless connection</p>

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

