

## **IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock do not immerse cords, plugs, or appliances in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow cooling before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact Consumer Support at the toll-free number listed in the warranty section.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn the timer control to OFF ( ), then remove the plug from the wall outlet.
- Do not use appliances for other than intended use.
- Use extreme caution when removing the tray or disposing of hot grease.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Oversized foods or metal utensils must not be inserted in a toaster oven, as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the unit when in operation.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.

- Do not store any material, other than the manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not cover crumb tray or any part of this oven with metal foil. This will cause overheating of the oven.
- Turn the toaster oven OFF by turning the toast/timer selector knob to the ( ) (OFF) position.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.

## **GROUNDING PLUG**

As a safety feature, this product is equipped with a grounded plug, which will only fit into a three-prong outlet. Do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

## **TAMPER-RESISTANT SCREW**

**Warning: This appliance is equipped with a tamper-resistant screw to prevent the removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.**

## **ELECTRICAL CORD**

a) A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

b) Extension cords are available and may be used if care is exercised in their use.

c) If an extension cord is used:

1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;
2. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord; and

3. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

**Note:** If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

## Overview




The product may vary slightly from what is illustrated.

1. Easy-view glass door
2. Temperature selector knob (Part# TO1750-01, TO1755-01, TO1760-01) †
3. Cooking function selector knobs (Part# TO1750-02, TO1755-02, TO1760-02) †
4. Toast/timer selector knob (Part# TO1750-03, TO1755-03, TO1760-03) †
5. Power indicator light
6. Crumb tray (Part# TO1745-04) †
7. Bake pan/drip tray (Part# TO1745-05) †
8. Slide rack/broil rack (Part# TO1745-06) †
9. Extra deep curved interior

**Note:** † indicates consumer replaceable/removable parts

**There are three ways to turn the toaster oven ON:**

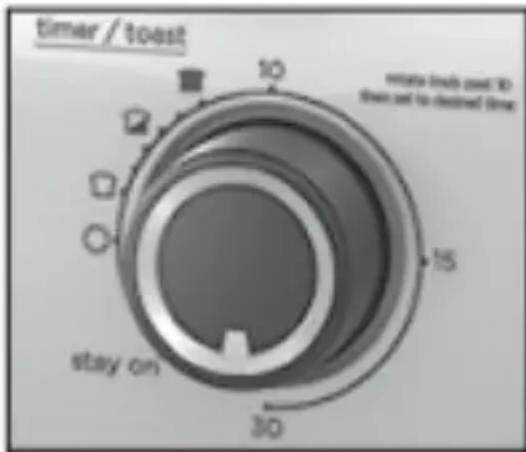

- Turn the toast/timer knob to “Stay On”.
- Turn the toast/timer knob past 10 and then back to desired toast shade.
- Turn the toast/timer knob past 10 and then to the desired time.

To turn it **OFF**, turn the toast/timer knob to the  position.

## HOW TO USE

CAUTION: THIS OVEN GETS HOT. WHEN IN USE, ALWAYS USE OVEN MITTS OR POT HOLDERS WHEN TOUCHING ANY OUTER OR INNER SURFACE OF THE OVEN.

Caution: Do not leave the oven unattended when in operation. Food ignition may occur. If this happens, unplug the unit but DO NOT open the door. To reduce the risk of fire, keep the oven interior completely clean and free of food residues, oil, grease, and any other combustible materials.

Caution: A fire may occur if the toaster oven is covered or touching flammable materials including curtains, draperies, walls, and the like when in operation or after, when still hot. Do not place any of the following materials in the oven, on top of the oven, or in contact with the oven sides or bottom surfaces: paper, cardboard, plastic, or the like.

## GETTING STARTED

- Remove all packing material, stickers, and plastic bands around the power plug.
- Please go to [www.prodprotect.com/blackanddecker](http://www.prodprotect.com/blackanddecker) to register your warranty.
- Wash all removable parts as instructed in CARE AND CLEANING.
- Select a location where this unit is to be used, allowing enough space from the back of the unit and the wall to allow heat to flow without damage to cabinets and walls.
- Plug the unit into an electrical outlet.

## IMPORTANT INFORMATION ABOUT YOUR OVEN

- This oven gets hot. When in use, always use oven mitts or potholders when touching any outer or inner surface of the oven.
- During the first few minutes of use, you may notice smoke and a slight odor. This is normal and should cause no concern.
- You must set the timer or select STAY ON for the oven to function.

**IMPORTANT:** Be sure food or baking dish does not come within 1 1/2 inches of the top heating elements.

**IMPORTANT:** Food should not extend beyond the edges of the bake pan/drip tray to avoid drippings from falling onto the heating elements.

## TOASTING

**It is not necessary to preheat the oven for toasting.**

1. Set the temperature selector knob to the TOAST position.
2. Set the cooking FUNCTION selector knob to TOAST.
3. Open the oven door and insert the slide rack.
4. Place items to be toasted directly on the slide rack and close the door.
5. Turn the toast shade selector knob to 10 and then turn back to desired toast shade.
6. The indicator light comes on and remains on until the toasting cycle is complete.
7. When the toast cycle is complete, there will be an audible signal. The oven and the indicator light will go off.
8. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the toast.
9. Unplug the appliance when not in use.



For best results, place the bread in the locations shown.

**NOTE:** You must set the toast shade selector knob as desired for the oven to begin toasting.

## NATURAL CONVECTION BAKING

**NOTE:** For best results, when baking or cooking, always preheat the oven for at least 10 minutes at the desired temperature setting.

1. Set the temperature selector knob to the desired temperature.
2. Turn the FUNCTION selector knob to BAKE.

3. Turn the TIMER selector knob to 10 and then turn back or forward to desired baking time, including preheat time. (Select STAY ON to bake longer than 30 minutes or to control cooking time yourself.)
4. The power indicator light comes on and remains on during the entire baking time.
5. The heating elements will cycle on and off to maintain even heat distribution.
6. Once the oven has preheated, open the oven door and insert food. Close the oven door.  
**NOTE:** Use a metal, glass, or ceramic baking dish placed on the slide rack.
7. If using the oven timer, there will be an audible signal once the baking cycle is complete. The oven turns off and the light goes out. If not using the oven timer, turn the oven to OFF ( ) once the cooking cycle is complete.
8. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the cooked food.
9. Unplug the appliance when not in use.

## **BROILING**

**NOTE:** When broiling, preheat the oven for 10 minutes.

1. Set the temperature selector knob to BROIL.
2. Turn the FUNCTION selector knob to BROIL.
3. Open the oven door and use the baking pan as a drip tray, insert it under the slide rack and place food directly on the slide rack/broil rack.
4. Set the timer selector knob to 10 then turn back or forward to desired broiling time, including a 5-minute preheat or to STAY ON. **NOTE:** You can cook your food in 3 ways: Use the bake pan/drip tray placed on the slide rack; Place the bake pan/drip tray under the slide rack/broil rack; Place the food directly on the slide rack/broil tray.
5. When finished broiling, the signal bell sounds. Turn the TOAST/TIMER selector to the OFF ( ) position. The power indicator light goes off.
6. Using an oven mitt or pot holder, slide out the broiling rack together with the baking pan to remove food.
7. Unplug the appliance when not in use.

## **KEEP WARM**

1. Turn the temperature selector knob to KEEP WARM.
2. Turn the function selector knob to keep KEEP WARM.
3. Turn the Toast/Timer selector knob past 10 and then turn back or forward to desired warming time. (Select Stay On to control cooking time yourself.) **NOTE:** This feature is designed to keep already cooked foods warm after they have been cooked. This function

should be used for short periods of time; to prevent food from drying out, cover it with foil.

4. When a cycle is complete, there will be an audible signal. The oven and the power ON indicator light will go off.
5. If not using the oven timer, turn the Toast/Timer selector knob to OFF ( ) once the cycle is complete.
6. Unplug the appliance when not in use.

## CARE AND CLEANING

This product contains no user-serviceable parts. Refer service to qualified service personnel.

### CLEANING

**Important: Before cleaning any part, be sure the oven is off, unplugged, and cool.**

1. Clean the glass door with a sponge, soft cloth or nylon pad, and sudsy water. Do not use a spray glass cleaner.
2. To remove the slide rack, open the door, and pull the rack forward and out. Wash the slide rack in soapy water or in a dishwasher. To remove stubborn spots, use a polyester or nylon pad.
3. Wash the baking pan in sudsy water. To minimize scratching, use a polyester or nylon pad.

### CRUMB TRAY

1. Grasp the handle and pull out the tray.
2. Dispose of crumbs and wipe the tray with a damp cloth; dry thoroughly before placing back in the oven.

### EXTERIOR SURFACES

Wipe the top and exterior walls with a damp cloth or sponge. dry thoroughly.

### COOKING CONTAINERS

Metal, ovenproof glass, or ceramic bakeware without glass lids can be used in your oven. Follow the manufacturer's instructions. Be sure the top edge of the container is at least 1 1/2" (3.81 cm) away from the upper heating elements.

## NEED HELP?

For service, repair, or any questions regarding your appliance, call the appropriate 800 number on the cover of this book. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail the product back to the manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

## **Two-Year Limited Warranty** **(Applies only in the United States and Canada)**

### **What does it cover?**

- Any defect in material or workmanship provided; however, the liability of Spectrum Brands, Inc. will not exceed the purchase price of the product.

### **For how long?**

- Two years from the date of the original purchase with proof of such purchase.

### **What will we do to help you?**

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

### **How do you get service?**

- Save your receipt as proof of the date of sale.
- Visit the online service website at [www.prodprotect.com/blackanddecker](http://www.prodprotect.com/blackanddecker), or call toll-free 1-800-465-6070, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

### **What does your warranty not cover?**

- Damage from commercial use
- Damage from misuse, abuse, or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

### **How does state law relate to this warranty?**

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

#### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

