

KNOW YOUR BREVILLE MUFFIN MAGIC


Easy clean non-stick coating for easy removal of muffins.
[To preserve surfaces, use only plastic or wooden utensils.]

1400 watts for quick baking.

Deep baking plates for over-sized muffins.
Muffin Magic bakes between 1 to 3 muffins at a time.

Red 'On' light clearly indicates when
unit is switched on and in pre-heating mode.

Green 'Ready' light clearly
indicates when unit is ready for baking.

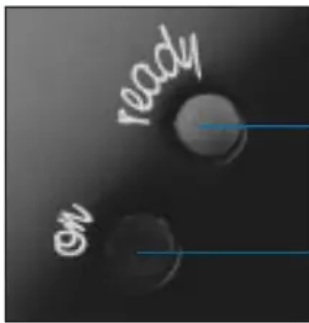

Plastic spatula (not shown).



Non skid base for stability.
Stand up storage.

Features the unique
Breville Assist Plug.
Easier to insert, easier
to remove.



Registered design.



OPERATING YOUR BREVILLE MUFFIN MAGIC

BEFORE FIRST USE

Check that the cooking plates are clean and free of dust. Lightly wipe cooking plates with a damp cloth.

1. Plug appliance into an outlet.
2. Close the lid and switch 'on'. The red 'on' light indicates that the unit is heating to the correct temperature. The green 'ready' light will light up when Muffin Magic has reached the correct temperature and is ready for cooking.
3. Pre-heat Muffin Magic until green 'ready' light lights up. (Lid must be closed.)
4. Open lid on Muffin Magic and spoon the prepared muffin mixture into baking molds.
5. Close the lid. Do not open the lid during the cooking process. This allows heat to escape and extends the cooking time.
6. Muffins should cook for the recommended cooking time or until they reach the desired shade of golden brown.
7. Remove muffins with a plastic spatula. 8. Place muffins on a wire cooling rack for 5 minutes.



NOTE: Do not use metal utensils as these may scratch the non-stick finish of the cooking plates.



CARE SHOULD BE TAKEN WHEN USING THE MUFFIN MAGIC AS THE UNIT BECOMES HOT WHEN IN USE.

Your Muffin Magic has a short cord as a safety precaution to prevent personal injury or property damage resulting from pulling, tripping or becoming entangled with the cord. Do not allow children to be near or use this appliance without close adult supervision. If you must use a longer cordset or an extension cord when using appliance, the cord must be arranged so it will not drape or hang over the edge of a countertop, tabletop or surface area where it can be pulled on by children or tripped over. To prevent electric shock, personal injury or fire, the electrical rating of the extension cord you use must be the same or more than the wattage of the appliance (wattage is marked on underside of appliance).

BAKING TIPS

HINTS FOR BEST RESULTS

1. Allow enough heating time between batches for the unit to return to the correct baking temperature and the green 'ready' light to light up.
2. Use a 1/3 cup (or 5 tablespoons) to measure out mixture. This produces evenly-sized muffins. The maximum mixture fill level is at the top of each mold. Do not allow the mixture to overflow from the mold; baking results of the muffins will be more desirable if they do not touch the top of the appliance.
3. Do not over-stir or beat muffin mixture. This action will only toughen the batter and produce imperfect results.
4. Quick mixing is the secret of muffin success. Mix until the ingredients are completely mixed.
5. You can line Muffin Magic with paper muffin inserts, although they are not necessary. Simply place the paper insert into the mold and fill with mixture. The surfaces of Muffin Magic can be sprayed with non-stick spray for easy food removal



NOTE: Muffin Magic can be sprayed with non-stick spray for easy removal

SERVING SUGGESTIONS

1. Muffins make a great accompaniment to any meal, especially savory muffins to accompany soup.
2. Muffins can be filled with sour cream, cream cheese, smoked salmon, luncheon meats, fresh herbs or fresh fruits for added variety



NOTE: To check if muffins are ready to remove from the Muffin Magic, lightly press the top of the muffin. If it springs back, the muffin is ready to be removed and placed on the wire cooling rack.



NOTE: Do not use metal utensils because they may scratch the non-stick finish of the cooking plates.

USING PRE-MIXED PACKET MUFFIN MIX

MUFFIN MIX Breville has successfully tested pre-mixed packet muffin mixes from the leading brands and found that this is an easy and quick way of baking large sized muffins.

A wide variety of pre-mixed muffin mixes are available from your supermarket including low fat varieties.

BAKING MUFFINS IS AS EASY AS MIX, FILL, BAKE

Preheat the Muffin Magic until green 'ready' light illuminates.

Mix:

Prepare muffin mixture according to the packet instructions. 'Combine the ingredients only until just mixed. For best results do not over-mix'. Spray the Muffin Magic cavities with non-stick spray

Fill:

Spoon the mixture into the cavities to fill completely. Close the lid.

Bake:

Allow muffins to cook for approximately 12 minutes or until the desired shade of golden brown is attained.

Remove muffins using the plastic spatula and place on a wire cooling rack for 5 minutes to cool.



NOTE: The Muffin Magic is perfect for baking cupcakes. Simply follow the recipe instructions of your favorite packet cake mix and fill the baking cavities to the top. Close the lid and bake for approximately 10 minutes.

BREVILLE RECOMMENDS SAFETY FIRST

IMPORTANT SAFEGUARDS

We at Breville design and manufacture consumer products with the safety of you, our valued customers, in mind. In addition we ask that you exercise a degree of care when using any electrical appliance, basic safety precautions should be adhered to

READ ALL INSTRUCTIONS BEFORE OPERATING AND SAVE FOR FUTURE REFERENCE:

Do not touch hot surfaces of appliance.

- To protect against electric shock, do not immerse cord, plug or appliance body in water or any other liquid.
- Always supervise young children when near appliance.
- Never leave appliance unattended while it is in operation. Always switch it off and then unplug it when not in use.
- Regularly inspect the cord, plug and appliance. If damaged, immediately stop use and contact Breville Customer Service at 1-866-Breville.
- Do not use this appliance outdoors or when standing in a damp area.
- Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted.

- Do not place this appliance on or near a hot gas or electric burner, or where it could touch a heated oven.
- Contact your Breville Customer Service at 1-866-Breville for maintenance other than cleaning.
- Do not use hard abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
- Always provide adequate air circulation above and on all sides of appliance.



Your Breville appliance comes with the unique Assist Plug™ conveniently designed with a finger hole in the power plug, for easy and safe removal from the outlet. For safety reasons it is recommended you plug your Breville appliance directly into the power outlet. Do not use in conjunction with a power strip or extension cord.



THE LID MUST BE CLOSED AT ALL TIMES WHEN COOKING

SAVE THESE INSTRUCTIONS

CARE AND CLEANING

- Do not immerse any part of Muffin Magic in water or any other liquid.
- Before cleaning, switch off Muffin Magic and unplug the appliance. Allow Muffin Magic to cool slightly. Muffin Magic is easier to clean when slightly warm.
- Wipe the cooking plates with a damp cloth. If cooked-on food still remains, brush a little oil or melted butter onto these areas. Allow to stand for 5 minutes, then wipe with a damp cloth.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.