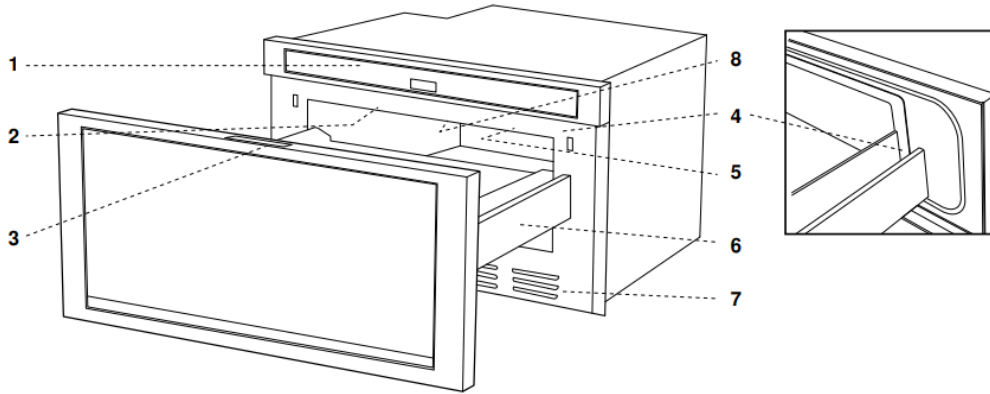 


Part Names

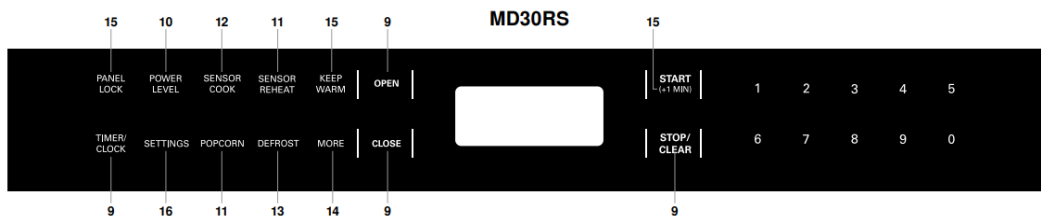 
MICRODRAWER® MICROWAVE OVEN



1. Control panel
2. Waveguide cover DO NOT REMOVE
3. Menu label
4. Drawer sealing surfaces
5. Drawer light
6. Drawer guides
7. Vent
8. Name plate: open the drawer fully.

The label is beyond the back wall of the microwave oven cavity facing up from the flat surface.

KEYSHEET



Numbers next to the keysheet illustration indicate pages on which there are feature descriptions and usage information.

MENU LABEL



SENSOR COOK	
1. Fresh Vegetables: Quick	6. Sweet Potatoes
2. Fresh Vegetables: Longer	7. Ground Meat
3. Frozen Vegetables	8. Fish/Seafood
4. Frozen Entrees	9. White Rice
5. Baked Potatoes	10. Brown Rice

DEFROST

1. Ground Meat
2. Steaks/Chops
3. Boneless Poultry
4. Bone-in Poultry
5. Roast
6. Casserole or Soup

MORE	
1. Reheat Fresh Rolls / Muffins	6. Melt Chocolate
2. Reheat Frozen Rolls / Muffins	7. Soften Ice Cream
3. Reheat Beverage	8. Soften Cream Cheese
4. Hot Water	9. Warm Syrup
5. Melt Butter	10. Warm Dessert Topping

Microwave cooking

TIME COOKING

Your MicroDrawer® microwave oven can be programmed for 99 minutes 99 seconds (99.99). Always enter the seconds after the minutes, even if they are both zeros.

- Suppose you want to cook for 5 minutes at 100%.

1. Enter cooking time **5** **0** **0**. **5.00** **TOUCH** **START**
OR **TOUCH** **POWER** **LEVEL**

2. To cook at 100% power (High), touch START (+1 min) pad.

TO SET POWER LEVEL

There are eleven preset power levels.

Using lower power levels increases the cooking time, which is recommended for foods such as cheese, milk and long slow cooking of meats. Consult a microwave cookbook or recipes for specific recommendations.

- Suppose you want to defrost for 5 minutes at 30%.

1. Enter defrost time **5** **0** **0**. **5.00**

2. Touch POWER LEVEL pad 8 times.

3. Touch START (+1 min) pad.

TOUCH POWER LEVEL PAD NUMBER OF TIMES FOR DESIRED POWER	APPROXIMATE PERCENTAGE OF POWER	COMMON WORDS FOR POWER LEVELS
POWER LEVEL x 1	100%	High
POWER LEVEL x 2	90%	
POWER LEVEL x 3	80%	
POWER LEVEL x 4	70%	Medium High
POWER LEVEL x 5	60%	
POWER LEVEL x 6	50%	Medium
POWER LEVEL x 7	40%	
POWER LEVEL x 8	30%	Med Low/Defrost
POWER LEVEL x 9	20%	
POWER LEVEL x 10	10%	Low
POWER LEVEL x 11	0%	

 
SENSOR SETTINGS

The sensor is a semi-conductor device that detects the vapor (moisture and humidity) emitted from the food as it heats. The sensor adjusts the cooking times and power levels for various foods and quantities.

USING SENSOR SETTINGS:

1. After the MicroDrawer® microwave oven is plugged in, wait 2 minutes before using any sensor setting.
2. Be sure the exterior of the cooking container and the interior of the MicroDrawer® microwave oven are dry. Wipe off any moisture with a dry cloth or paper towel.
3. The sensor works with foods at normal storage temperature. For example, popcorn would be at room temperature.
4. Any sensor selection can be programmed with More or Less Time Adjustment. See page 15.
5. More or less food than the quantity listed in the charts should be cooked following the guidelines in any microwave cookbook.
6. During the first part of sensor use, the food name will appear on the display. Do not open the drawer or touch STOP/CLEAR during this part of the cycle. The measurement of vapor will be interrupted. If this occurs, an error message will appear. To continue cooking, touch the STOP/CLEAR pad and cook manually.

When the sensor detects the vapor emitted from the food, the remainder of cooking/reheating time will appear. The drawer may be opened when the remaining time appears on the display. At this time, you may stir or season food, as desired.



 
 
 
7. Except for Popcorn, if the sensor does not detect vapor properly when cooking other foods,  will be displayed, and the microwave will turn off.
8. Check food temperature after cooking. If additional time is needed, continue to cook manually.
9. Each food has a cooking hint. Touch the SETTINGS pad when the HELP indicator is lighted in the display

Other Features

KEEP WARM

Keep Warm allows you to keep food warm up to 30 minutes.

 
 

DIRECT USE

1. Touch KEEP WARM pad.     

2. Enter desired time by touching the number pads. To enter 30 minutes, touch



   .   

3. Touch START (+1 min) pad.

The oven will start. The display will show  and count down.   will be displayed intermittently during the count down.

WITH MANUAL COOKING

 
 
1. Enter desired cooking time and power level.
2. Touch KEEP WARM pad.
3. Enter desired warming time up to 30 minutes.
4. Touch START (+1 min) pad.

The operation will start. When the cooking time is complete, a long tone will sound and Keep Warm will start. The display will count down.   will be displayed intermittently during the count down.

MULTIPLE SEQUENCE COOKING

Your MicroDrawer® microwave oven can be programmed for up to 4 automatic cooking sequences, switching from one power level setting to another automatically.

Sometimes cooking directions tell you to start on one power level and then change to a different power level. Your MicroDrawer® microwave oven can do this automatically.

1. First enter cooking time. Then touch POWER LEVEL pad once for 100% cooking or repeat touching POWER LEVEL pad for a lower power level.
2. Enter second cooking time. Repeat touching POWER LEVEL pad for desired level. You can follow this procedure up to 4 times.  
3. Touch START (+1 min) pad.


HELP

 
Each setting of Sensor Reheat, Sensor Cook, Popcorn, Keep Warm and Defrost has a cooking hint. Only More settings: Fresh rolls/muffins, Frozen rolls/muffins, Beverage reheat and Beverage hot water have a cooking hint. If you wish to check, touch SETTINGS whenever HELP is lighted in the Interactive Display for these and other manual operation hints.

+1 MIN

+1 min allows you to cook for a minute at 100% by simply touching the +1 min pad. You can also extend cooking time in multiples of 1 minute by repeatedly touching the +1 min pad during manual cooking.

MORE OR LESS TIME ADJUSTMENT

 
Should you discover that you like any of the Sensor Reheat, Sensor Cook, Defrost, Popcorn or More settings slightly more done, touch the POWER LEVEL pad once after touching your selection. The display will show .

For slightly less done, touch the POWER LEVEL pad twice after touching your selection. The display will show .

 
 
PANEL LOCK

The Panel Lock prevents unwanted drawer operation such as by small children. The MicroDrawer® microwave oven can be set so that the control panel and the automatic door mechanism are deactivated or locked.

TO LOCK

 
 
 
 
Touch PANEL LOCK pad and hold for 3 seconds. The display shows .

TO UNLOCK

Touch PANEL LOCK pad and hold for 3 seconds. The display shows  .

The Panel Lock is canceled when the electrical power supply to your oven is interrupted. Set the Panel Lock again when power to the oven is restored.

SETTINGS

 

If the electrical power supply to your MicroDrawer® microwave oven should be interrupted, the display will intermittently show    

     after the power is reinstated. If this occurs, the SETTINGS option you input will be erased. Simply touch STOP/CLEAR pad and reset.

AUDIBLE SIGNAL ELIMINATION

At the end of timed cook, beeps will sound. The audible signal can be turned off if you prefer quiet operation.

TO TURN SOUND OFF

1. Touch SETTINGS pad.  

2. Touch SETTINGS pad again. SOUND OFF ? TOUCH START
3. Touch START (+1 min) pad. The display shows SOUND OFF

TO RESTORE SOUND

1. Touch SETTINGS pad. TOUCH AGAIN
2. Touch SETTINGS pad again. SOUND ON ? TOUCH START
3. Touch START (+1 min) pad. The display shows SOUND ON

END OF COOKING REMINDER

At end of timed cooking, the microwave will signal every 10 seconds for the first minute; then every 3 minutes until STOP/CLEAR pad is touched, up to one hour.

TO TURN REMINDER OFF

1. Touch SETTINGS pad three times. The display shows REMIND SIGNAL OFF ? TOUCH START
2. Touch START (+1 MIN) pad. The display shows REMIND SIGNAL OFF

 
 
 
 
 
 
 
 
 
TO TURN REMINDER SIGNAL BACK ON

1. Touch SETTINGS pad three times. The display shows REMIND SIGNAL ON ? TOUCH START
2. Touch START (+1 min) pad. The display shows REMIND SIGNAL ON

AUTO START

 
 

 
 
If you wish to program the MicroDrawer® microwave oven to begin cooking automatically at a designated time of day, follow this procedure.

1. Touch SETTINGS pad 4 times. The display shows AUTO START TOUCH START
2. Touch START (+1 min) pad. ENTER START TIME
3. Enter start time. 4:30 TOUCH CLOCK
4. Touch TIMER/CLOCK pad. ENTER COOKING TIME

 
 
 
 
 
 
5. Touch the number pads to enter cooking time.       . Touch POWER LEVEL pad repeatedly until the desired power level is reached.  
6. Touch START (+1 min) pad.

DEMONSTRATION MODE

TO SELECT DEMO MODE

1. Touch SETTINGS pad five times. The display shows    
2. Hold START (+1 min) pad for 3 seconds. The display shows 

TO CANCEL DEMO MODE

1. Touch SETTINGS pad five times. The display shows    
2. Touch START (+1 min) pad. The display shows  

STANDBY MODE

This microwave will go into standby mode after a period of inactivity. The backlight of the display will automatically dim after 3 minutes if the unit has not been in operation. If the display is in standby mode, simply touch the control panel or open/close the door to return the backlight to maximum brightness.

Cleaning and Care

STAINLESS STEEL SURFACE

Always wipe or rub in the direction of the grain. The exterior should be wiped often with a soft damp cloth and polished with a soft dry cloth to maintain its beauty. There are also a variety of products designed especially for cleaning and shining the stainless exterior of the oven. We recommend that the cleaner be applied to a soft cloth and then carefully used on the stainless exterior rather than sprayed directly on to it. Follow package directions carefully.

 

FRONT SIDE OF THE DRAWER

Wipe the window on both sides with a soft damp cloth to remove any spills or splatters. Metal parts will be easier to maintain if wiped frequently with a soft damp cloth. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the drawer surface.

TOUCH CONTROL PANEL

If desired, the touch pads may be deactivated before cleaning. See the Panel Lock information on page 15 of this manual. Wipe the panel with a cloth dampened slightly with water only. Dry with a soft cloth. Do not scrub or use any sort of chemical cleaners. Close drawer and follow directions on page 15 for turning Panel Lock off. Touch STOP/CLEAR.

INTERIOR

Before cleaning the MicroDrawer® microwave oven, touch and hold the Panel Lock button for 3 seconds to lock the control pad and the automatic door mechanism. The drawer can be locked in either the open or closed position. The display will show . This will prevent the drawer from accidentally opening or closing during cleaning. After cleaning, touch and hold the Panel Lock button for 3 seconds to turn the lock off. The display will show .

Cleaning is easy because no heat is generated to the interior surfaces; therefore, there is no baking and setting of spills or spattering. To clean the interior surfaces, including drawer sealing surfaces, wipe with a soft damp cloth. **DO NOT USE ABRASIVE OR HARSH CLEANERS OR SCOURING PADS.** For heavier soil, use mild soap; wipe clean with a soft damp cloth. Do not use any chemical oven cleaners.

MICRODRAWER® MICROWAVE OVEN GUIDES

Remove the food crumbs from the drawer guides. Wipe with a soft dry cloth in order to keep the drawer opening and closing smoothly.

WAVEGUIDE COVER

CAUTION: The waveguide cover, located on the inside top of the drawer area, is made from mica, so it requires special care. Keep the waveguide cover clean to assure good microwave performance. Carefully wipe with a soft damp cloth any food spatters from the surface of the cover immediately after they occur. Built-up splashes may overheat and cause smoke or possibly catch fire. Do not remove the waveguide cover.

ODOR REMOVAL

Occasionally, a cooking odor may remain in the drawer. To remove odor, combine 1 cup water, grated peel and juice of one lemon and several whole cloves in a 2-cup glass microwave-safe measuring cup. Boil for several minutes using 100% power. Leave in the drawer until water cools. Wipe interior with a soft cloth.

Before you call for service

Please check the following before calling for service. It may save you time and expense.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Part or all of MicroDrawer® microwave oven does not operate.	• Power cord of microwave oven is not completely connected to the electrical outlet. .	• Make sure the power cord is tightly connected to the outlet.
	• Power outage.	• Check house lights to be sure. Call your local electric company for service.
	• Fuse/circuit breaker doesn't work.	• Replace the fuse or reset the circuit breaker.
	• Microwave oven is in Demo Mode	• See page 16 for how to cancel Demo Mode.
Food in microwave oven is not heated.	• No power to the appliance.	• See SOLUTION for PROBLEM 1.
	• Drawer controls improperly set.	• Check if the controls have been properly set.
	• Drawer is in Demo Mode.	• See page 16.
Microwave oven light does not work.	• Light bulb is loose or burned out.	• Call for service.
Touch controls will not operate.	• Panel Lock is on.	• See page 15 to unlock.
Display flashes.	• Power failure.	• Touch STOP/CLEAR pad and reset the clock. If the microwave oven was in use, you must reset the cooking function.
Steam from the vent.	• During microwaving, steam may come from the right side of the vent.	

Warning



This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

