

Overview

The Ourokhome Rotary Cheese Grater is a manual kitchen tool designed for slicing, coarse shredding, and fine shredding of various foods. It operates via a hand crank and does not require electricity.



Product Specifications

- **Brand:** Ourokhome
- **Materials:** Acrylonitrile Butadiene Styrene (ABS), Stainless Steel
- **Product Dimensions:** 10.24"L x 2.76"W x 9.45"H

- **Item Weight:** 0.92 Kilograms
- **Included Components:** Suction base ×1, Transparent barrel ×1, Handle ×1, Slicing blade ×1, Coarse shredding blade ×1, Fine shredding blade ×1, Food pusher ×1, A peeler ×1, A cleaning brush ×1.

Features and Components

Main Parts

- **Suction Base:** Locks the grater to your countertop for stable operation.
- **Transparent Barrel:** Holds the food and allows you to view the grating process.
- **Hand Crank Handle:** Turns the selected blade to process food.
- **Interchangeable Drum Blades (3):**
 - **Slicing Blade:** For creating slices (e.g., potato chips).
 - **Coarse Shredding Blade:** For thicker shreds (e.g., cheese for pizza).
 - **Fine Shredding Blade:** For fine shreds (e.g., chocolate, hard cheese).
- **Food Pusher:** Safely guides food towards the blade without risk to fingers.

Key Features

- **Manual Operation:** No electricity or batteries required.
- **Built-in Safety:** The blade is enclosed; the food pusher prevents finger contact.
- **Stable Design:** Suction base prevents slipping during use.
- **Multi-Food Use:** Suitable for cheese, vegetables (potato, carrot, cucumber), nuts, chocolate, and more.
- **Dishwasher Safe:** Stainless steel blades are top-rack dishwasher safe. The transparent barrel should be washed by hand. The handle and base can be wiped clean.

Use Guide

Assembly

1. Place the **suction base** on a clean, smooth, and dry countertop. Turn the knob from "RELEASE" to "LOCK" to secure it.
2. Place the **transparent barrel** onto the base.
3. Select the desired **blade** (slicing, coarse shredding, or fine shredding) and insert it into the transparent barrel.

4. Align the connection port on the blade with the port on the **handle**. Press down the button on the handle and insert it. Release the button; you should hear a click indicating it is locked in place.

Operation

1. Ensure the grater is securely assembled and locked to the countertop.
2. Place the food item into the transparent barrel.
3. Use the **food pusher** to hold the food against the rotating blade. **Never use your fingers.**
4. Turn the **hand crank handle** steadily. The shredded or sliced food will collect in your container below the barrel outlet.
5. For soft cheeses that may clog, chill the cheese in the refrigerator for 30-60 minutes before grating.

Food Preparation Tips

- **Cheese:** Works best with hard and semi-hard cheeses. Soft cheeses may need chilling.
- **Vegetables:** Ideal for potatoes, carrots, cucumbers, radishes, and broccoli.
- **Other:** Can grate nuts, chocolate, and even soap. **Not suitable for meat or chicken.**

Cleaning and Maintenance

- **Blades:** The stainless steel blades can be washed on the top rack of a dishwasher.
- **Transparent Barrel:** Wash by hand with warm, soapy water.
- **Handle and Suction Base:** Wipe clean with a damp cloth. Do not submerge.
- Ensure all parts are completely dry before reassembling or storing.
- Store the blades in a safe place using the provided packaging or a dedicated container to prevent damage.

Troubleshooting

- **Grater slips on counter:** Ensure the counter surface is clean, smooth, and dry. Confirm the base knob is turned to "LOCK".
- **Food is not grating smoothly:**
 - Check that the correct blade is installed securely.
 - For soft foods like cheese, try chilling them first.
 - Apply steady, moderate pressure with the food pusher.

- **Handle is difficult to turn:** Ensure the blade is correctly installed and not obstructed by food debris. Disassemble and clean all parts.
- **Food is jamming in the barrel:** Do not overload the barrel. Use the food pusher to guide smaller pieces through.

Safety Information

- Always use the provided **food pusher**. Never place fingers or hands into the transparent barrel near the blade.
- Ensure the suction base is securely locked before use.
- Keep the grater and its components out of reach of children.
- Blades are extremely sharp. Handle with care during assembly, cleaning, and storage.
- This product is for food preparation only. Do not use for purposes other than its intended design.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.