

1. Overview

This manual provides instructions for the ZENY 61-Key Portable Electric Keyboard Piano. The product is a multi-functional electronic keyboard designed for beginners and players of all levels. It includes a keyboard, stand, stool, microphone, headphones, and a music sheet stand.

 


The main components are a 61-key keyboard with an LED screen, built-in speakers, and multiple connectivity options. The package includes an adjustable stand and stool, a microphone, headphones, and a music sheet stand.

2. Features and Specifications

2.1 Keyboard Specifications

- **Number of Keys:** 61
- **Timbres:** 300 built-in sounds
- **Rhythms:** 300 built-in rhythms
- **Display:** LED screen
- **Speakers:** Built-in stereo speakers
- **Power Supply:** AC power adapter (included, 110V-240V) or 6 x AA batteries (not included)
- **Connectivity:** 3.5mm headphone jack, 3.5mm auxiliary input, microphone input
- **Special Features:** Recording capability, lesson mode, portable design

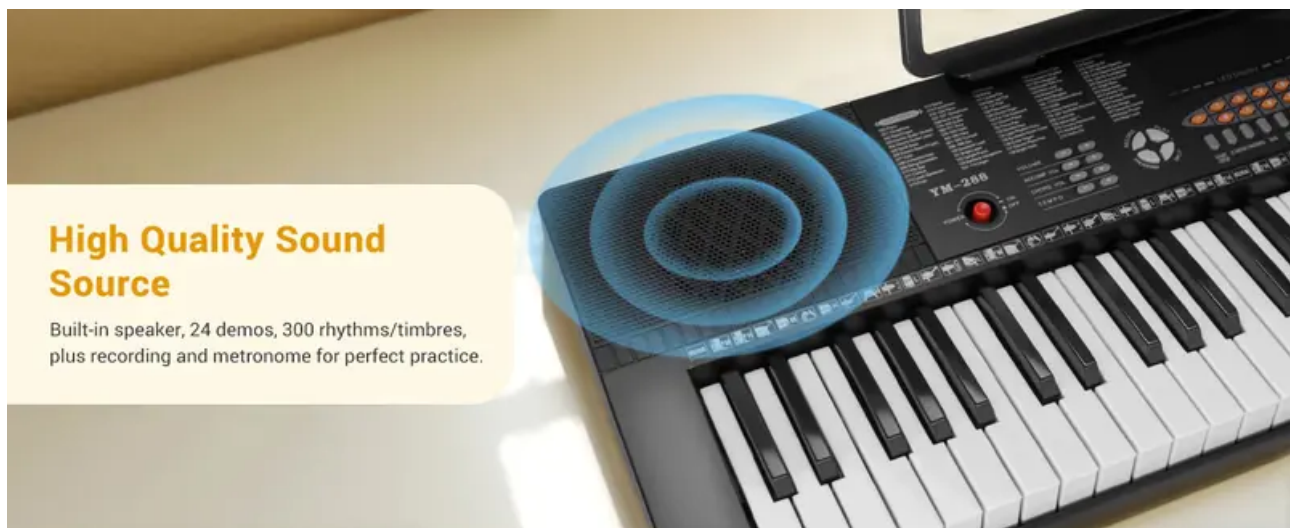

2.2 Stand and Stool Specifications

 
- **Keyboard Stand:** Adjustable to three height positions: 31.1", 33.7", 35.8" H. Dimensions: 32.9" L x 15.4" W.
- **Piano Stool:** Adjustable to three height positions: 18", 19.6", 20.35" H. Padded seat. Dimensions: 15.7" L x 11.8" W.

Note: The image above is a placeholder. The actual product image shows the adjustable stand and stool in a home setting.

2.3 Included Components

- 61-Key Electronic Keyboard
- Adjustable Keyboard Stand

- Adjustable Padded Piano Stool
- Music Sheet Stand
- Headphones
- Microphone
- Power Adapter
- Instructions

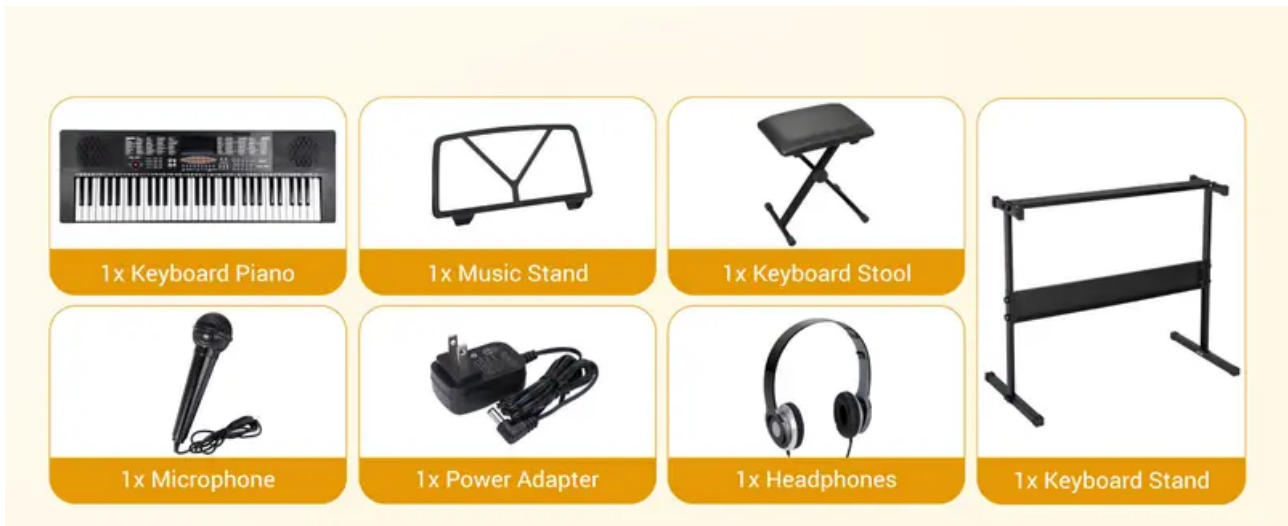

3. Setup Guide

3.1 Assembling the Stand and Stool

1. Unfold the keyboard stand legs and ensure all locking mechanisms are secure.
2. Adjust the stand to your desired height by loosening the knobs, setting the correct tube length, and retightening the knobs.
3. Assemble the piano stool by attaching the seat to the base. Adjust the height by turning the stool clockwise or counter-clockwise to raise or lower it to one of the three preset positions.

 
3.2 Placing the Keyboard

1. Carefully place the keyboard onto the assembled stand, centering it for stability.
2. Attach the music sheet stand to the designated holders on the keyboard or main stand.

3.3 Powering On

- **Using AC Power:** Connect the included power adapter to the DC input port on the keyboard, then plug the adapter into a standard wall outlet (110V-240V).

- **Using Batteries:** Install 6 AA batteries (not included) into the battery compartment on the underside of the keyboard. Ensure the polarity (+/-) is correct.

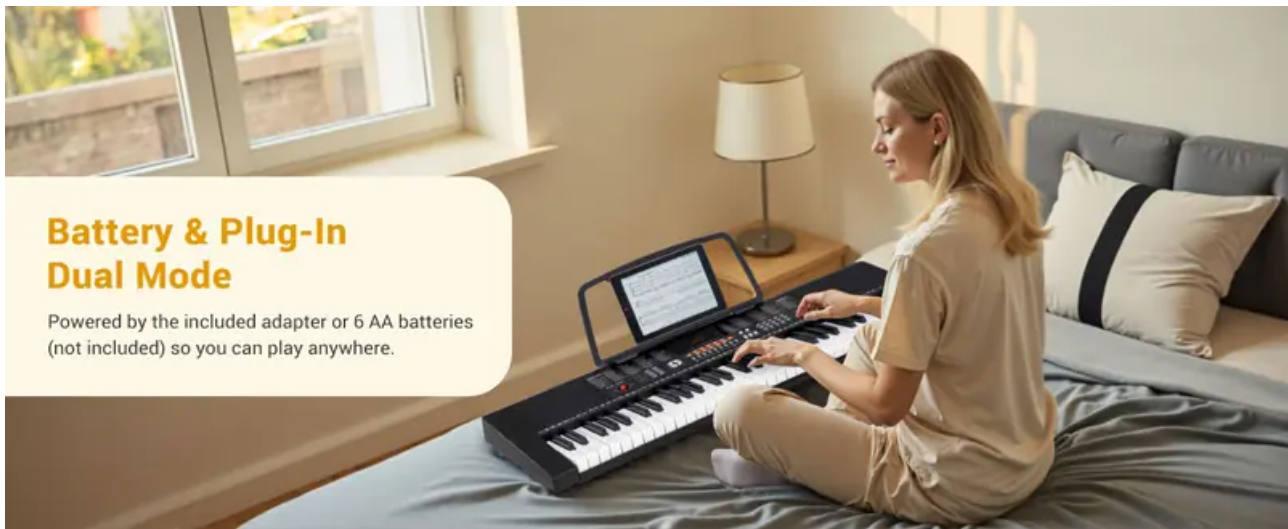

Warning: Use only the provided power adapter. Using an incorrect adapter may damage the keyboard.

4. Use Guide

 
4.1 Basic Operation

- Press the Power button to turn the keyboard on. The LED screen will illuminate.
- Use the Volume buttons to adjust the speaker output.
- Select different instrument sounds (Timbres) using the designated buttons or number pad. The current selection will be shown on the LED screen.
- Select different accompaniment rhythms using the Rhythm buttons. The tempo can usually be adjusted with a dedicated Tempo button or knob.

4.2 Lesson Mode

The keyboard features a teaching function for beginners.

1. Select a demo song from the keyboard's memory.
2. Engage the Lesson Mode. The LED display will show the correct keys and chords to press.
3. The display will also indicate the pace at which to play, guiding you through the song.

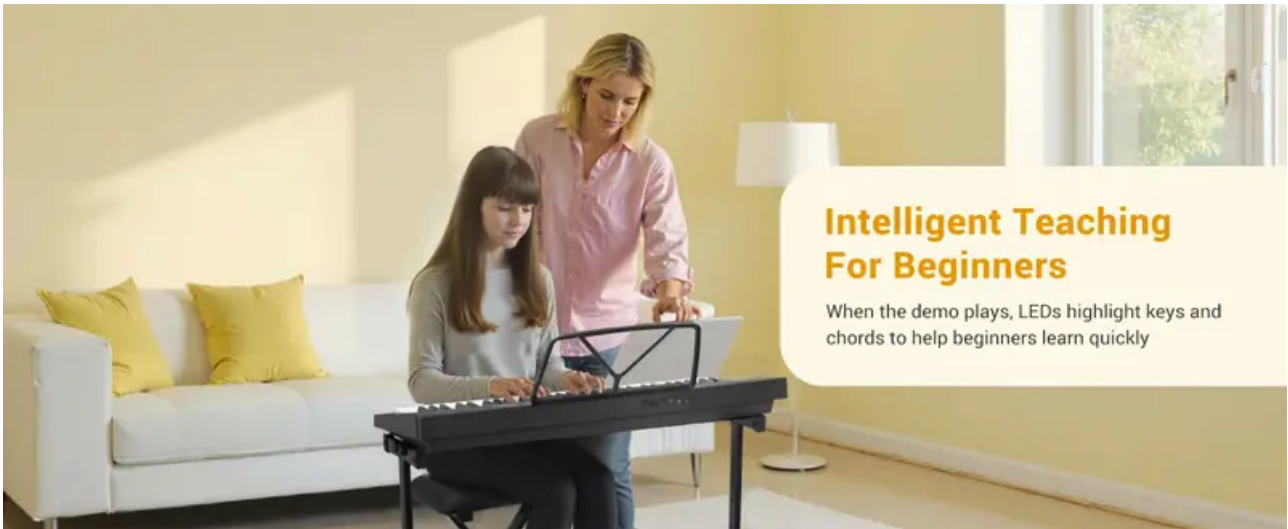

4.3 Recording and Playback

The keyboard has a recording feature.

- Press the Record button to start recording your performance.
- Press the Stop button to end recording.
- Use the Playback button to listen to your recorded performance.

4.4 Connecting External Devices



- **Headphones:** Plug the included headphones (or any standard 3.5mm headphones) into the headphone jack for private listening. This will mute the built-in speakers.
- **Microphone:** Plug the included microphone into the microphone input. Your voice will be output through the keyboard's speakers.
- **Auxiliary Input:** Use a 3.5mm audio cable (not included) to connect an external device like a smartphone or MP3 player to the AUX IN port. You can play along with music from the external device through the keyboard's speakers.

- **Audio Output:** Use a 3.5mm audio cable to connect the keyboard's headphone/audio output jack to external powered speakers or a sound system for amplified sound.

5. Care and Maintenance

- Clean the keyboard with a soft, dry cloth. Do not use liquid cleaners or sprays directly on the surface.
- Disconnect the power adapter when not in use for extended periods.
- Remove batteries if the keyboard will not be used for a long time to prevent corrosion.
- Store the keyboard and stand in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid placing heavy objects on the keyboard.

6. Troubleshooting

- **No Power:** Check that the power adapter is firmly connected or that batteries are correctly installed and have sufficient charge.
- **No Sound:** Check the volume level. Ensure headphones are not plugged in, as this mutes the internal speakers.
- **Distorted Sound:** Reduce the volume. Check connections for external devices.
- **Keys Not Responding:** Turn the keyboard off and on again. Ensure it is not in a special mode that disables the keys.
- **LED Screen Not Working:** Check power connection. If using batteries, they may be depleted.

7. Product Information

- **Brand:** ZENY
- **Model Name:** ZENY 61
- **Model Number:** ZENY2429A
- **Item Weight:** 18 Pounds
- **Product Dimensions (Stand assembled at max height):** 15.4"D x 32.9"W x 35.8"H
- **Warranty:** 1 year limited warranty.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)