

Overview

The HANNLOMAX HX-327CD is a portable, vertical CD player with an integrated AM/FM analog radio and an auxiliary input for external audio devices. It is designed for stereo audio playback and can be powered by an AC adapter or batteries for mobility.



Features & Specifications

Audio Playback

- **CD Player:** Plays standard Audio CDs.
- **Supported Format:** MP3 files on CD.
- **Number of Discs:** 1.
- **Media Format Type:** Audio CD.

Radio

- **Radio Bands:** AM and FM analog radio.
- **Tuning:** Manual tuning via a rotary Radio Tuning Control.
- **Antenna:** External FM antenna included to improve reception.

Connectivity

- **Auxiliary Input (Aux-in):** 3.5mm jack for connecting external audio devices (e.g., smartphones, tablets).
- **Headphone Jack:** 3.5mm jack for private listening.
- **Compatible Devices:** Speakers and headphones.
- **Number of Channels:** 1.
- **Connector Type:** 3.5mm Jack.

Power

- **Dual Power Source:**
 - AC Power: Uses the included AC power cord.
 - DC Power: Requires 6 x AA batteries (not included).
- **Use Case:** Suitable for both indoor and outdoor use.

Physical

- **Design:** Portable, vertical orientation.
- **Color Options:** Available in Black, Blue, Pink, Purple, and White.
- **Special Feature:** Portable.

What's in the Box

- HANNLOMAX HX-327CD Portable CD Player
- AC Power Cord
- User Manual (this document)

Note: Batteries are not included.

Use Guide

Initial Setup

1. Place the unit on a stable, flat surface.
2. Choose your power source:
 - For AC power, connect the included power cord to the unit and a wall outlet.
 - For battery power, open the battery compartment (location indicated on the unit), insert 6 AA batteries observing the correct polarity (+/-), and close the compartment.



Playing a CD

1. Press the 'Open' button (or similar mechanism) to open the CD compartment door.
2. Place a standard Audio CD or MP3 CD into the tray with the label facing up.
3. Gently close the compartment door.
4. Press the 'Play' button. Playback should begin automatically.
5. Use the 'Previous', 'Next', 'Pause', and 'Stop' buttons to control playback.

Using the Radio

1. Extend the external FM antenna for better reception.
2. Switch the 'Function' or 'Mode' selector to either 'AM' or 'FM'.
3. Slowly rotate the 'Radio Tuning Control' knob to scan for stations.
4. Stop rotating when you find a clear station. Fine-tune as necessary.

Using the Auxiliary Input

1. Switch the 'Function' or 'Mode' selector to 'AUX'.
2. Connect one end of a standard 3.5mm audio cable (not included) to the 'AUX IN' port on the player.
3. Connect the other end to the headphone jack of your external audio device (e.g., smartphone, tablet, MP3 player).

4. Start playback on your external device. The audio will play through the CD player's speakers or connected headphones.



Using Headphones

1. Plug a pair of standard 3.5mm headphones into the 'Headphone' jack.
2. Audio will automatically route to the headphones, muting the built-in speakers.



Care & Maintenance

- Use a soft, dry cloth to clean the exterior. Do not use abrasive cleaners or solvents.
- Keep CDs clean and free of scratches for optimal playback.
- Store the unit in a cool, dry place when not in use.
- If using batteries, remove them if the player will not be used for an extended period to prevent potential leakage.
- Do not expose the unit to extreme temperatures, moisture, or direct sunlight for prolonged periods.

Troubleshooting

- **No Power:**
 - Ensure the AC power cord is firmly connected at both ends.
 - If using batteries, check that they are inserted correctly and are not depleted.
- **CD Will Not Play:**
 - Ensure the CD is placed correctly (label side up).

- Check if the CD is scratched or dirty.
- Confirm the unit is in 'CD' mode.
- **Poor Radio Reception:**
 - Fully extend the external FM antenna.
 - Move the unit to a different location, away from potential interference (e.g., computers, other electronics).
 - For AM, rotating the unit may improve reception.
- **No Sound from Aux-in:**
 - Ensure the audio cable is firmly connected to both the player and the external device.
 - Confirm the unit is in 'AUX' mode.
 - Check the volume level on both the player and the external device.
- **Distorted Sound:**
 - Reduce the volume level.
 - Check the audio source (CD or external device) for quality issues.

Product Details

- **Brand:** HANNLOMAX
- **Model Number:** zmyzxz-214
- **Manufacturer:** Hannix Ltd.
- **ASIN:** B086LDBY6X

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.