

1. Product Overview



The Inalsa Frappe is a drip coffee machine designed for home use. It brews up to 5 cups (0.6 liters) of coffee and features a 650-watt heating element, an anti-drip function, and a keep-warm plate.

The appliance includes a 100% borosilicate glass carafe (0.8L), a detachable coffee filter, and a water level indicator for ease of use.

2. Specifications

- **Brand:** Inalsa

- **Model Name:** Frappe
- **Type:** Drip Coffee Machine
- **Capacity:** 0.6 Liters (5 Cups)
- **Carafe:** 0.8L Borosilicate Glass Jar with Lid
- **Power:** 650 Watts
- **Voltage:** 230 Volts
- **Special Features:** Anti-Drip Function, Keep Warm Plate, Detachable Filter, Water Level Indicator, Power Switch with Indicator Light, Overheat Protection.
- **Material:** Plastic (Main Unit), Borosilicate Glass (Carafe)
- **Item Weight:** 850 Grams

3. What's in the Box

- Main Coffee Maker Unit
- Drip Funnel
- Filter Basket
- Glass Carafe with Lid
- Instruction Manual with Warranty Card

Before use, ensure all components are present and undamaged.

4. Parts and Controls



Main Unit

- **Power Switch:** Turns the appliance on and off. Includes an indicator light that illuminates when the unit is powered on.
- **Water Reservoir:** Located at the rear/top of the unit. Fill with cold water up to the 0.6L (5 cup) mark indicated by the water level indicator.
- **Brew Basket:** Holds the detachable filter and ground coffee. The drip funnel directs brewed coffee into the carafe.
- **Keep-Warm Plate:** Heated plate on the base where the glass carafe sits after brewing to maintain coffee temperature.

Carafe & Filter

- **Glass Carafe:** 0.8L borosilicate glass jar with lid and handle. Features a water level indicator for measuring.
- **Detachable Coffee Filter:** Reusable filter basket that holds ground coffee. It can be removed for cleaning.

5. Safety Instructions

WARNING: To reduce the risk of fire, electric shock, or injury, follow these basic safety precautions.

- Read all instructions before using the appliance.
- This appliance is for household use only. Do not use outdoors.
- Ensure the voltage (230V) matches your household supply.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions.
- Place the appliance on a flat, stable, heat-resistant surface away from edges, water, and heat sources.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- The glass carafe is fragile. Handle with care. Do not use if cracked or chipped.
- Do not place the carafe on a hot surface (e.g., stove) or use it over an open flame.
- The appliance features overheat protection which will automatically switch it off if it becomes too hot.
- Unplug the unit when not in use and before cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, unless supervised.

6. Use Guide

Before First Use

1. Remove all packaging materials and stickers.
2. Wash the glass carafe, lid, filter basket, and drip funnel with warm, soapy water. Rinse and dry thoroughly.
3. Wipe the exterior of the main unit with a damp cloth. Do not immerse it in water.
4. Perform a cleaning cycle by brewing a full carafe of water only (without coffee) to remove any residual manufacturing dust.

Brewing Coffee



Note: A video guide is available showing product setup and use.

1. **Fill with Water:** Open the lid of the water reservoir. Using the glass carafe, pour cold water up to the desired number of cups (max 0.6L/5 cups). The water level marks on the carafe can be used for measurement. Pour the water into the reservoir.
2. **Insert Filter & Coffee:** Place the detachable filter basket into the brew basket. Add medium-ground coffee to the filter. A general guideline is one tablespoon (approx. 7-8 grams) of coffee per cup (150ml) of water.
3. **Place Carafe:** Ensure the carafe lid is in place. Position the empty glass carafe on the keep-warm plate, centered under the drip funnel.
4. **Start Brewing:** Plug in the appliance. Press the power switch. The indicator light will turn on, and the brewing process will begin. Brewing time is approximately 5-10 minutes.
5. **Anti-Drip Function:** You can remove the carafe during the brew cycle to pour a cup. The anti-drip function will stop the flow of coffee to prevent spills. Replace the carafe to continue brewing.
6. **Keep Warm:** After brewing is complete, the appliance will automatically switch to keep-warm mode, maintaining the temperature of the coffee for a period. The power indicator light remains on.
7. **Turn Off:** Once you have finished serving coffee, press the power switch to the "OFF" position. The indicator light will turn off. Unplug the appliance.

Cleaning and Maintenance

- **After Each Use:** Unplug the appliance and allow it to cool. Discard the used coffee grounds. Wash the carafe, lid, filter basket, and drip funnel with warm soapy water. Rinse and dry.
- **Exterior:** Wipe the main unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Descaling:** Mineral deposits from water can build up inside the machine. Periodically (approximately once a month, depending on water hardness), run a brewing cycle with a mixture of equal parts white vinegar and water. Follow this with 1-2 cycles of clean water only to rinse away any vinegar taste.
- **Storage:** Ensure all parts are completely dry before storing. Store in a cool, dry place. Wrap the cord loosely around the base if applicable.

7. Troubleshooting

Problem	Possible Cause	Solution
Coffee maker does not turn on.	Not plugged in. Power switch not pressed. Faulty outlet.	Check plug connection. Ensure power switch is pressed. Try a different outlet.
Water does not flow through.	Water reservoir is empty. Drip funnel or filter is clogged.	Fill reservoir with water. Clean the drip funnel and filter basket.
Coffee drips when carafe is removed.	Anti-drip function may be impaired.	Ensure the carafe is positioned correctly under the funnel. Contact support if issue persists.
Coffee is not hot enough.	Insufficient pre-heating. Cold carafe used.	Ensure the carafe is at room temperature before brewing. The keep-warm function maintains temperature but does not reheat.
Appliance switches off unexpectedly.	Overheat protection activated.	Unplug the appliance and let it cool completely for 30 minutes. Check for blockages in vents. Ensure it is not placed near other heat sources.
Unusual taste in coffee.	Residual cleaning agent or mineral deposits.	Run several cycles with clean water only. Perform a descaling cycle.

8. Warranty and Support

This product is backed by a **1-year warranty** from the brand INALSA, valid from the date of purchase.

Contact Information

For customer service, warranty claims, or product support, please contact:

Importer & Packer: Tuareg Marketing Pvt. Ltd.

Address: KHASRA NO.154,1092,1189, BHALSWA VILLAGE, BHALSWA, North West Delhi, Delhi, 110033, India.

Contact Numbers: 9773982065, 9773982066, 9773982067, 9773982068, 9773982069.

Please have your model name (Frappe) and proof of purchase ready when contacting support.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

