

Overview

The Inalsa PowerShot 1400 is a high-pressure washer designed for cleaning tasks around the home, including cars, buildings, decks, driveways, and patios. It features a 1400 W motor and generates up to 1523 PSI of pressure.

Perfect Structure & Specification



Features and Specifications

Key Features

- **1400 W Powerful Motor:** Generates up to 1523 PSI with a maximum flow rate of 372 liters per hour.
- **Adjustable Spray Nozzles & Jet Spray:** Comes with a spray gun, extension rod, adjustable nozzle, and a detergent tank for variable pressure settings.
- **Ease of Operation:** Built-in storage compartments for accessories, power cord storage, and an easy-carry handle.

- **Efficient & Reliable:** Equipped with an aluminium pump, metal gears, and a self-priming feature to draw water from open sources.
- **Safety Features:** Includes overheat protection and an auto start-stop function that operates only when the spray gun is triggered.

Technical Specifications

- **Brand:** Inalsa
- **Model:** PowerShot 1400
- **Color:** Yellow/Black
- **Motor Power:** 1400 W
- **Maximum Pressure:** 1523 PSI
- **Maximum Flow Rate:** 372 l/h
- **Hose Length:** 9 meters
- **Item Weight:** 5700 grams
- **Certifications:** CE, CSA

What's in the Box

- 1 Main Unit
- 1 Spray Gun & Extension Rod
- 1 Hose Pipe (9m)
- 1 Soap Bottle (Detergent Tank)
- 1 Water Pipe Connector
- 1 Cleaning Pin
- 1 Instruction Manual & Warranty Card

Safety Information

WARNING: Always read the instruction manual before use. Use protective eyewear. Do not point the spray gun at people, animals, or electrical equipment. Ensure the unit is connected to a properly grounded electrical outlet. Disconnect power before performing any maintenance.

- The auto start-stop feature enhances safety by operating the motor only when the spray gun trigger is pressed.
- The overheat protection system will automatically shut down the motor if it exceeds safe operating temperatures.
- Use the anti-impurity filter on the water inlet to prevent debris from entering the pump.

Setup and Installation

Initial Setup

1. Unpack all components and check against the "What's in the Box" list.
2. Place the main unit on a stable, flat surface near a water source and power outlet.
3. Connect the water inlet adaptor to a tap or submerge it in an open water container. Ensure the anti-impurity filter is attached.
4. Connect the 9-meter hose to the water outlet on the main unit and to the spray gun.
5. Attach the extension rod to the spray gun if needed for your cleaning task.
6. Fill the soap bottle with a suitable detergent if required.
7. Plug the power cord into a grounded electrical outlet. Use the built-in cord storage to manage excess cable.

Operating Instructions

Basic Operation

1. Ensure the water source is turned on and water is flowing to the unit.
2. Press the power switch on the main unit to the 'ON' position.
3. Squeeze the trigger on the spray gun to start the water flow and motor. Release the trigger to stop.
4. Use the adjustable nozzle on the spray gun to change the spray pattern from a wide fan (for soaping or rinsing) to a concentrated jet (for stubborn dirt).
5. To use detergent, turn the selector on the soap bottle to the appropriate setting. The unit will mix detergent with the water stream.

Using the Self-Priming Feature

The unit can draw water from an open source like a bucket or drum. Submerge the water inlet adaptor completely into the water. The self-priming feature will begin drawing water once the motor starts.

Cleaning and Maintenance

After Each Use

1. Disconnect the power cord from the outlet.
2. Trigger the spray gun to release any remaining pressure in the hose.
3. Disconnect the hose and water inlet. Drain any remaining water from the hose and unit.

4. Wipe the main unit and accessories with a dry cloth.
5. Store all accessories in the built-in storage compartments. Wrap the power cord around the cord storage.

Periodic Maintenance

- Regularly check the anti-impurity filter for debris and clean it if necessary.
- Inspect the hose for cracks or leaks before use.
- Do not attempt to open the motor or pump housing. Contact support for internal servicing.

Troubleshooting

- **Motor does not start:** Check power connection. Ensure the spray gun trigger is pressed. Verify the water source is on and water is reaching the unit.
- **Low pressure or pulsating water stream:** Check for kinks in the hose. Clean the anti-impurity filter and spray nozzle. Ensure the water inlet is fully submerged if using an open source.
- **Motor stops unexpectedly:** The overheat protection may have activated. Turn the unit off and allow it to cool for 15-20 minutes. Check for blockages in the water flow.
- **Leaks from connections:** Ensure all hoses and connectors are tightly fastened.

Warranty and Support

The Inalsa PowerShot 1400 W Pressure Washer is covered by a full domestic warranty against manufacturing defects for a period of 1 year from the date of purchase.

Manufacturer Contact Information:

Tuareg Marketing Pvt Ltd.

Phone: 9773982065 / 66 / 67 / 68 / 69 / 70

For warranty claims or technical support, please have your proof of purchase ready and contact the manufacturer at the number above.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

