

Overview

The Inalsa PowerShot 1600W is a high-pressure washer designed for cleaning tasks in homes, gardens, and for vehicles. It uses a high-pressure water jet to remove dirt, grime, and mildew from various surfaces.



Key components include a main unit with a motor and pump, a high-pressure spray gun, a hose, and various accessories for different cleaning applications.

Features and Specifications

Technical Specifications

Specification	Detail
Motor Power	1600 Watts
Motor Type	100% Pure Copper
Maximum Pressure	135 Bar (1958 PSI)
Maximum Flow Rate	408 Liters per Hour
Working Radius	11 Meters
Hose Length	5 Meters (High Pressure Hose)
Power Source	Corded Electric
Product Dimensions (LxWxH)	12.9 x 9.7 x 27.4 cm
Item Weight	6300 Grams
Compliance	CE, CSA
Colour	Yellow/Black

Key Features

- **Powerful Cleaning:** Generates high pressure for effective cleaning of homes, buildings, cars, decks, driveways, and patios.
- **Aluminium Pump & Metal Gears:** Designed for greater reliability and durability.
- **Self-Priming Feature:** Allows the unit to draw water from an open water source or container.
- **Built-in Storage:** Compartments for storing accessories and a tangle-free power cord storage.
- **Portability:** Equipped with an easy-carry handle and wheels for movement.
- **Water Inlet Adaptor & Filter:** Includes an adaptor and an anti-impurity filter for the water inlet.



What's in the Box

Ensure you have received all the following items:

- 1 Main Unit
- 1 Spray Gun and Extension Rod
- 1 High Pressure Hose Pipe (5m)
- 1 Soap Bottle
- 1 Water Pipe Container
- 1 Cleaning Pin
- 1 Instruction Manual cum Warranty Card



Safety Information

WARNING: High-pressure water can cause serious injury. Always read and follow all safety instructions before use.

- Read the entire manual before operating the pressure washer.
- Never point the spray gun at people, animals, electrical outlets, or the pressure washer itself.

- Do not use the pressure washer on electrical systems, generators, or live electrical components.
- Always wear protective eyewear and sturdy footwear during operation.
- Ensure the unit is placed on a stable, level surface.
- Do not operate the machine if it is damaged or leaking.
- Use only clean water. Do not use with corrosive or flammable liquids.
- Disconnect the power supply before performing any maintenance or connecting/disconnecting hoses.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities.

Use Guide

Assembly and Setup

1. **Unpack:** Remove all items from the packaging.
2. **Connect Water Supply:** Attach the water inlet adaptor to the unit's water inlet. Connect a standard garden hose (not included) from your water tap to this adaptor. Ensure the anti-impurity filter is in place.
3. **Connect High-Pressure Hose:** Screw one end of the provided high-pressure hose to the outlet on the pressure washer unit. Hand-tighten securely.
4. **Connect Spray Gun:** Attach the other end of the high-pressure hose to the spray gun. Connect the extension rod to the spray gun if needed for your task.
5. **Power Cord:** Unwind the power cord fully from its storage compartment and plug it into a grounded electrical outlet. Ensure the outlet matches the voltage rating of the machine.

Operation

1. **Water Source:** Turn on the water supply fully and let water flow through the system for a few seconds to purge air from the hose.
2. **Power On:** Press the power switch on the unit to the 'ON' (I) position. The motor will start.
3. **Using the Spray Gun:**
 - Squeeze the trigger on the spray gun to release high-pressure water.
 - Release the trigger to stop the water flow. The motor may automatically stop when the trigger is released (Auto Start-Stop feature).
 - Start cleaning from a distance and move closer as needed. Keep the spray nozzle moving to avoid damaging surfaces.

4. **Using Detergent (Optional):** For applying soap or detergent, fill the provided soap bottle with a suitable pressure washer detergent. The machine will draw detergent when the appropriate setting or accessory is used. Rinse thoroughly with clean water afterwards.
5. **Power Off:** After completing your task, release the spray gun trigger. Turn the unit's power switch to the 'OFF' (O) position. Turn off the water supply.

Cleaning Applications

- **Cars & Bikes:** Use a wide-angle spray pattern and maintain a safe distance to avoid damaging paint.
- **Patios, Decks & Driveways:** Use a more concentrated jet for stubborn stains on concrete or stone.
- **Garden Furniture & Walls:** Test on a small, inconspicuous area first.
- **General Home Exteriors:** Effective for removing dirt and mildew from siding.

Note: The video content indicates a demonstration of the product in use, setup guidance, and a product comparison.

Maintenance and Storage

- **After Each Use:** Disconnect power and water. Squeeze the spray gun trigger to release any remaining pressure in the hose.
- **Winter Storage:** If freezing temperatures are expected, drain all water from the pump, hose, and gun to prevent damage. Store in a dry place.
- **Hose and Gun:** Inspect for cracks or leaks regularly. Clean the water inlet filter periodically.
- **Storage:** Use the built-in storage compartments to store the hose, spray gun, and accessories. Wrap the power cord neatly in its storage area.
- **Motor:** The motor is sealed and does not require user maintenance.

Troubleshooting

Problem	Possible Cause	Solution
Motor does not start	No power supply. Spray gun trigger is engaged. Thermal overload protector activated.	Check plug and outlet. Release the trigger. Allow motor to cool for 15 minutes.
Low or no pressure	Water supply is off or insufficient. Water inlet filter is clogged. Hose or connection is leaking.	Ensure full water flow. Clean the filter. Tighten connections, check for hose damage.
Motor runs but no water	Air in the pump. Water inlet not submerged (if using a container).	Let water flow through system with gun trigger open. Ensure water source is above the pump inlet.
Machine leaks water	Loose hose connection. Damaged seal or O-ring.	Tighten connections. Contact support for service.
Unusual noise or vibration	Air in the system. Pump or motor issue.	Purge air as described. Discontinue use and contact support.

Warranty and Support

Warranty: The Inalsa PowerShot 1600 W Pressure Washer is covered by a full domestic warranty against any manufacturing defect for a period of 1 Year from the date of purchase. The warranty is limited to manufacturing defects only.

Manufacturer Contact Information:

For service, warranty claims, or product support, contact:

Phone: 9773982065 / 66 / 67 / 68 / 69 / 70

Manufacturer/Packer: Tuareg Marketing Pvt Ltd

Model Number: PowerShot 1600

ASIN: B08GG7HNVCV

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

