

1. Overview

The Oasser V3 is a portable, cordless, handheld vacuum cleaner designed for wet and dry use in cars, homes, and other small spaces. It features a 6500PA suction power, a rechargeable 2600mAh lithium battery, and a stainless steel HEPA filter.



Key attributes include:

- **Cordless & Portable:** Battery-powered for unrestricted movement.
- **Wet/Dry Use:** Capable of cleaning both dry debris and liquid spills.
- **High Suction:** 6500PA suction power for effective cleaning.
- **Multiple Accessories:** Includes various nozzles for different cleaning scenarios.

2. Specifications

Model	YD-610 (V3)
Rated Voltage	11.1V
Rated Power	100W
Battery	2600mAh Lithium-ion (Rechargeable)
Suction Power	6500PA
Dust Cup Capacity	0.5 Liters
Run Time	Approximately 25-30 minutes per full charge
Charge Time	Approximately 7-8 hours for a full charge
Product Dimensions	24.8 x 22.6 x 0.95 cm
Product Weight	700 grams
Charging Method	USB Cable
Filter Type	Stainless Steel HEPA Filter (Washable, Reusable)

3. Components & Accessories



The following items are included in the package:

- 1 x V3 Handheld Vacuum Main Unit

- 1 x Extension Hose
- 1 x Crevice Nozzle
- 1 x Brush Nozzle
- 1 x Storage Bag
- 1 x USB Charging Cable
- 1 x User Manual

Accessory Functions

- **Brush Nozzle:** For cleaning dust from surfaces like keyboards, air vents, and car lighter outlets.
- **Crevice Nozzle:** For cleaning dust and water stains in narrow gaps and corners.
- **Extension Hose:** Allows access to hard-to-reach areas and hidden corners.

4. Operation Guide

4.1 Charging the Vacuum

1. Ensure the vacuum is turned OFF.
2. Connect the provided USB cable to the charging port on the vacuum.
3. Connect the other end of the USB cable to a standard USB power adapter or computer port.
4. The battery is fully charged after approximately 7-8 hours.

Important Charging Notes:

- Do NOT use the vacuum while it is charging.
- Recharge the battery after each use to prolong its lifespan.

4.2 Basic Use

1. Ensure the dust cup and filter are correctly installed.
2. Attach the desired nozzle or hose if needed.
3. Press and hold the power button to turn on the vacuum.
4. Move the vacuum over the area to be cleaned.
5. Release the power button to turn off the vacuum.

4.3 Wet / Dry Use

- **Dry Debris:** Use for dust, crumbs, pet hair, and other dry materials.

- **Liquid Spills:** Use for small water stains and liquid spills. **Avoid backflow of liquid into the motor.** Empty the dust cup immediately after use.



5. Cleaning & Maintenance



5.1 Emptying the Dust Cup

1. Turn off and unplug the vacuum.
2. Detach the dust cup from the main body.
3. Empty debris into a trash bin.
4. Wipe the inside of the dust cup with a dry or damp cloth.

5.2 Cleaning the Filter

The stainless steel HEPA filter is washable and reusable.

1. Remove the filter from the dust cup assembly.
2. Rinse the filter under tap water to remove dust and debris.

3. Allow the filter to air dry completely before reinstalling. Do not use the vacuum with a wet filter.
4. Reinstall the filter and dust cup securely.

5.3 General Care

- Wipe the exterior of the vacuum with a soft, dry cloth.
- Do not immerse the main body, motor, or battery in water.
- Store the vacuum and accessories in the provided storage bag in a cool, dry place.

6. Troubleshooting

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the vacuum fully for 7-8 hours.
Weak suction power.	Dust cup is full or filter is clogged.	Empty the dust cup and clean the filter.
Vacuum stops during use.	Battery is low or motor is overheated.	Recharge the battery. Allow the unit to cool down if overheated.
Liquid not being picked up effectively.	Dust cup is full or liquid backflow is occurring.	Empty the dust cup immediately. Ensure you are not tilting the vacuum excessively during wet pickup.

7. Safety Information

- Read all instructions before using the appliance.
- This appliance is not a toy. Keep away from children.
- Do not use the vacuum to pick up hot ashes, coals, toxic or flammable materials.
- Do not charge the vacuum near heat sources or in direct sunlight.
- Use only the provided USB cable for charging.
- Do not disassemble, modify, or attempt to repair the vacuum. Contact support for service.
- Unplug the charger when not in use.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)