

1. Overview

The SEMIER Retro Cassette Player Recorder Boombox is a portable audio device that plays standard audio cassette tapes and receives AM/FM radio broadcasts. It features a built-in microphone for recording, a 6W speaker, and a 3.5mm headphone jack. The unit can be powered by an AC adapter (included) or 4 C batteries (not included).



2. Features

2.1 Audio Playback & Recording

- **Cassette Playback:** Plays standard audio cassette tapes.
- **Cassette Recording:** Records from the built-in microphone or from the radio tuner onto blank cassette tapes.
- **Auto Stop:** The cassette player features an auto-stop function.



2.2 AM/FM Radio

- **Tuner Range:** AM: 520-1710 kHz. FM: 87-108 MHz.
- **Reception:** Equipped with a telescopic antenna and a DSP chip for improved signal clarity.



2.3 Sound & Connectivity

- **Speaker:** One 6W built-in speaker.
- **Headphone Jack:** 3.5mm output for private listening.

2.4 Power & Portability

- **Dual Power Options:** Operates via included AC power cord (110V) or 4 x C batteries.
- **Portable Design:** Includes a carrying handle. Dimensions: 9.5" x 3.3" x 4.5". Weight: 2.2 lbs.



3. Use Guide

3.1 Initial Setup

1. **Unpack:** Remove the boombox, AC power cord, and user manual from the packaging.

2. Power Choice:

- For home use, connect the AC power cord to the DC input on the boombox and plug it into a standard 110V wall outlet.
- For portable use, open the battery compartment on the underside, insert 4 C batteries (observing correct polarity), and close the compartment.

3.2 Playing a Cassette Tape

1. Press the **EJECT** button to open the cassette compartment door.
2. Insert a standard audio cassette tape with the exposed tape facing outward and the side you wish to play facing the front of the unit.
3. Close the compartment door firmly.
4. Press the **PLAY** button to begin playback.
5. Use **STOP** to halt playback. Use **FF** (Fast Forward) or **REW** (Rewind) to navigate the tape.
6. Press **EJECT** to remove the tape when finished.

Note: The player features an auto-stop function that will halt the tape at the end of a side.

3.3 Recording to a Cassette Tape

1. Insert a blank or recordable cassette tape.
2. To record from the built-in microphone:
 - Press and hold the **RECORD** button (often requires pressing simultaneously with the **PLAY** button).
 - Speak towards the microphone. The recording will start.
3. To record from the radio:
 - Tune to the desired AM or FM station.
 - Press and hold the **RECORD** button (often requires pressing simultaneously with the **PLAY** button).
4. Press **STOP** to end the recording.

3.4 Using the AM/FM Radio

1. Set the **FUNCTION** switch to the **RADIO** position.
2. Set the **BAND** switch to either **AM** or **FM**.
3. Fully extend the telescopic antenna for best reception, especially for FM.
4. Turn the **TUNING** knob to find your desired station. The tuning indicator on the display will show the frequency.

5. Adjust the **VOLUME** knob to your preferred listening level.

3.5 Headphone Use

Plug a standard pair of 3.5mm headphones into the headphone jack. This will typically mute the internal speaker. Adjust volume using the main volume control.

4. Specifications

Item	Specification
Brand	SEMIER
Model Style	Retro
Cassette Functions	Playback & Recording
Radio Bands	AM (520-1710 kHz), FM (87-108 MHz)
Speaker Output	6W
Headphone Jack	3.5mm
Power Supply	AC 110V (cord included) or 4 x C Batteries (not included)
Dimensions (L x W x H)	9.5 x 3.3 x 4.5 inches
Weight	Approx. 2.2 lbs (1 kg)
Built-in Media	AC Cord *1, Cassette Player Boombox *1, User Manual

5. What's in the Box

- Cassette Player Boombox x 1
- AC Power Cord x 1
- User Manual (this document)

6. Care & Maintenance

- Clean the exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the unit away from excessive heat, moisture, and direct sunlight.
- If using batteries, remove them if the unit will not be used for an extended period to prevent potential leakage and damage.

- The cassette playback heads may require occasional cleaning with a dedicated cassette head cleaner for optimal sound quality.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.