

1. Overview

The Oasser V1 is a cordless, handheld vacuum cleaner designed for quick cleanups in homes, cars, and other small spaces. It is a portable, battery-powered unit that can handle both dry debris and wet spills.



Key attributes of the vacuum include its cordless design, washable stainless steel HEPA filter, and included attachments for various cleaning tasks.

2. Features and Specifications

2.1 Physical Specifications


- **Form Factor:** Handheld
- **Weight:** 1.78 pounds
- **Dimensions:** 12.6 x 3.86 x 4.7 inches
- **Dust Capacity:** 0.6 Liters (600ml)
- **Noise Level:** ≤ 72 Decibels

2.2 Power & Battery

- **Power Source:** Battery Powered (Cordless)
- **Battery Type:** Rechargeable Lithium-ion
- **Battery Capacity:** 2000mAh / 2200mAh (as noted in product description)
- **Run Time:** Up to 20 minutes
- **Charge Time:** Approximately 4 hours
- **Wattage:** 100W
- **Voltage:** 12V

2.3 Filtration

- **Filter Type:** Cartridge, HEPA
- **Filter Material:** Washable Stainless Steel

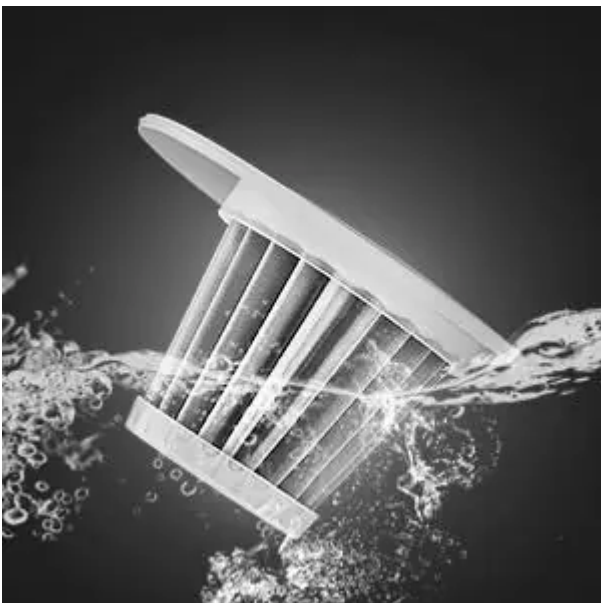

2.4 Performance

- **Suction Power:** 4500PA / 7600Pa (as noted in title and description)
- **Function:** Wet and Dry pickup
- **Special Features:** Compact, Portable, HEPA Filtration

3. Package Contents

- Vacuum Cleaner (Main Unit) x 1
- Stainless Steel HEPA Filter x 1
- Crevice Nozzle x 1
- Brush Nozzle x 1
- Extension Hose x 1
- Charger x 1
- User Manual x 1
- Package Bag x 1



4. Use Guide

4.1 Charging the Vacuum

1. Connect the provided charger to the vacuum's charging port.
2. Plug the charger into a standard wall outlet.
3. A full charge takes approximately 4 hours and provides up to 20 minutes of runtime.

4.2 Basic Operation

1. Ensure the vacuum is charged and the filter is correctly installed.
2. Press the power button to turn the vacuum on.
3. Guide the vacuum nozzle over the area to be cleaned.
4. Press the power button again to turn the vacuum off.

Note: The vacuum features a push-button/touch control method.

4.3 Using the Attachments

Attachments connect to the front of the main vacuum unit.

- **Crevice Nozzle:** For cleaning narrow gaps, corners, and tight spaces. Also suitable for wet spills.
- **Brush Nozzle:** For removing pet hair and debris from upholstery, carpets, and bedding.
- **Extension Hose:** Attach between the main unit and a nozzle to reach into car seats, window sills, and under furniture.



4.4 Emptying the Dust Container

1. Turn off and disconnect the vacuum from the charger.
2. Press the cover release switch or button to detach the dust container cover.
3. Empty the contents into a trash bin.
4. Reattach the cover securely until it clicks into place.

4.5 Cleaning the Filter

1. Remove the dust container cover as described in section 4.4.

2. Remove the stainless steel HEPA filter.
3. Rinse the filter with water and allow it to dry completely before reinstalling.
4. Reinstall the dry filter and secure the cover.

Important: Clean the filter after each use for optimal performance. Ensure the filter is completely dry before reusing the vacuum.



5. Safety and Maintenance

5.1 Safety Instructions

- Use the vacuum only indoors.
- Do not use the vacuum to pick up burning or smoking materials.
- Do not submerge the main vacuum unit, battery, or charger in water.
- Keep the vacuum away from heated surfaces.
- **Wet Pickup Note:** The vacuum can handle wet spills. However, do not use it directly for absorbing large amounts of liquid or store it with liquid inside the dust container.

5.2 Maintenance

- Empty the dust container after each use.
- Clean the filter regularly as described in section 4.5.
- Check attachments and hose for blockages and clear them if necessary.
- Store the vacuum and accessories in the provided package bag in a cool, dry place.
- Use only the provided charger for charging.

6. Troubleshooting

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the vacuum for 4 hours.
Weak suction power.	Dust container is full or filter is clogged.	Empty the dust container and clean the filter.
Vacuum turns off during use.	Battery is low or motor is overheating.	Recharge the vacuum. Allow it to cool down if it feels hot.
Unusual noise.	Blockage in nozzle, hose, or intake.	Turn off the vacuum, disconnect from power, and check for and remove obstructions.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.