

Overview

The ROVSUN 110V Portable Clothes Dryer is a compact, front-loading electric dryer designed for use in small spaces such as apartments, dormitories, and RVs. It features a stainless steel drum, a simple knob control interface, and a maximum load capacity of 5.5 pounds.



Features and Specifications

Key Features

- **Powerful Drying:** 850W heating element with a maximum temperature of 140°F (60°C).
- **Compact & Portable:** Dimensions: 19.5" (L) x 16.5" (W) x 24" (H). Net weight: 37 lbs.
- **Durable Construction:** Stainless steel drum and a white exterior with a see-through door window.
- **Simple Operation:** Classic knob control with clearly labeled functions and drying modes.
- **Safety Feature:** The drum stops automatically if the door is opened during operation.
- **Multiple Filtration:** System filters out lint and cotton wool.
- **Flexible Installation:** Can be placed on a countertop, firm level ground, or wall-mounted using the included kit.



Technical Specifications

- **Brand:** ROVSUN
- **Model Name:** Classic Knob Control (GYJ28-88H1)
- **Rated Voltage:** 110V
- **Power:** 850W
- **Capacity:** 1.5 Cubic Feet / 5.5 Pounds (recommended load)
- **Color:** White
- **Material:** Stainless Steel (drum)
- **Door Orientation:** Front Load

Installation Guide

Unpacking

The package contains the dryer unit. Ensure all packaging materials are removed.

Choosing a Location


- Place the dryer on a firm, flat, and level surface.
- Ensure there is adequate space around the unit for ventilation. Do not block the rear exhaust.
- Locate near a standard 110V electrical outlet.
- The unit can be installed on a countertop, floor, or wall-mounted using the included mounting kit.

Multiple Installation Modes

Ideal for limited spaces



Stacking

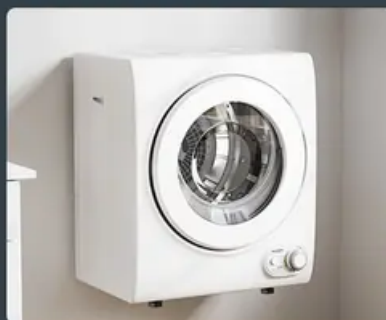

Wall Mounted



Free-standing

Venting (Recommended)

For optimal performance and safety, it is recommended to vent moist air outside. Connect a standard 4-inch diameter dryer vent hose (not included) to the exhaust port on the back of the dryer. Ensure the vent path is clear and not kinked.

Use Guide

Control Panel Overview

The control panel features a single knob. Functions and time/temperature settings are printed around the knob.



Operating Instructions

1. **Load the Dryer:** Open the front door. Place laundry loosely inside the drum, not exceeding 5.5 pounds. Do not overpack. Close the door securely.

2. **Clean the Lint Filter:** Before starting, remove and clean the lint filter located inside the door opening.
3. **Select a Setting:** Turn the control knob to select the desired drying time and temperature combination (e.g., High Heat, Low Heat, Cool Air).
4. **Start the Dryer:** The dryer will begin operating once the knob is turned from the "OFF" position.
5. **During Operation:** The drum will tumble, and heated air will circulate. The door safety lock will engage.
6. **Cycle Completion:** The dryer will stop automatically at the end of the timed cycle. You may hear the fan continue to run briefly to cool down components.
7. **Unloading:** Open the door and remove the laundry. Clean the lint filter again.

Drying Tips

- For fastest drying, ensure clothes are well-spun by your washer first.
- Separate heavy items (like towels) from lightweight items for more even drying.
- Do not dry items that have been in contact with flammable substances.
- Refer to garment care labels for specific drying instructions.

Maintenance and Cleaning

Regular Cleaning

- **Lint Filter:** Clean before or after every use. Remove the filter, brush off lint, and rinse with water if needed. Let it dry completely before reinserting.
- **Secondary Filter:** Periodically check and clean the secondary filter located behind the main lint filter area, as shown in the user reviews.
- **Exhaust Vent:** Regularly inspect and clean the exhaust vent hose and outlet to prevent lint buildup, which is a fire hazard.
- **Exterior:** Wipe the cabinet and door with a soft, damp cloth. Do not use abrasive cleaners.

SPECIFICATIONS

Color:	White
Mode:	Classic Knob Control
Material :	ABS / Stainless Steel
Rated Power:	850W
Voltage:	110V
Max drying capacity:	10 lbs
Recommended drying capacity:	5.5 lbs
Dimensions	19.5" x 16.5" x 24" (LxWxH)
Weight:	37 lbs



Maximizing Appliance Life

- **Avoid Overloading:** Do not exceed the 5.5 lb capacity. Filling the drum only 70-80% allows for proper air circulation.
- **Level Ground:** Always operate the dryer on a flat surface to prevent drum misalignment.
- **Cool Down:** Allow a short break between multiple consecutive drying cycles.
- **Ensure Ventilation:** Never block the air intake or exhaust.

Troubleshooting

- **Dryer does not start:** Check if the power cord is plugged in. Ensure the door is fully closed.
- **Clothes are not drying:** Clean the lint filter and exhaust vent. Ensure you are not overloading the dryer. Verify the correct heat setting is selected.
- **Unusual noise:** Ensure the dryer is on a level surface. Check for small objects (coins, buttons) in the drum. A secondary filter may need cleaning.
- **Dryer stops during cycle:** The door may have been opened. Close the door to resume. If the unit overheats, it may shut off automatically. Allow it to cool and check for blocked vents.

Safety Information

- This appliance is for household use only.
- Connect to a properly grounded 110V outlet.
- Do not use an extension cord.
- Do not dry articles that have been spotted or soaked with oil, paint, gasoline, or other flammable substances.

- Unplug the dryer when not in use for extended periods or during cleaning/maintenance.
- Keep the area around the exhaust vent clear of lint and obstructions.
- The surface of the dryer may become hot during operation. Keep children away.

Product Information

Included Components: Dryer unit, mounting kit.

Warranty: 1-year limited warranty from the date of purchase. The manufacturer offers free exchanges for quality problems within the warranty period.

Contact: For service or questions, contact the seller through your Amazon order details or visit the ROVSUN Store on Amazon.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.