

Overview

This manual provides instructions for the safe installation, operation, and maintenance of the Velieta 15-inch beverage refrigerator. This is a compact, single-zone cooler designed for storing cans and bottles of beverages. It features a glass door, adjustable wire shelves, a digital temperature control, and can be installed as a built-in under-counter unit or used freestanding.



Safety Information

WARNING:

- This appliance must be properly grounded. Plug into a 115V AC, 60Hz grounded outlet only.
- Do not use an extension cord or adapter plug.
- Do not operate the refrigerator if the power cord is damaged.
- Ensure proper ventilation. Do not block the front grille. Maintain at least 2 inches of clearance on the sides and top if installing in an enclosure.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities.
- Children should be supervised to ensure they do not play with the appliance.
- Use the provided door lock to prevent unsupervised access by children.

Product Specifications

Specification	Detail
Model	KMYL100
Color (as documented)	Silver
External Dimensions (D x W x H)	23" x 15" x 33"
Capacity	3.53 Cubic Feet / Up to 127 standard 12-oz cans
Voltage / Frequency	115 Volts AC / 60Hz
Annual Energy Consumption	126.1 kWh
Temperature Range	37°F to 64°F (3°C to 18°C)
Door Configuration	Single, right-hinged glass door with lock
Shelves	3 adjustable wire shelves
Defrost System	Frost Free (Automatic)
Cooling Method	Compressor-based
Installation Type	Built-In (Under Counter) or Freestanding
Net Weight	Approx. 68 lbs (31 kg)

Installation

Choosing a Location

- **Freestanding:** Place on a flat, level, and sturdy floor. Ensure there is adequate space around the unit for air circulation (minimum 2 inches on sides and back, 4 inches on top).
- **Built-In (Under Counter):** The unit is designed for front-ventilation, allowing it to be installed flush under a counter or in a cabinet without rear or top clearance for heat exhaust. Ensure the cut-out dimensions match the unit's external dimensions.
- Keep away from direct sunlight, heat sources (ovens, radiators), and areas with high humidity.
- The surface must support the weight of the fully loaded unit.

Leveling the Unit

The refrigerator has adjustable feet at the front. Use a wrench to turn the feet clockwise to raise or counterclockwise to lower them until the unit is perfectly level. A level unit ensures proper door seal and operation.

Electrical Connection

1. Before plugging in, ensure the voltage of your outlet matches the unit's requirement (115V AC).
2. Plug the power cord directly into a dedicated, properly grounded wall outlet.
3. Do not use a multi-plug adapter or extension cord.

Control Panel & Operation



LED Digital Display

The control panel is located on the front exterior of the unit, above the door.

- **Temperature Display:** Shows the current internal set temperature in degrees Fahrenheit (°F).
- **Temperature Adjustment Buttons:** Use the UP (↑) and DOWN (↓) buttons to set the desired temperature within the 37°F - 64°F range.
- **Power/Function Button:** Press to turn the unit on or off. May also be used to switch between Celsius and Fahrenheit display (refer to specific indicator lights).

Note: Allow the refrigerator to run for 24 hours before loading it with beverages to achieve the set temperature. The blue interior LED light illuminates when the door is open.

Setting the Temperature

1. Press the Power button to turn the unit on.
2. Press the UP or DOWN button to see the current set temperature on the display.
3. Continue pressing the UP or DOWN button to adjust to your desired temperature. A typical setting for canned beverages is between 38°F and 42°F.
4. The display will stop flashing after a few seconds, confirming the new set point.

Features & Use

Storage Capacity and Shelves

The interior can hold up to 127 standard 12-oz beverage cans. The three wire shelves are adjustable and can be removed for cleaning or to accommodate taller bottles.

- **To Remove a Shelf:** Lift the front of the shelf slightly, then pull it forward and out of the support brackets.
- **To Install a Shelf:** Angle the shelf, hook the rear supports into the brackets on the back wall, then lower the front onto the front brackets.



Door Lock

The unit includes a key lock on the door handle.

1. To lock: Close the door and turn the key clockwise.
2. To unlock: Turn the key counterclockwise and remove it.

Store the key in a safe place, away from children.

Glass Door and Lighting

The door features a double-pane tempered glass window. A blue LED light inside the cabinet turns on automatically when the door is opened to illuminate contents.

Care and Maintenance

Cleaning

Always unplug the refrigerator before cleaning.

1. **Interior:** Wipe down with a soft cloth dampened with a mild detergent and warm water solution. Do not use abrasive cleaners or solvents.
2. **Exterior and Door:** Clean the stainless steel frame and glass door with a suitable stainless steel cleaner or a soft cloth with mild soapy water. Dry thoroughly.
3. **Shelves:** Remove shelves and wash with warm, soapy water. Rinse and dry completely before reinstalling.
4. **Condenser:** The front-vented condenser should be kept free of dust and lint. Periodically vacuum the front grille with a brush attachment.

Defrosting

This unit has an automatic, frost-free defrost system. No manual defrosting is required under normal operating conditions.

Long-Term Storage

1. Unplug the unit from the electrical outlet.
2. Remove all contents.
3. Thoroughly clean and dry the interior as described above. Leave the door slightly ajar to prevent mold and odors.

Troubleshooting

Problem	Possible Cause	Solution
Unit does not power on.	No power to outlet. Power cord not fully plugged in. Unit not turned on.	Check circuit breaker. Ensure plug is secure. Press the Power button.
Interior temperature is not cold enough.	Temperature set too high. Door not closed properly. Recently loaded with warm beverages. Insufficient ventilation. Room ambient temperature very high.	Lower temperature setting. Check for obstructions in door seal. Allow 24 hours to stabilize. Ensure clearance for air flow. Ensure room temp is below 95°F (35°C).
Unit is running noisily.	Unit is not level. Bottles/cans touching interior walls. Normal compressor sound during operation.	Level the unit using adjustable feet. Rearrange contents. Some operational noise is normal.
Condensation on glass door.	High room humidity. Door opened frequently.	This is normal in humid environments. Wipe dry as needed. Reduce frequency of door opening.
Interior light does not work.	LED light may be faulty.	Contact customer support.

Warranty and Support

This Velieta beverage refrigerator is backed by a **2-year limited warranty** from the date of purchase. The warranty covers defects in materials and workmanship.

For warranty service, troubleshooting assistance, or to locate replacement parts:

- Contact Amazon Customer Support via phone or chat 7 days a week
- Reference the model number: **KMYL100** and ASIN: **B09F9QD13R**.

Note: The warranty does not cover damage resulting from accident, misuse, abuse, improper installation, commercial use, or unauthorized modifications.

Disposal

At the end of its life, this appliance must not be disposed of with regular household waste. Contact your local waste disposal authority or a qualified recycler for information on the proper disposal of electrical and electronic equipment in accordance with local regulations.

Manual based on product information for Velieta Model KMYL100. Specifications are subject to change. Refer to the product label on your unit for specific electrical ratings.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.