

1. Product Overview



The INALSA MaxxBlend 750 is a 750-watt mixer grinder designed for a variety of food preparation tasks. It includes three stainless steel jars for dry grinding, wet grinding, and making chutneys.

Model: MaxxBlend 750

Color: Black/Grey

2. Specifications

- **Power:** 750 Watts
- **Voltage:** 230 Volts
- **Motor Rating:** 30 minutes (5 minutes On, 2 minutes Off, maximum 6 cycles)
- **Body Material:** ABS Plastic
- **Jar Material:** Stainless Steel
- **Blade Material:** Stainless Steel
- **Controls:** Knob Control with 3 speeds
- **Product Dimensions (D x W x H):** 8.7 x 14.6 x 10.4 cm
- **Weight:** 2800 grams

Jar Details

- 1.5 Litre Stainless Steel Liquidizer Jar
- 0.8 Litre Stainless Steel Multi-Purpose Jar
- 0.4 Litre Stainless Steel Chutney Jar

3. Key Features



3.1 Motor and Performance

- **750-Watt Motor:** Provides high torque for efficient grinding and mixing.
- **High Torque:** Enables powerful grinding for hard ingredients.
- **Overload Protection:** Built-in safety feature to protect the motor.

3.2 Jars and Blades

- **Three Stainless Steel Jars:** Designed for specific tasks (liquidizing, multi-purpose grinding, chutney).
- **Uniquely Designed Blades:** Made of high-grade stainless steel for uniform and powerful grinding.
- **Leak-Proof Design:** Prevents spills during operation.

3.3 Safety and Build

- **ABS Body:** Provides sturdiness and durability for heavy grinding applications.
- **Safety Lock:** Ensures the unit operates only when the jar is correctly locked onto the base.
- **Adjustable Speed Control:** Knob with three speed settings for different textures.

4. Usage Guide



4.1 Before First Use

1. Remove all packaging material.
2. Wash the jars, lids, and blades with warm soapy water. Rinse and dry thoroughly.
3. Wipe the main motor unit with a damp cloth. Do not immerse it in water.



4.2 Operating Instructions

1. Assembling the Jar:

- Place the blade assembly onto the jar's base.
- Fill the jar with ingredients, ensuring not to exceed the maximum capacity.
- Place the lid on the jar and lock it securely.

2. Mounting the Jar:

- Place the assembled jar onto the motor unit.
- Rotate it clockwise until it locks into place with a click. The safety lock will engage.

3. Selecting Speed:

- Use the control knob to select the desired speed (1, 2, or 3). Start at a lower speed for coarse grinding and increase for finer textures.

4. Operation:

- Press the power button to start. Operate in short bursts for dry grinding.
- Do not operate continuously for more than 5 minutes. Allow a 2-minute cool-down period between cycles. Do not exceed 6 cycles (30 minutes total rating).

5. Removing the Jar:

- Switch off and unplug the unit.
- Rotate the jar counter-clockwise to unlock and remove it from the base.

Important: Never operate the mixer grinder without the jar lid securely locked. Do not run the motor without a jar attached. Do not immerse the motor unit in water or any other liquid.

4.3 Recommended Uses for Each Jar

- **1.5L Liquidizer Jar:** For wet grinding, making smoothies, shakes, and batter.
- **0.8L Multi-Purpose Jar:** For dry grinding spices, coffee beans, and making fine powders.
- **0.4L Chutney Jar:** For grinding small quantities of chutneys, garlic, ginger, and green chilies.

5. Cleaning and Maintenance



- Always unplug the appliance before cleaning.
- Clean the jars, lids, and blades immediately after use with warm soapy water. They are not dishwasher safe.
- Wipe the motor unit with a soft, damp cloth. Do not use abrasive cleaners.
- Ensure all parts are completely dry before reassembling or storing.
- Check the blade sharpness periodically. Do not attempt to sharpen the blades yourself.

6. Troubleshooting

Problem	Possible Cause	Solution
Motor does not start.	Unit not plugged in. Jar not locked properly. Overload protection activated.	Check power connection. Ensure jar is correctly locked. Wait 30 minutes for motor to cool down.
Unusual noise or vibration.	Jar not assembled correctly. Ingredients are uneven or too hard. Foreign object in jar.	Stop immediately. Check jar assembly. Ensure ingredients are cut into small pieces. Check for obstructions.
Leakage from jar.	Lid not sealed properly. Gasket damaged or missing. Jar overfilled.	Ensure lid is locked securely. Check the rubber gasket on the lid. Do not exceed maximum capacity.
Poor grinding results.	Incorrect speed setting. Overfilling the jar. Blades are dull.	Use appropriate speed. Grind in smaller batches. Contact customer support for blade inspection.

7. Safety Information

- This appliance is for household use only.
- Use only with the provided jars and accessories.
- Do not use the appliance for anything other than its intended food preparation purposes.
- Keep hands and utensils away from moving blades.

- Do not operate the appliance if the cord or plug is damaged, or if it malfunctions.
- Ensure the voltage (230V) matches your local supply.
- Keep the appliance and cord away from hot surfaces and open flames.
- Do not let the cord hang over the edge of a table or counter.

8. Warranty and Support

Warranty: This product comes with a 2-year warranty from the brand INALSA, valid from the date of purchase.

Manufacturer/Importer Contact Information:

Tuareg Marketing Private Limited

Khasra No- 1189, Bhalswa, New Delhi-110033, IND.

Contact: 9773982065

For warranty service or support, please contact the manufacturer using the details above. Keep your proof of purchase.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.