

1. Overview

The INALSA DuraClean is a corded, handheld vacuum cleaner designed for home, car, and office use. It is a portable unit featuring an 800 W motor and a HEPA filtration system.



Primary Use Cases: Spot cleaning on upholstery, car interiors, tight corners, stairs, and other hard-to-reach areas where a larger vacuum is impractical.

2. Package Contents

Before use, verify you have all the following components:

- 1x Vacuum Cleaner main unit with integrated HEPA filter.

- 1x Hose Pipe.
- 1x Round Brush attachment.
- 1x Crevice Nozzle attachment.
- 1x Accessories Adaptor.
- 1x Instruction Manual & Warranty Card.

Note: Do not operate the appliance if any parts are missing or damaged. Contact customer support.

3. Product Features & Specifications

3.1 Key Specifications

- **Motor Power:** 800 Watts
- **Suction Power:** Up to 16 KPa
- **Filter Type:** HEPA Filter (captures 99.97% of dust and particles)
- **Power Source:** Corded Electric (Not cordless)
- **Voltage:** 800V
- **Noise Level:** Approximately 10 Decibels
- **Weight:** 980 grams
- **Dimensions (LxWxH):** 18.1 cm x 6.7 cm x 6.7 cm
- **Form Factor:** Handheld

3.2 Main Unit Components



- **Main Body:** Houses the motor, dust container, and HEPA filter.
- **Dust Container:** Translucent bin for collecting dirt. Features a one-button release for easy emptying.
- **Power Button:** Push-button switch to turn the vacuum on and off.
- **Power Cord:** Fixed electrical cord for power supply.
- **Accessory Port:** Socket where the hose pipe or adaptor connects.

3.3 Attachments & Their Uses

- **Hose Pipe:** Provides extended reach for cleaning under furniture, inside car footwells, and other awkward spaces.
- **Round Brush:** Designed for gentle cleaning of delicate surfaces like upholstery, sofas, mattresses, and car seats. Effectively picks up hair and surface dust.
- **Crevice Nozzle:** Long, flat nozzle for reaching deep into tight corners, between cushions, along edges, and in car vents.
- **Accessories Adaptor:** Connects the hose pipe to the main unit or allows direct attachment of brush/crevice tools to the hose.

4. Use Guide

4.1 Initial Setup & Assembly

1. Unpack all components and place them on a clean, dry surface.
2. Ensure the dust container is securely locked onto the main body of the vacuum.
3. To use an attachment:
 - For direct cleaning: Push the Round Brush or Crevice Nozzle firmly into the accessory port on the main unit until it clicks.
 - For extended reach: Connect the Hose Pipe to the accessory port on the main unit. Then, connect the desired attachment (Brush or Crevice Nozzle) to the other end of the hose.
4. Plug the power cord into a standard 800V electrical outlet.

4.2 Basic Operation

1. Press the Power Button to start the vacuum. The motor will activate.
2. Guide the chosen attachment over the surface to be cleaned. Use slow, overlapping strokes for best results.
3. For the Round Brush, use a gentle back-and-forth motion on fabrics.
4. For the Crevice Nozzle, insert it fully into gaps and move it along the length of the crevice.
5. Press the Power Button again to turn the vacuum off after use.
6. Unplug the power cord from the outlet.

4.3 Emptying the Dust Container

1. Ensure the vacuum is turned off and unplugged.
2. Hold the main unit over a trash bin.
3. Press the container release button and remove the dust container.
4. Empty the contents into the bin.
5. Reattach the container to the main unit, ensuring it clicks securely into place.

Warning: Do not operate the vacuum with a full dust container, as this will reduce suction and may damage the motor.

4.4 Maintenance & Filter Care

- Empty the dust container after each use or when it is half-full.

- **HEPA Filter Cleaning:** The HEPA filter is washable. Remove it from the dust container according to the manual's diagram. Rinse under lukewarm water and allow it to air dry completely for at least 24 hours before reinstalling. Do not use the vacuum with a wet filter.
- Wipe the exterior of the vacuum and attachments with a dry or slightly damp cloth. Do not immerse any part of the vacuum in water.
- Check the hose and attachments for blockages if suction power seems reduced.
- Store the unit and all accessories in a cool, dry place.

5. Safety Instructions

- This appliance is for indoor use only.
- Intended for household use. Not an industrial tool.
- Do not use to pick up liquids, burning materials (ashes, cigarettes), or sharp, hard objects (glass, nails).
- Do not use the vacuum if the power cord or plug is damaged.
- Do not block the air intake or exhaust vents.
- Keep hair, loose clothing, fingers, and all body parts away from openings and moving parts.
- Unplug the vacuum before performing any maintenance, connecting/disconnecting attachments, or emptying the dust container.
- This appliance can be used by children aged 8 years and above and persons with reduced capabilities only if they have been given supervision or instruction concerning safe use.

6. Troubleshooting

- **Vacuum does not turn on:** Check that the power cord is securely plugged into the outlet. Ensure the outlet is functional.
- **Reduced suction power:**
 - Empty the dust container.
 - Check and clean the HEPA filter (ensure it is completely dry).
 - Check the hose and attachments for clogs.
- **Unusual noise or vibration:** Turn off and unplug immediately. Check for a blockage in the hose, nozzle, or air path. Ensure the dust container is correctly seated.
- **Motor stops during use:** The motor may have overheated. Turn off the vacuum, unplug it, and allow it to cool for 30-60 minutes. Check for blockages before restarting.

7. Warranty and Support

This product is covered by a **1-year manufacturer's warranty** from the date of purchase, provided by INALSA.

Warranty Service Process (for defective items):

1. Contact INALSA for on-call support.
2. A technician inspection will be arranged at your location.
3. The INALSA expert will repair the product, provide a replacement, or issue a service letter as applicable.

Manufacturer / Importer Contact Information:

Tuareg Marketing Private Limited

Important: For warranty claims, retain your proof of purchase (invoice). The warranty does not cover damage from misuse, accidents, or unauthorized repairs.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.