

1. Product Overview



The AGARO Regency Air Fryer is a 12-litre capacity, 1800W multi-function cooking appliance. It combines air frying, baking, roasting, toasting, and rotisserie functions into a single unit with a digital touch control panel.

Key Specifications

- **Capacity:** 12 Litres
- **Power:** 1800W, 230V

- **Temperature Range:** 80°C to 220°C
- **Timer Range:** 1 to 90 minutes
- **Primary Material:** Stainless Steel
- **Dimensions (D x W x H):** 30 cm x 25 cm x 80 cm
- **Weight:** 9 kg

2. Features and Functions



2.1 Cooking Functions

The appliance offers multiple cooking modes:

9 Preset Recipe Menus

- French Fries
- Roast
- Fish
- Shrimps
- Pizza

- Chicken
- Baking
- Rotisserie
- Toast

3 Assist Cooking Functions

- **Reheat:** For warming previously cooked food.
- **Preheat:** Heats the oven to a set temperature before cooking.
- **Defrost:** For thawing frozen food items.

4 Control Settings

Manual control for temperature, time, and function selection.

2.2 Control Panel and Display

- **Bevelled LED Digital Screen:** Shows time, temperature, and selected function.
- **Touch Control Panel:** For selecting functions and adjusting settings.
- **Transparent Cooking Window with Interior Light:** Allows you to monitor food without opening the door.

2.3 Safety and Convenience Features

- **360° Heat Circulation Technology:** For even cooking.
- **Overheating Protection:** Automatically cuts power if unsafe temperatures are reached.
- **Automatic Shut-off:** Turns the appliance off when the timer ends.
- **Circuit Overload Protection:** Safeguards against electrical faults.
- **Dishwasher Safe Accessories:** Removable parts are safe for cleaning in a dishwasher.

3. What's in the Box

- 1 x AGARO Regency Air Fryer Oven (Main Unit)
- 1 x Rotating Basket
- 1 x Handle Tool
- 1 x Rotisserie Fork
- 1 x Skewer Rack
- 2 x Mesh Racks
- 1 x Drip Tray

- 1 x Frying Basket
- 2 x Heat-Resistant Gloves
- 1 x Recipe Book
- 1 x User Manual

4. Use Guide

4.1 Before First Use

1. Remove all packaging materials and stickers.
2. Wash all removable accessories (mesh racks, drip tray, frying basket, rotisserie fork) with warm, soapy water. Dry thoroughly.
3. Wipe the interior and exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
4. Place the appliance on a stable, flat, heat-resistant surface, away from walls, cabinets, and other heat-sensitive materials. Ensure at least 10 cm of clearance on all sides.
5. Plug the power cord into a grounded 230V electrical outlet.

4.2 Basic Operation

1. **Place Food:** Place food in the appropriate accessory (frying basket, mesh rack, or rotisserie fork). Do not overfill. Ensure food does not touch the heating element.
2. **Insert Accessory:** Slide the loaded accessory into the oven chamber.
3. **Close Door:** Ensure the glass door is fully closed.
4. **Select Function:**
 - For a preset recipe, press the corresponding menu button (e.g., "Chicken", "Pizza"). The default time and temperature for that recipe will be set.
 - For manual cooking, press the "Temperature" or "Time" buttons and use the +/- touch controls to set your desired values (80-220°C, 1-90 min).
 - For assist functions like Defrost or Reheat, select the corresponding button.
5. **Start Cooking:** Press the "Start/Pause" button. The interior light and display will turn on, and cooking will begin.
6. **Monitor Cooking:** You can view food through the window. You may pause cooking to shake or turn food for even results by pressing "Start/Pause". Press it again to resume.
7. **End of Cycle:** When the timer ends, the appliance will beep and switch off. The display may show "END".
8. **Remove Food:** Wearing the provided heat-resistant gloves, carefully open the door and remove the hot accessory. Place it on a heat-resistant surface.

9. **Unplug:** Once the appliance has cooled completely, unplug it from the wall outlet.

4.3 Using the Rotisserie Function

1. Skewer the food (e.g., whole chicken) securely onto the rotisserie fork.
2. Insert the ends of the fork into the slots on the skewer rack inside the oven.
3. Select the "Rotisserie" preset menu or set temperature and time manually.
4. Press start. The rotisserie fork will rotate automatically during cooking.

5. Cleaning and Maintenance

Warning: Always unplug the appliance and let it cool completely before cleaning.

5.1 Main Unit

- Wipe the exterior and interior walls with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- For stubborn stains inside the oven, use a mild detergent on a damp cloth. Ensure no liquid enters the ventilation slots or control panel.
- The glass door can be cleaned with a standard glass cleaner.

5.2 Removable Accessories

- All accessories (mesh racks, drip tray, frying basket, rotisserie fork, skewer rack) are dishwasher safe (top rack recommended).
- Alternatively, wash in warm, soapy water with a non-abrasive sponge. Dry thoroughly before storage.

5.3 Storage

Ensure all parts are completely dry before storing. Store the appliance in a cool, dry place. Do not place heavy items on top of it.

6. Troubleshooting

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in. Power outlet issue.	Check that the power cord is securely plugged into a working 230V outlet.
Food is not cooked evenly.	Overloaded basket. Incorrect rack position.	Do not overload. Shake or turn food halfway through cooking. Ensure proper air circulation around food.
Smoke or unusual smell during first use.	Manufacturing residues or protective oils burning off.	This is normal. Ensure the room is well-ventilated. It should stop after the first few uses.
Error code or display not working.	Electrical fault or control error.	Unplug the appliance for 10 minutes, then plug it back in. If the problem persists, contact support.
Door does not close properly.	Food or accessory obstructing the door seal.	Check that no item is blocking the door. Ensure the accessory is correctly positioned inside.

7. Safety Information

Important Precautions

- This appliance is for household use only. Not for commercial purposes.
- Do not use the appliance outdoors or near water.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Do not cover air vents during operation.
- The exterior surfaces, door, and accessories become very hot during use. Always use the provided heat-resistant gloves when handling.
- Keep the cord away from hot surfaces. Do not let it hang over the edge of a table or counter.
- Unplug the appliance when not in use and before cleaning.
- Do not use accessories or parts not recommended by the manufacturer.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

8. Warranty and Support

This product is covered by a **2-year warranty on the product** from the date of purchase, against manufacturing defects under normal household use.

Contact Information

- **Manufacturer:** PurpleStar Mfg. Pvt. Ltd., Chinthamani – Taluk, Karnataka-563 128.
- **Importer (India):** Universal Corporation Limited, 4/1 Middleton Street, Sikkim Commerce House, Kolkata-71.

For warranty service or technical support, please contact the seller from whom you purchased the product or the manufacturer/importer using the contact details provided in the warranty card included in the box. Please have your model number (33684) and proof of purchase ready.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.