

1. Overview

The Nahida Black Milk Frother Wand is a handheld, rechargeable electric mixer designed for creating milk foam and mixing various beverages and ingredients. It features three detachable stainless steel whisk heads and three speed settings.

Primary Functions:

- Create milk foam for lattes and cappuccinos.
- Mix powdered drinks like protein shakes, matcha, or nutritional supplements.
- Whisk eggs, cream, or other ingredients for baking and cooking.



2. Package Contents

- Main frother unit (body)
- Hook Whisk attachment
- Spring Whisk attachment
- Balloon Whisk attachment
- USB charging cable
- User manual (this document)

Please verify all items are present before use.

3. Product Features & Components

3.1 Main Unit

- **Body Material:** ABS plastic.
- **Handle:** Ergonomic design for comfortable grip.
- **Dimensions:** Approximately 4 inches wide, 9 inches high.
- **Weight:** 8 ounces.
- **Base:** Flat bottom, allowing the unit to stand upright on a counter.



3.2 Control Buttons & Indicator

- **Three Speed Buttons:** Labeled High, Medium, and Low. Each button turns the frother on at its respective speed. Press the same button again to turn it off.
- **Battery Indicator Light:** Shows remaining battery power.
 - Illuminates to show power level (Low/Medium/Full).
 - Also functions as a charging indicator (red while charging, green when fully charged).



3.3 Whisk Attachments

All whisk heads are made of stainless steel and are detachable for cleaning and storage.

- **Spring Whisk:** Designed for creating fine, creamy milk foam for lattes, cappuccinos, and hot chocolate.
- **Balloon Whisk:** Designed for whipping eggs, cream, or condensed milk. Suitable for baking tasks.
- **Hook Whisk:** Designed for mixing powders (protein, milk powder, oatmeal) into liquids without clumping. Provides thorough mixing from top to bottom of the container.



3.4 Battery & Charging

- **Battery Type:** Built-in rechargeable lithium battery (1500mAh / 1200mAh capacity).
- **Charging Port:** USB (Type-C compatible as per product description).
- **Charging:** Use the included USB cable to connect to a computer, wall adapter, or power bank.

4. Use Guide

4.1 Before First Use

1. Unpack all components.
2. Fully charge the frother before initial use. The indicator light will turn green when charging is complete.
3. Wash the whisk attachments with warm, soapy water and dry thoroughly. **Do not immerse the main unit body in water.**

4.2 Attaching a Whisk Head

1. Align the notch on the desired whisk head with the slot on the bottom of the main unit.

2. Push the whisk head firmly onto the shaft until it clicks securely into place.

4.3 Basic Operation

1. **Select Container:** Use a cylindrical container with a diameter of about 90-100mm (3.5-4 inches) and a height of at least 110mm (4.3 inches). A tall mug or a small pitcher is recommended.
2. **Add Ingredients:** Pour your liquid (milk, water, etc.) into the container. For frothing milk, do not fill the container more than 1/3 full to prevent overflow.
3. **Insert Frother:** Submerge the whisk head vertically into the liquid. Position it so the liquid covers the whisk head completely. For frothing, start with the whisk head about one-third of the way down from the surface.
4. **Select Speed:**
 - **Low Speed:** For stirring powders, egg yolks, or gentle mixing.
 - **Medium Speed:** For making jam, matcha, or thicker mixtures.
 - **High Speed:** For creating milk foam or whipping cream/egg whites.
5. **Activate:** Press the desired speed button. The frother will start immediately.
6. **Monitor Process:** For milk froth, typical time is 15-20 seconds. You may gently move the frother up and down slightly to incorporate air.
7. **Turn Off:** Press the same speed button again to stop.

Important Tip: The frother is powerful. To avoid splashing, keep the whisk head submerged and do not tilt the unit excessively during operation.

4.4 Recommended Uses for Each Whisk

- **Spring Whisk:** Milk (dairy or non-dairy) for latte/cappuccino foam, hot chocolate.
- **Balloon Whisk:** Whipping eggs, making whipped cream, mixing condensed milk.
- **Hook Whisk:** Mixing protein powder, collagen, milk powder, oatmeal, nutritional supplements into water, milk, or juice.

5. Charging & Battery Care

1. Connect the small end of the USB cable to the charging port on the frother.
2. Connect the other end to a USB power source.
3. The battery indicator light will glow red while charging.
4. When fully charged, the light will turn green. Disconnect the cable.
5. **Battery Indicator During Use:** The light shows the current battery level (e.g., dim for low, medium brightness for medium, full brightness for full).

Note: Battery life will vary based on usage frequency and speed setting. A full charge typically supports multiple uses.

6. Cleaning & Maintenance

- **Whisk Heads:** Detach immediately after use. Rinse under warm water. For stubborn residue, wash with mild dish soap and a soft brush. Dry thoroughly before storage.
- **Main Unit Body:** Wipe clean with a damp cloth. **DO NOT immerse in water or place in a dishwasher.** Ensure no liquid enters the charging port or button area.
- **Storage:** Store in a dry place. You can stand the unit upright on its flat base. Store whisk heads separately to prevent damage.



7. Troubleshooting

Problem	Possible Cause	Solution
Frother does not turn on.	Battery is depleted.	Connect to USB power to charge.
Weak power or slow speed.	Battery is low.	Recharge the unit.
Milk or liquid splashes excessively.	Container is too full or speed is too high for the volume.	Use a larger container. Do not fill more than 1/3 full for frothing. Start at a lower speed.
No foam is created.	Using the wrong whisk head (e.g., Hook instead of Spring). Milk type may not be suitable for frothing (e.g., some non-dairy milks).	Use the Spring Whisk for foam. Ensure milk is cold for better frothing results.
Whisk head feels loose or detaches during use.	Not attached securely.	Turn off the frother. Remove and re-attach the whisk head, ensuring it clicks firmly into place.

8. Specifications

- **Model:** JDMF2022 / JD-MFBLACK
- **Power Source:** Rechargeable Lithium Battery
- **Battery Capacity:** 1500mAh (as per item description)
- **Charging:** USB (Type-C compatible)
- **Speeds:** 3 (High, Medium, Low)
- **Attachments:** 3 (Stainless Steel Spring, Balloon, Hook Whisk)
- **Material (Body):** ABS Plastic
- **Material (Whisks):** Stainless Steel
- **Care:** Hand wash whisk heads only. Wipe main body with damp cloth.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)