

Model: WH207A | Color: Rose Gold

Overview

The Glynzak Wireless Bluetooth Headphones are over-ear headphones designed for wireless audio streaming, hands-free calling, and extended listening sessions. They feature a foldable, lightweight construction, a built-in microphone, and support for multiple EQ modes.



What's in the Box

- Glynzak Wireless Bluetooth Headphones (WH207A)

- Charging cable (USB-A to USB-C, detachable)
- 3.5 mm audio cable (detachable, for wired mode)
- User manual

Product Features

Design & Comfort

- **Over-ear fit:** Ear cups are made of PU artificial leather, waterproof and resistant to deformation.
- **Soft ear cushions:** Cushions wrap around the ear to reduce pressure and prevent resonance at high volumes.
- **Adjustable headband:** Stretchable and adjustable to fit various head shapes.
- **Foldable:** Ear cups fold inward for compact storage and travel.



Audio Performance

- **Driver:** 40 mm dynamic driver for HiFi stereo sound.
- **Frequency response:** 20 Hz – 20,000 Hz.
- **Impedance:** 32 Ohms.
- **6 EQ Modes:** Switch between preset equalizer settings to match music genres or personal preference.




Battery & Charging

- **Playtime:** Up to 65 hours on a full charge (at moderate volume).
- **Quick charge:** 10 minutes of charging provides approximately 4 hours of playback.
- **Full charge time:** Approximately 2.5 hours.




Bluetooth & Connectivity

- **Bluetooth version:** 5.3 (compatible with Bluetooth V6.0 advertised).
- **Wireless range:** Up to 10 meters (33 feet).
- **Multi-point connection:** Connect to two Bluetooth devices simultaneously; switch seamlessly between calls, video, and music.
- **Wired mode:** Use the included 3.5 mm audio cable for a stable, battery-free connection.

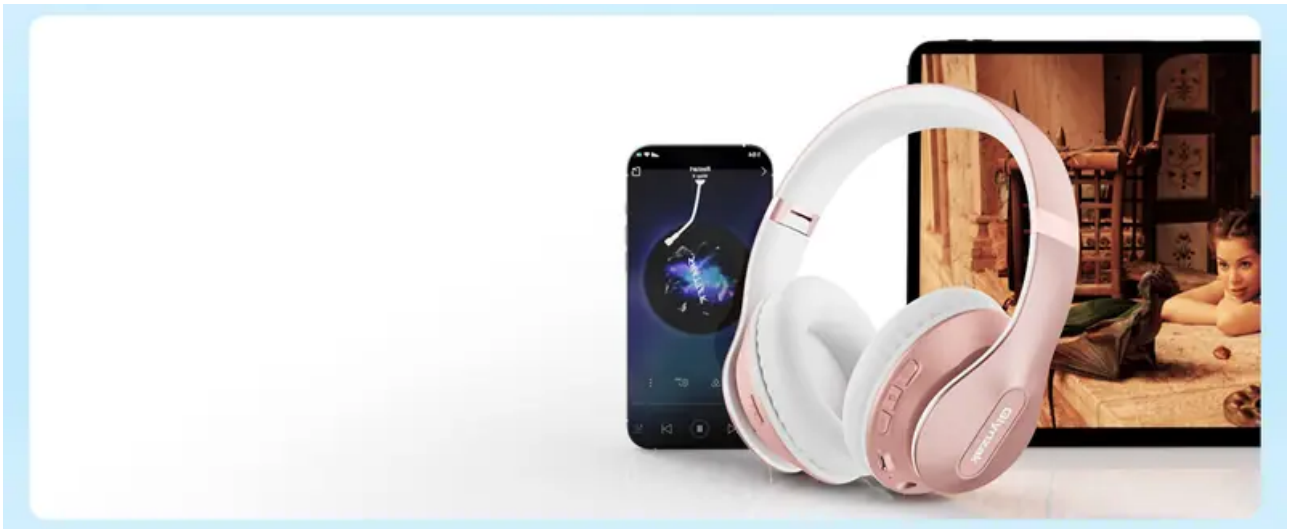

Controls & Microphone

- **Button controls:** Power, volume +/-, play/pause, track skip, and EQ mode selector.
- **Built-in microphone:** For hands-free calling and voice assistant access.
- **LED indicator:** Shows power and pairing status (blue/red).

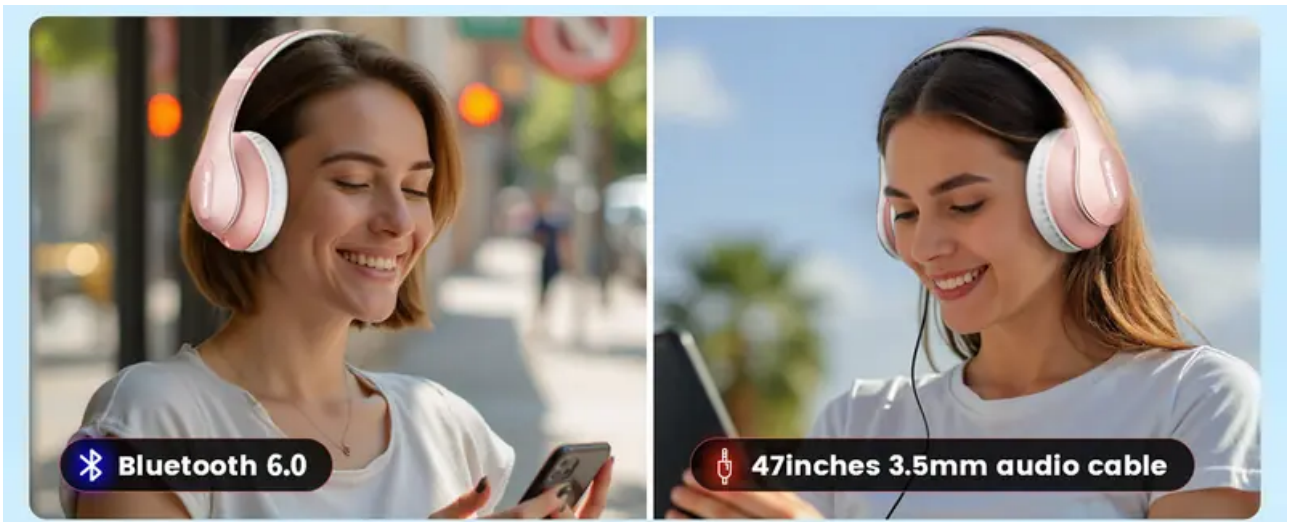

Getting Started

Charging the Headphones

1. Connect the included USB charging cable to the charging port on the right ear cup.
2. Connect the other end to a USB power source (computer, wall adapter, etc.).
3. The LED indicator will turn red during charging and turn off (or change to blue) when fully charged.
4. A full charge takes approximately 2.5 hours.

Power On / Off

- **Power on:** Press and hold the power button for 2 seconds. The LED will flash blue.
- **Power off:** Press and hold the power button for 2 seconds. The LED will turn off.

Pairing with a Bluetooth Device

1. Ensure the headphones are powered off.
2. Press and hold the power button for 2 seconds. The LED will flash blue and red alternately, indicating pairing mode.
3. On your device (smartphone, computer, etc.), enable Bluetooth and search for available devices.
4. Select "**WH2037A**" (or "WH207A") from the list.
5. If prompted, enter the PIN **0000** or confirm the pairing request.
6. Once connected, the LED will flash blue slowly.

Multi-Point Connection (Two Devices)

1. Pair the headphones with the first device as described above.
2. Disconnect Bluetooth from the first device (or turn off Bluetooth on that device).
3. Put the headphones into pairing mode again (press and hold power button).
4. Pair with the second device.
5. Re-enable Bluetooth on the first device; the headphones will automatically reconnect to both.

Using the Headphones

Music Playback Controls

- **Play / Pause:** Press the multi-function button (center button) once.
- **Next track:** Press the volume + button and hold for 1 second.
- **Previous track:** Press the volume – button and hold for 1 second.
- **Volume up / down:** Press the volume + or – button briefly.

Hands-Free Calling

- **Answer a call:** Press the multi-function button once.
- **End a call:** Press the multi-function button once.
- **Reject a call:** Press and hold the multi-function button for 2 seconds.
- **Redial last number:** Double-press the multi-function button when not on a call.

Switching EQ Modes

- Press the EQ button (if available) to cycle through the 6 preset equalizer modes.
- Each mode adjusts the sound profile (e.g., bass boost, vocal clarity, balanced).
- The LED may flash briefly to indicate mode change.

Using Wired Mode

1. Connect the included 3.5 mm audio cable to the headphone jack on the left ear cup.
2. Connect the other end to your audio source (phone, computer, etc.).
3. The headphones will automatically switch to wired mode; Bluetooth is disabled.
4. No battery power is required for wired operation.

Indicator Lights

LED Status	Meaning
Flashing blue and red alternately	Pairing mode
Flashing blue slowly	Connected to a device
Solid red (while charging)	Battery charging
LED off (while charging)	Fully charged
Flashing red	Low battery

Specifications

Item	Specification
Model	WH207A
Bluetooth Version	5.3
Wireless Range	10 meters (33 feet)
Driver Size	40 mm
Frequency Response	20 Hz – 20,000 Hz
Impedance	32 Ohms
Battery Life	Up to 65 hours
Charge Time	Approx. 2.5 hours
Quick Charge	10 min = 4 hours playback
Weight	10.6 ounces (300 g)
Microphone	Built-in
Audio Jack	3.5 mm (detachable cable)
Water Resistance	Moisture resistant (sweat-proof)

Troubleshooting

- **Headphones not turning on:** Charge the battery for at least 30 minutes, then try again.
- **Cannot pair with device:** Ensure the headphones are in pairing mode (LED flashing blue/red). Delete the device from your phone's Bluetooth list and try again.
- **Audio cuts out or is distorted:** Move closer to the source device (within 10 meters). Avoid obstacles like walls or metal objects.
- **Microphone not working:** Ensure the headphones are selected as the audio input device on your computer/phone.
- **No sound in wired mode:** Check that the cable is fully inserted into both the headphone and the audio source.

Warranty and Support

The Glynzak WH207A headphones come with a **12-month warranty** and **lifetime technical support**.

For support, contact Glynzak through the Amazon store or the contact information provided in the product packaging.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)