

Overview

This manual provides instructions for the safe and effective use of the KitchMix 4-Slice Stainless Steel Toaster. This appliance features dual independent controls, an LCD timer, extra-wide slots, and multiple specialized functions for toasting a variety of bread products.



Features and Specifications

Physical Specifications

- **Brand:** KITCHMIX
- **Model Number:** 8200E
- **Color:** Stainless Steel (also available in Black, Cream, Gray, Red, White)
- **Material:** Stainless Steel
- **Dimensions (D x W x H):** 10.43" x 11.5" x 7.09"
- **Weight:** 2.53 kg (5.58 lbs)

Technical Specifications

- **Slot Count:** 4

- **Slot Width:** 1.5 inches (Extra Wide)
- **Wattage:** 1650W
- **Voltage:** 120V (For use in the United States)
- **Display Type:** LCD Timer Screen (Dual Screens)
- **Browning Settings:** 6 Shade Levels

Key Features

- **Dual Independent Controls:** Two separate control panels allow you to toast different items with different settings simultaneously.
- **LCD Timer Screens:** One screen per control panel displays the countdown during the toasting cycle.
- **Specialty Functions:** Bagel, Defrost, Reheat, and Cancel buttons.
- **Manual High-Lift Lever:** Allows you to raise toast higher than its natural pop-up position for easy and safe removal.
- **Removable Crumb Trays:** Two trays located at the back for easy cleanup.
- **Cord Storage:** A wrap under the toaster base helps manage the power cord.

Safety Information

WARNING: To reduce the risk of fire, electric shock, or injury:

- This appliance is for household use only. Do not use outdoors.
- Do not immerse the toaster, cord, or plug in water or any other liquid.
- Unplug the toaster from the outlet when not in use and before cleaning.
- Do not operate the toaster with a damaged cord or plug, or if it has malfunctioned.
- The outside surfaces will become hot during use. Do not touch hot surfaces. Use the high-lift lever or handles.
- Do not toast oily, buttery, or watery foods as this may cause a fire hazard.
- Do not insert any objects, including utensils or fingers, into the toaster slots.
- Keep the toaster away from flammable materials, including curtains, wall coverings, and paper.
- This toaster is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities.
- Always empty the crumb tray regularly to avoid a buildup of crumbs, which can catch fire.

Parts and Controls



1. **Toasting Slots (4):** 1.5-inch wide slots with self-centering guides.
2. **Control Panels (2):** Located on the front, one for the left two slots and one for the right two slots. Each contains:
 - **LCD Timer Screen:** Displays the countdown for the selected toasting cycle.
 - **Browning Control Dial/Knob:** Selects the desired shade from 1 (light) to 6 (dark).
 - **Function Buttons:** Bagel, Defrost, Reheat, and Cancel.
3. **High-Lift Lever:** The large lever used to lower bread into the toaster and to manually raise it for removal.
4. **Removable Crumb Trays (2):** Slide-out trays located at the back of the toaster base.
5. **Cord Storage Wrap:** Located underneath the toaster base.
6. **Power Cord:** With a polarized plug.

Use Guide

Before First Use

1. Remove all packaging materials.
2. Wipe the exterior with a damp cloth and dry thoroughly. Do not immerse the toaster in water.
3. Operate the toaster without any bread on the highest browning setting to burn off any manufacturing residues. Ensure the room is well-ventilated.

Basic Toasting

1. Plug the toaster into a standard 120V electrical outlet.
2. Place slices of bread, bagel halves, English muffins, or waffles into the slots. **Do not force food.**
3. Select the desired browning level (1-6) using the dial on the relevant control panel.
4. Press the high-lift lever down until it clicks and locks into position. The LCD screen will illuminate and begin the countdown.

5. When toasting is complete, the lever will pop up automatically. For safer removal of smaller items, you can manually raise the lever higher than its natural stop.
6. If you wish to stop toasting early, press the **Cancel** button. The lever will pop up immediately.

Note: The two control panels operate independently. You can toast two different items with different settings at the same time.

Specialty Functions

- **Bagel Function:** Press the Bagel button before lowering the lever. This function toasts the cut side of bagels and English muffins while gently warming the outside.
- **Defrost Function:** Press the Defrost button before lowering the lever for frozen bread, waffles, or pastries. This adds extra time to the cycle to ensure consistent toasting from frozen.
- **Reheat Function:** Press the Reheat button to warm previously toasted bread without further browning.
- **Cancel Function:** Press at any time during a toasting cycle to stop immediately.

When a specialty function is selected, its corresponding indicator light may illuminate (if present).

Compatible Foods

- Sliced bread (white, wheat, rye, etc.)
- Bagel halves
- English muffin halves
- Frozen waffles and pancakes
- Thicker artisan bread slices (fits in 1.5" slots)

DO NOT TOAST: Oily foods (buttered bread), watery foods, pastries with loose fillings, or any food wrapped in packaging.

Cleaning and Maintenance

1. **Always unplug the toaster and allow it to cool completely before cleaning.**
2. **Exterior:** Wipe with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
3. **Crumb Trays:**
 1. Pull the crumb trays straight out from the back of the toaster.
 2. Empty crumbs into the trash.
 3. Wash trays in warm, soapy water, rinse, and dry thoroughly.
 4. Slide the trays back into place.

4. **Interior:** Turn the toaster upside down over a trash bin and gently shake to dislodge any loose crumbs. Do not use utensils to scrape the inside.
5. **Cord Storage:** Wrap the power cord around the base storage wrap to keep your counter tidy.

Troubleshooting

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in. Outlet has no power.	Ensure the plug is firmly inserted into a working outlet.
Lever will not stay down.	Toaster is not plugged in. Crumb tray is not fully inserted.	Plug in the toaster. Ensure the crumb tray is correctly seated.
Toast is too light or too dark.	Browning setting is incorrect.	Adjust the browning control dial. Lower numbers for lighter toast, higher numbers for darker.
Food is stuck.	Food item was too small or improperly placed.	Unplug the toaster and let it cool completely. Use the high-lift lever to raise the item. Never use metal utensils.
Smoke or unusual odor.	Buildup of crumbs. Toasting oily or sugary foods.	Unplug the toaster, let it cool, and clean the crumb trays. Do not toast prohibited foods.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.