

This manual provides instructions for the safe and effective use of the NEXPOW Portable Handheld Cordless Vacuum Cleaner.

Overview

The NEXPOW Car Vacuum is a compact, cordless, and rechargeable handheld vacuum cleaner designed for quick cleanups in cars, homes, and offices. It features a 7000PA suction motor, a 7500mAh battery, and includes multiple attachments for various cleaning tasks.



Key Components:

- Main vacuum unit
 - Flat nozzle attachment
 - Brush nozzle attachment
 - Extended hose nozzle attachment
 - Safety hammer (integrated or included)
 - Charging cable
 - Storage bag
-

Features and Specifications

Physical Specifications

- **Brand:** NEXPOW
- **Model Number:** HK6050 / Series 6050
- **Color:** White
- **Weight:** 1.58 lbs (0.72 kg)
- **Dust Cup Capacity:** 0.1 Liters (100 ml)
- **Form Factor:** Handheld
- **Special Features:** Compact, Lightweight, Portable



Power and Performance

- **Power Source:** Rechargeable Battery (Cordless)
- **Battery Capacity:** 7500 mAh
- **Suction Power:** 7000 PA
- **Voltage:** 12V

- **Wattage:** 50 watts
- **Noise Level:** Approximately 70 dB

Battery and Runtime

- **Charge Time:** Approximately 4 hours for a full charge.
- **Runtime:** Up to 18-20 minutes of continuous use on a full charge.
- **Charging Method:** Use the provided charging cable with a 5V/2A wall adapter. Charging via a computer USB port is not recommended as it may not provide sufficient power.

Attachments and Accessories

The vacuum includes four main tools:

- **Flat Nozzle:** For cleaning narrow gaps, corners, and crevices.
- **Brush Nozzle:** Designed to tackle pet hair, lint on carpets, sofas, and dust on keyboards.
- **Extended Hose Nozzle:** Provides flexibility to reach under seats, desks, and other desired spots.
- **Safety Hammer:** A multi-purpose tool included for emergency situations (e.g., breaking glass).

Included in the Box: Brush (as part of the brush nozzle assembly), charging cable, and storage bag.

Use Guide

Initial Setup and Charging

1. Unpack all components from the box.
2. Before first use, fully charge the vacuum. Connect the provided charging cable to the vacuum's charging port and plug the other end into a 5V/2A wall adapter. A full charge takes approximately 4 hours.
3. Do not use the vacuum while it is charging.

Operating the Vacuum

1. **Power On/Off:** Press and hold the power button for more than 2 seconds to turn the vacuum on. Press the button again to turn it off.
2. **Attaching Nozzles:** Align the desired nozzle (flat, brush, or extended hose) with the vacuum's intake and push firmly until it clicks into place.
3. **Vacuuming:** Guide the nozzle over the surface to be cleaned. The transparent dust cup allows you to see the debris collection.

4. The vacuum is designed for small particles like dust, crumbs, pet hair, and cat litter. It is not intended for large debris or liquids.

3 in 1 Multifunctional Accessories + Safety Hammer



Emptying the Dust Cup and Cleaning the Filter

1. Turn off and disconnect the vacuum from the charger.
2. Twist the transparent dust cup cover counterclockwise to unlock it.
3. Remove the cover and the internal cartridge filter.
4. Empty the collected debris from the dust cup into a trash bin.
5. Tap the filter gently to remove fine dust. The filter is washable; rinse with water and allow it to dry completely before reassembly.
6. Reinsert the dry filter and twist the cover back on clockwise until secure.

Note: Regularly empty the dust cup and clean the filter to maintain optimal suction power.

Storage and Portability

- After use and cleaning, store the vacuum and its attachments in the provided storage bag.

- Due to its compact size and light weight (1.58 lbs), it can be easily carried in a car, backpack, or stored in a drawer.
 - For long-term storage, ensure the battery is partially charged (around 50%).
-

Troubleshooting

- **Vacuum will not power on:**
 - Ensure the battery is charged. Use a 5V/2A wall adapter, not a computer USB port.
 - Press and hold the power button for more than 2 seconds.
 - **Weak suction:**
 - Check that the dust cup is not full and empty it if necessary.
 - Check that the filter or suction nozzle is not clogged. Clean the filter.
 - Ensure the battery is fully charged.
 - The vacuum is designed for small particles, not large objects.
 - **Vacuum turns off suddenly during use:**
 - The battery is likely low. Recharge the vacuum.
 - **Battery not charging:**
 - Verify you are using the correct 5V/2A power adapter and cable.
 - Ensure the charging port and cable are clean and securely connected.
-

Safety and Maintenance

Safety Instructions

- Read all instructions before use.
- This appliance is for indoor, household use only. Not for outdoor use.
- Do not use to pick up flammable or combustible liquids, burning materials, or hot ashes.
- Do not immerse the main vacuum unit in water or any other liquid.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only the attachments provided by the manufacturer.
- The included safety hammer is for emergency use only.
- Unplug the charger from the outlet when not in use and before cleaning or maintenance.

Maintenance

- Clean the dust cup and filter after each use or when full to maintain performance.
 - Wipe the exterior of the vacuum with a dry or slightly damp cloth. Do not use abrasive cleaners.
 - Store in a cool, dry place.
 - Do not attempt to disassemble or repair the vacuum yourself, except for routine cleaning of the dust cup and filter.
-

Product Information and Compliance

- **ASIN:** B0C28LV66N
- **Filter Type:** Cartridge
- **Surface Recommendation:** Carpets, Floors, Upholstery
- **Controller Type:** Push Button / Touch Control
- **Indoor Usage Only**

This product may be covered by a manufacturer's warranty. For specific warranty details and support, please contact the seller or NEXPOW store on Amazon.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.