

Overview

The Elite Gourmet ESM2207SS is a compact, stainless steel sandwich and panini maker. It is designed to prepare a variety of hot, pressed foods including grilled cheese sandwiches, paninis, tuna melts, omelets, and French toast. The unit features a dual non-stick cooking surface, indicator lights, a cool-touch handle, and a locking latch for safety and storage.



Features & Specifications

Physical Specifications

- **Brand:** Elite Gourmet
- **Model/ASIN:** ESM2207SS / B0C54H24LF
- **Color/Material:** Stainless Steel
- **Dimensions (D x W x H):** 9" x 3" x 9.5"
- **Item Weight:** 3 Pounds
- **Style:** Old Version

Electrical Specifications

- **Wattage:** 750 Watts
- **Voltage:** 230 Volts

Key Features

- **Dual Non-Stick Cooking Plates:** For easy food release and cleaning.
- **Indicator Lights:** Power and Ready lights.
- **Cool-Touch Handle:** Remains safe to touch during use.
- **Locking Latch:** Secures the unit for safe storage and transport.
- **Compact, Upright Design:** Saves counter and cabinet space.





Use Guide

Before First Use

1. Unpack the unit and remove all packaging materials.
2. Wipe the exterior with a damp cloth. Do not immerse the unit in water.
3. Wipe the non-stick cooking plates with a damp cloth to remove any manufacturing residues.
4. Plug the unit into a standard 230V electrical outlet. Ensure the power cord is not touching hot surfaces.

Operating Instructions

1. **Preheating:** Close the lid and plug in the unit. The **Power** indicator light will illuminate. Allow the unit to preheat for approximately 3-5 minutes, or until the **Ready** indicator light turns on.
2. **Preparing Food:** Open the lid using the cool-touch handle. Place your sandwich or other food onto the bottom cooking plate. Do not overfill.

3. **Cooking:** Gently close the lid. The cooking process will begin immediately. Cooking time is typically 3-5 minutes, depending on the type and thickness of the food and desired crispness.
4. **Completion:** When cooking is complete, open the lid and carefully remove the food using a heat-resistant nylon or silicone utensil to avoid scratching the non-stick surface.
5. **Power Off:** Unplug the unit after use and allow it to cool completely before cleaning or storing.

Useful **FEATURES**

Upright Design

For easy, space saving storage

Non-skid Feet

For stability & safe use

Cord Wrap

For a mess free counter





Food Suggestions

The appliance is suitable for:

- Grilled Cheese Sandwiches
- Paninis (Pressed Sandwiches)
- Tuna Melts
- Omelets
- French Toast
- Desserts (e.g., pressed pastries)

Cleaning & Maintenance

1. **Safety First:** Always unplug the unit and allow it to cool completely before cleaning.
2. **Cleaning the Plates:** Wipe the non-stick cooking plates clean with a soft, damp cloth or sponge. Do not use abrasive cleaners, scouring pads, or metal utensils, as they can damage the non-stick coating.

3. **Cleaning the Exterior:** Wipe the stainless steel exterior and handle with a damp cloth. Dry thoroughly.
4. **Storage:** Once clean and dry, secure the locking latch and store the unit upright in a cabinet or on the counter.



Safety Information

Important Safety Instructions

- Read all instructions before using the appliance.
- This appliance is for household use only. Do not use outdoors.
- Do not immerse the unit, cord, or plug in water or any other liquid.
- To protect against electric shock, do not place the cord, plug, or appliance in or near water.
- Unplug the appliance from the outlet when not in use and before cleaning.
- The exterior surfaces may become hot during use. Use the cool-touch handle. Keep hands and face away from steam vents.

- Do not leave the appliance unattended while it is plugged in and operating.
- Do not use the appliance for any purpose other than its intended use.
- This appliance has a polarized plug (one blade is wider than the other). If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

Troubleshooting

Problem	Possible Cause	Solution
Unit does not heat up.	Not plugged in. Power outlet not working.	Ensure the plug is firmly inserted into a working 230V outlet.
Power light is on, but Ready light never illuminates.	Insufficient preheat time. Unit may be defective.	Allow 5-7 minutes to preheat. If the light still does not come on, the unit may require service.
Food is sticking to the plates.	Plates not properly cleaned. Non-stick coating damaged. Insufficient preheating.	Ensure plates are clean, undamaged, and the unit is fully preheated before adding food. Use a small amount of butter or cooking spray if needed.
Sandwich is not sealed or pressed.	Unit was overfilled. Lid was not closed completely.	Do not overfill. Close the lid gently but firmly.
Smoke or unusual odor during first use.	Manufacturing oils burning off.	This is normal during initial use. Ensure the room is well-ventilated. It should dissipate after a few minutes.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.