

## Overview

The PRUNUS J-999 is a portable, retro-style wireless speaker. It supports audio playback via Bluetooth 5.0, TF card, USB drive, and AUX input. It also includes an FM radio function. The speaker features a vintage design with a PU carry handle.



## Features

### Audio Playback & Connectivity

- **Bluetooth 5.0:** For wireless connection to smartphones, tablets, and other Bluetooth-enabled devices.
- **TF Card Slot:** Play music files directly from a microSD (TF) card.
- **USB Port:** Play music files from a USB flash drive.
- **AUX Input:** Connect audio devices using a 3.5mm audio cable (included). This cable also acts as the antenna for FM radio.
- **FM Radio:** Tune into FM stations (87-108MHz). Requires the AUX cable to be connected to function as an antenna.

### Design & Controls

- **Retro Design:** Vintage-style cabinet with a large, numbered volume knob (scale 1-100).
- **Portable:** Compact size (2.2"W x 3.9"D x 2.7"H) with an integrated PU leather handle.
- **Control Buttons:** Includes buttons for power, mode selection, play/pause, track navigation, and hands-free call answering.

### Sound & Power

- **3W Output:** Powered speaker with a bass diaphragm.
- **Rechargeable Battery:** Provides up to 7 hours of playback at 50% volume on a single charge.
- **Hands-Free Calling:** Built-in microphone for answering calls via the speaker.

## What's in the Box

- PRUNUS J-999 Retro Speaker
- Owner's Manual
- AUX Cable (also functions as FM antenna)
- Charging Cable (USB to Micro-USB)

## Use Guide

### Charging the Speaker

1. Connect the provided Micro-USB charging cable to the charging port on the speaker.

2. Connect the other end of the cable to a USB power adapter (not included) or a computer USB port.
3. The speaker can be used while charging.
4. A full charge takes approximately 3 hours.

## **Powering On/Off**

Press and hold the Power button for 2-3 seconds to turn the speaker on or off.

## **Bluetooth Mode**

1. Turn on the speaker. It will enter Bluetooth pairing mode automatically, indicated by a blinking light or audio prompt.
2. On your Bluetooth device (e.g., phone), enable Bluetooth and search for available devices.
3. Select "**J-999**" from the list to pair. A confirmation sound indicates a successful connection.
4. Use the Play/Pause and Track (Next/Previous) buttons on the speaker to control playback.

## **TF Card / USB Mode**

1. Insert a TF card (microSD) loaded with MP3 files into the TF card slot, or insert a USB drive with MP3 files into the USB port.
2. Press the Mode button until the speaker switches to the corresponding source (TF or USB).
3. Playback will start automatically. Use the speaker's buttons to control playback.

## **AUX Mode**

1. Connect one end of the included AUX cable to the speaker's AUX input port.
2. Connect the other end to the headphone jack of your audio device (e.g., MP3 player, laptop).
3. Press the Mode button to select AUX input.
4. Control playback and volume from your connected audio device.

## **FM Radio Mode**

1. **Important:** Connect the included AUX cable to the speaker's AUX input port. The cable acts as the FM antenna and must be connected for the radio to function.
2. Press the Mode button to select FM radio mode.

3. Press the Next/Previous buttons to automatically search for and save available FM stations.
4. Press and hold the Next/Previous buttons for manual tuning.

## Answering Calls

When a call comes in while the speaker is connected via Bluetooth:

- Press the Play/Pause button once to answer the call.
- Press the Play/Pause button again to end the call.

## Specifications

- **Model:** J-999
- **Brand:** PRUNUS
- **Output Power:** 3W
- **Frequency Response:** 50Hz
- **Bluetooth Version:** 5.0
- **Battery Life:** Up to 7 hours (at 50% volume)
- **Charging Time:** ~3 hours
- **FM Range:** 87MHz - 108MHz
- **Dimensions:** 2.2" W x 3.9" D x 2.7" H
- **Weight:** 0.44 lbs (7.04 oz)
- **Color Options:** Black, Blue, Green, Pink, Purple, Red, Yellow
- **Water Resistance:** Not waterproof.

## Troubleshooting

- **No Power:** Ensure the battery is charged. Connect to a power source using the charging cable.
- **Bluetooth Won't Connect:** Ensure the speaker is in pairing mode (blinking light). Turn Bluetooth off and on on your device. Move devices closer together.
- **No Sound from AUX/TF/USB:** Check that the correct mode is selected. Ensure the AUX cable is fully inserted, or the TF/USB drive contains compatible MP3 files and is properly inserted.
- **FM Radio Has Poor Reception/No Sound:** Ensure the AUX cable is fully connected to the AUX port, as it is required as the antenna. Fully extend the cable and reposition the speaker.

- **Short Battery Life:** Battery performance decreases over time. Ensure you are using the provided or a certified charging cable.

### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.