

Overview

The INALSA Powersteam 2400 is a 2400-watt steam iron designed for efficient wrinkle removal on a variety of fabrics. It features a ceramic-coated soleplate, a powerful steam burst function, vertical steaming capability, and an auto-clean system.



Model: Powersteam 2400

Color: Blue

What's in the Box

- 1 x Steam Iron

- 1 x Water Pouring Cup
- 1 x Instruction Manual & Warranty Card

Product Features

Power and Performance

- **2400-Watt Power:** Provides high heat output for effective wrinkle removal from stubborn fabrics.
- **150 g/min Steam Shot:** Delivers a powerful burst of steam to penetrate heavy materials.
- **Continuous Steam:** Maintains consistent steam output for efficient ironing.

Soleplate

- **Ceramic Coated Soleplate:** Heats up quickly and glides smoothly across fabrics. The coating is scratch-resistant, durable, and easy to clean.

Steam Functions

- **Vertical Steam Surge:** Allows you to steam garments hanging on a hanger or drapes vertically.
- **Steam Control:** Adjustable settings for different fabric types.

Convenience & Maintenance

- **Auto Clean Function:** Flushes out mineral deposits from the steam chamber to maintain performance.
- **Anti-Calc & Anti-Drip Function:** Helps prevent limescale buildup and water leakage at low temperatures.
- **Large 530 ml Water Tank:** Reduces the frequency of refills during extended ironing sessions.
- **Temperature Control Dial:** Allows selection of the appropriate heat setting for various fabrics (e.g., silk, wool, cotton, linen).

Safety Information

Important Safety and Caution Information:

- Do not fill the water tank completely. Leave some gap to allow for steam expansion.
- Wait for the iron to heat up sufficiently before using the steam function for effective results.
- To prevent water leakage, always keep the iron in a horizontal position when not in use.

- Steam irons undergo testing during manufacturing. You may find some residual water droplets inside the water tank upon first use; this is normal.
- Always unplug the iron before filling with water or cleaning.
- Use only clean, tap water. Do not use chemically descaled, perfumed, or distilled water unless specified.
- Keep the iron and its cord out of reach of children.
- Do not leave the iron unattended while it is plugged in or resting on the ironing board.

Use Guide

Before First Use

1. Remove all packaging materials and stickers from the soleplate and body.
2. Fill the water tank using the provided cup. Do not exceed the maximum fill line.
3. Plug the iron into a standard 240V, 50Hz electrical outlet.
4. Set the temperature control dial to the maximum setting and allow the iron to heat up for 2-3 minutes in a horizontal position. You may notice a slight smell or smoke initially; this is normal for a new appliance.
5. Iron an old piece of cloth to clean the soleplate.

Filling the Water Tank

1. Unplug the iron and set it upright on its heel rest.
2. Open the water inlet cap.
3. Use the provided cup to pour water into the tank. Do not overfill.
4. Close the cap securely.

Setting the Temperature

Turn the temperature control dial to match the fabric you are ironing:

- • **(Low)**: Synthetic fabrics (Nylon, Acrylic, Polyester)
- • • **(Medium)**: Silk, Wool
- • • • **(High)**: Cotton, Linen

Always check the garment's care label first.

Using the Steam Functions

Continuous Steam: Ensure the iron is hot enough (usually medium to high settings). Press and hold the steam button (if present) or the steam will activate automatically at the correct temperature.

Steam Burst (Shot): Press the steam burst button for an intense shot of steam to tackle tough wrinkles. This function also works when holding the iron vertically.

Vertical Steaming: Hang the garment. Hold the iron vertically, a short distance from the fabric, and press the steam burst button.

Auto-Clean Function

To prevent clogging from mineral deposits, use the auto-clean function regularly, especially in hard water areas.

1. Fill the water tank to half with clean tap water.
2. Plug in the iron and set the temperature to maximum.
3. Hold the iron over a sink or basin.
4. Once the iron is hot, unplug it. Press and hold the auto-clean button (if dedicated) or follow the specific manual instructions to activate the cleaning cycle. Steam and hot water will flush out through the soleplate.
5. Repeat with clean water if necessary. Let the iron cool completely before storing.

Care and Maintenance

- Always empty the water tank after use and store the iron horizontally in a dry place.
- Wipe the soleplate and outer body with a soft, damp cloth when cool. Do not use abrasive cleaners.
- To remove starch or other residue from the soleplate, use a non-abrasive cleaning paste on a cool soleplate, then wipe clean.
- Never immerse the iron in water or any other liquid.
- Regularly use the auto-clean function as described to maintain optimal steam performance.

Technical Specifications

Brand	Inalsa
Model Number	Powersteam 2400
Wattage	2400 Watts
Voltage	240 Volts
Frequency	50 Hz
Steam Shot	150 g/min
Water Tank Capacity	530 ml
Soleplate Material	Ceramic Coated
Product Dimensions (L x W)	30.4 x 12.6 cm
Item Weight	1200 grams
Special Features	Temperature Control, Self Clean, Anti-Calc, Anti-Drip, Vertical Steam



Troubleshooting

Problem	Possible Cause	Solution
Iron does not heat up	Not plugged in. Faulty outlet.	Check plug and power outlet. Try a different outlet.
Little or no steam	Temperature too low. Water tank empty. Steam vents clogged.	Increase temperature. Fill water tank. Use the auto-clean function.
Water leaks from soleplate	Iron used at too low a temperature. Tank overfilled.	Increase temperature setting for steam use. Do not overfill the tank.
Brown stains on soleplate or fabric	Mineral deposits or burnt starch.	Clean soleplate with a non-abrasive paste when cool. Use auto-clean function regularly.
Iron sticks to fabric	Soleplate is dirty. Temperature too high for fabric.	Clean the soleplate. Lower the temperature setting.

Warranty and Support

This product is covered by a **2-year warranty** from the brand INALSA, valid from the date of purchase.

Manufacturer / Importer / Packer Contact Information:

Tuareg Marketing Pvt. Ltd.

Khasra No- 1189, Bhalswa, New Delhi-110033, IND.

Contact: 9773982065

Please retain your purchase invoice and warranty card. For service under warranty, contact the manufacturer or the retailer from whom you purchased the product.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.