

Overview

The CHIFENCHY PulseSound is a compact, portable Bluetooth speaker designed for indoor and outdoor use. It features IPX5 water resistance, dynamic beat-syncing LED lights, and up to 15 hours of playtime. The speaker supports Bluetooth 5.3 for stable wireless connections and TWS (True Wireless Stereo) pairing to link two speakers for a wider stereo soundstage.



Key Specifications

Specification	Details
Brand	CHIFENCHY
Model Name	PulseSound
Speaker Type	Portable Bluetooth Speaker
Connectivity	Bluetooth 5.3, Auxiliary (3.5mm)
Audio Output Mode	Mono (single speaker) / Stereo (TWS pair)
Maximum Output Power	15W continuous (20W peak)
Water Resistance	IPX5 (water-resistant, sand-resistant)
Battery Life	Up to 15 hours
Battery Capacity	2500 mAh
Bluetooth Range	Up to 100 ft (30 m)
Dimensions (D x W x H)	2.99 x 2.99 x 4.25 inches (7.6 x 7.6 x 10.8 cm)
Weight	0.58 lbs (264 g)
Color Options	Black, Blue, Camo, Gradient Purple, Mandarin Orange, Orange, Pink, Purple, Red, Teal, White, Yellow

What's in the Box

- PulseSound Speaker x1
- Type-C Charging Cable x1
- Lanyard (detachable) x1
- User Manual x1

Features


1. Powerful HD Sound

The speaker delivers 15W continuous (20W peak) audio with a dynamic driver. It provides clear highs and punchy bass suitable for indoor relaxation or outdoor gatherings.



2. IPX5 Waterproof & Sand-Resistant

Rated IPX5, the speaker can withstand water splashes, rain, and ocean mist. It is also sand-resistant – simply rinse it off after beach use. Suitable for poolside, shower, and outdoor adventures.

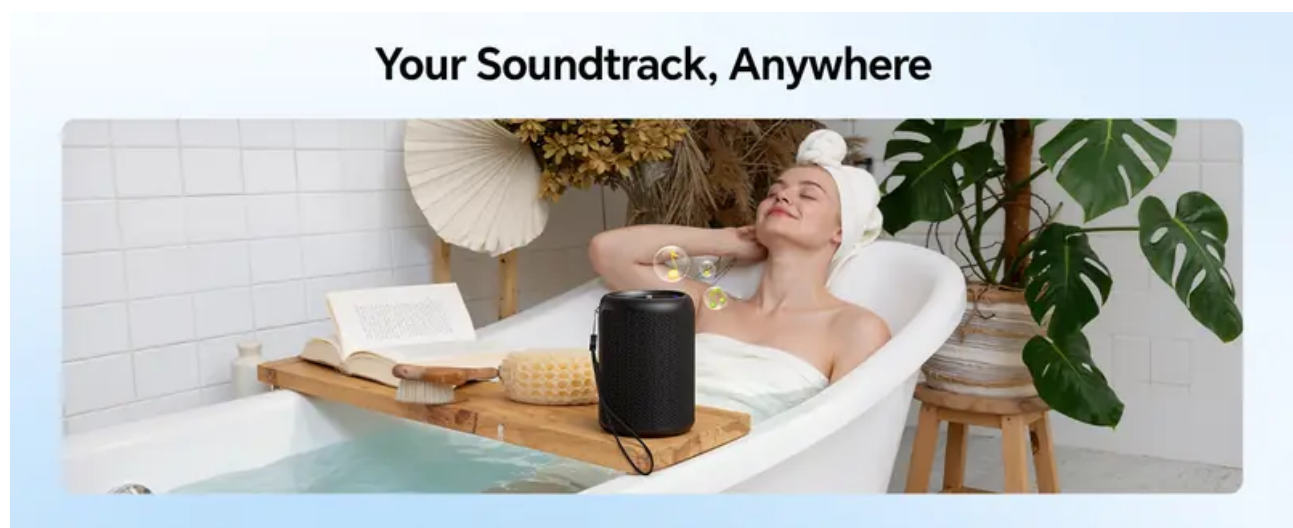

3. Dynamic LED Light Show

Built-in LED lights pulse and change colors in sync with the music. The lights add a visual element to any setting, from beach bonfires to bedroom parties.

Dynamic Light Show

Choose from 3 lighting effects to customise your mood.



Colorful
Blinking



Solid Color
Breathing



Solid Color
Always On



4. Bluetooth 5.3 & TWS Pairing

Bluetooth 5.3 provides a stable, instant connection up to 100 feet. TWS (True Wireless Stereo) allows you to pair two PulseSound speakers for a left-right stereo experience (30W combined).

Widely Compatible

With Bluetooth 5.3, it's compatible with all devices, ensuring seamless audio enjoyment anytime, anywhere



Phone



MP3



Pad



Projector



5. Long Battery Life – 15 Hours

The built-in 2500 mAh battery provides up to 15 hours of playback on a full charge, depending on volume level and light usage.



15 Hours of Non-Stop Play

Enjoy extended listening sessions without interruption. One charge keeps the music going all day and into the night.

6. Ultra-Compact & Lightweight

Measuring only 2.99 inches wide and 4.25 inches tall, and weighing just 0.58 lbs, the speaker fits easily in a bag, backpack, or cup holder. A built-in lanyard allows hanging from a hook, umbrella, or bike.



On-the-Go Convenience

Take your music anywhere with the built-in lanyard. Simply attach to your bag, bike, or wrist for effortless portability.

7. Built-in Microphone

The speaker includes a built-in microphone for hands-free calling. Use it to answer calls without disconnecting from your device.

8. Multiple Connectivity Options

In addition to Bluetooth, the speaker supports an auxiliary (3.5mm) input for non-Bluetooth devices.

Wireless & Wired Flexibility

Connect via Bluetooth 5.3, AUX, or TF card for seamless compatibility with all your devices.



Type-C



TF Card



AUX



Bluetooth



Product Diagram – Controls & Indicators



The speaker has a simple push-button interface. Refer to the following table for button functions:

Button / Element	Function
Power Button	Press and hold to turn on/off. Short press to play/pause music.
Volume + / Next Track	Short press to increase volume. Press and hold to skip to next track.
Volume – / Previous Track	Short press to decrease volume. Press and hold to go to previous track.
Bluetooth / Pairing Button	Press to enter pairing mode (flashing LED).
LED Light Button	Press to cycle through light modes or turn lights on/off.
Microphone	Built-in mic for hands-free calls.
Charging Port (Type-C)	Connect the included Type-C cable for charging.
Auxiliary Input (3.5mm)	Connect external audio sources via AUX cable.
LED Indicator	Shows Bluetooth pairing status and charging status (red when charging, off when full).

Use Guide

Charging the Speaker

1. Connect the included Type-C charging cable to the speaker's charging port.
2. Connect the other end to a USB power adapter (5V/1A recommended) or a computer USB port.
3. The LED indicator will glow red during charging and turn off when fully charged.
4. A full charge takes approximately 3-4 hours.

Powering On/Off

- **Power On:** Press and hold the Power button for 2-3 seconds. You will hear a startup tone, and the LED indicator will flash.
- **Power Off:** Press and hold the Power button for 2-3 seconds. You will hear a shutdown tone.

Bluetooth Pairing (First Time)

1. Ensure the speaker is powered on.

2. Press the Bluetooth/Pairing button. The LED indicator will flash rapidly (blue/red) to indicate pairing mode.
3. On your smartphone, tablet, or computer, enable Bluetooth and search for available devices.
4. Select "**PulseSound**" from the list. If prompted, enter the PIN **0000**.
5. Once connected, the LED indicator will stop flashing and remain solid (or slow blink). You will hear a confirmation tone.
6. The speaker will automatically reconnect to the last paired device when powered on.

Playing Music

- **Play/Pause:** Short press the Power button.
- **Volume Up:** Short press the Volume + button.
- **Volume Down:** Short press the Volume – button.
- **Next Track:** Press and hold the Volume + button.
- **Previous Track:** Press and hold the Volume – button.

Using the LED Light Show

- Short press the LED Light button to cycle through light modes (e.g., solid, pulse, beat-sync, off).
- The lights will automatically sync with the music rhythm in beat-sync mode.

Hands-Free Calling

- When a call comes in, short press the Power button to answer.
- Press and hold the Power button to reject a call.
- During a call, short press the Power button to hang up.
- The built-in microphone picks up your voice; speak clearly within a reasonable distance.

TWS Pairing (Two Speakers for Stereo Sound)

1. Power on both PulseSound speakers.
2. On one speaker, press and hold the Bluetooth/Pairing button for about 3 seconds until you hear a tone indicating TWS mode.
3. The two speakers will automatically pair with each other. One speaker will act as the left channel, the other as the right channel.
4. Now pair your phone/tablet to the primary speaker (the one you initiated TWS on).
5. To exit TWS mode, press and hold the Bluetooth/Pairing button on either speaker again.

Using the Auxiliary (AUX) Input

1. Connect a 3.5mm audio cable from your device (phone, laptop, etc.) to the AUX port on the speaker.
2. The speaker will automatically switch to AUX mode. Use your device to control playback.
3. Note: Bluetooth will be disconnected while using AUX.

Resetting the Speaker

If the speaker becomes unresponsive or has connectivity issues, you can reset it:

1. Turn off the speaker.
2. Press and hold the Power button and the Volume + button simultaneously for about 5 seconds.
3. The speaker will power on and enter pairing mode. All paired devices will be cleared.

Product Videos

Video: Product Showcase & Setup Guide

The video showcases the product in use, guides you through product setup, compares multiple products, and shows the product being unpacked.

Your browser does not support the video tag.

Note: The video is hosted on Amazon. Use the video player on the product page for full playback.

Video: Big Sound from Small Package

Witness the magic of amazing sound from PulseSound - it's music to your ears!

Video: Light up Your Groove – Dazzling Display

Get ready to groove with Andrea as she dances to the beats of PulseSound's rhythmic light show!

Video: Portable Fun with PulseSound

Discover how the compact size and convenient detachable lanyard make it the perfect companion for outdoor adventures.

Troubleshooting

Issue	Possible Cause	Solution
Speaker won't turn on	Battery depleted	Charge the speaker for at least 30 minutes, then try again.
No sound / low volume	Volume too low on speaker or source device	Increase volume on both the speaker and your phone/computer.
Bluetooth not connecting	Speaker not in pairing mode / device out of range	Ensure speaker is in pairing mode (flashing LED). Move device closer (within 30 ft). Forget device and re-pair.
Audio cuts out or skips	Interference or distance too far	Reduce distance between speaker and source. Avoid obstacles and other wireless devices.
LED lights not working	Light mode set to off	Press the LED Light button to cycle through modes.
Microphone not working during calls	Call not connected via speaker	Ensure the call is using the speaker's hands-free profile (check phone Bluetooth settings).
Speaker not charging	Faulty cable or adapter	Try a different Type-C cable and a 5V/1A adapter. Clean the charging port gently.

Safety & Care Instructions

- Do not expose the speaker to extreme temperatures (above 45°C / 113°F or below -10°C / 14°F).
- Although IPX5 rated, do not submerge the speaker in water. Rinse with fresh water after exposure to saltwater or sand.
- Do not use abrasive cleaners or solvents. Wipe with a soft, damp cloth.
- Do not disassemble the speaker. There are no user-serviceable parts inside.
- Keep away from open flames and heat sources.
- Charge only with a certified USB power adapter (5V/1A). Overcharging may reduce battery life.
- If the speaker emits smoke or unusual odors, stop using immediately and contact support.

Warranty & Support

The CHIFENCHY PulseSound speaker comes with a **6-month limited warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use.

For warranty claims or technical support, please contact the seller (CHIFENCHY) through Amazon's messaging system. You can find the "Ask a question" or "Contact seller" link on the product page.

Note: This user manual does not include direct phone or email support details. For the most current support information, refer to the product listing on Amazon.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.